
 


# FreeSpeak II Splitter

FreeSpeak II Wireless Solutions



Linking  
People  
Together



FreeSpeak II Splitter

## Key Features and Benefits

- Functions with FSII base, FreeSpeak Edge base, Arcadia Central Station, and E-IPA-HX cards
- Provides 5 FSII transceiver antenna feeds on 1 antenna port on FSII-BASE-II station or E-IPA-HX card
- SFP fiber slot for fiber link to FSII-BASE-II or for connecting FSII-BASE-II
- Supports both multi-mode and single-mode fiber
- Configure settings using DIP switches
- LED status indicator on front and back
- Mic stand or wall mount orientation (metric and imperial threads)

FreeSpeak II® is a high performance wireless solution operating in the 1.9 and 2.4 GHz frequency bands designed for extensive communication in large-scale operations.

## Description

The FSII-SPL is a splitter that connects multiple FreeSpeak II transceiver antennas to an Eclipse® HX matrix (via E-IPA-HX card) or a FreeSpeak II base station. The splitter provides up to five antenna feeds from one antenna port and has an SFP fiber slot for fiber connectivity.

## Fiber Connectivity

Using the SFP fiber slot, the FSII-SPL provides a fiber link between the FSII-BASE-II base station and splitter (base-to-splitter) or it can be used to connect on legacy FreeSpeak II base stations and the Eclipse HX frames over fiber via the E-QUE-HX interface card (splitter-to-splitter).

## Mounting Options

The splitter can be mounted on a flat surface or on a microphone stand. LED indicators are located on the front and back of the unit to show status in any mounted position. Requires an external power supply (included).

# FreeSpeak II Splitter

FreeSpeak II Wireless Solutions

## Technical Specifications

### Connections

**Transceiver Antenna:** 5 Ethercon RJ45, each with yellow LED indicators on front and back

**Matrix:** 1 Ethercon RJ45, with yellow LED indicator on front and back

**Fiber:** 1 SFP port

### Power

**Splitter:** Requires external power supply (included)

**Transceiver Antenna:** Provides power to antennas via RJ45 connections

### Mounting Options

Wall Mount with 4 mounting points

Mic Stand Mount (metric and imperial threads)

### Environmental

IP63 water resistance for outdoor use

+32° to +122°F

(0° to +50°C)

### Dimensions


1.7 x 8.8 x 7.7in (HxWxD)

(43.2 x 223.5 x 195.6mm)

### Weight

24.5oz (0.69kg)

## Front Panel

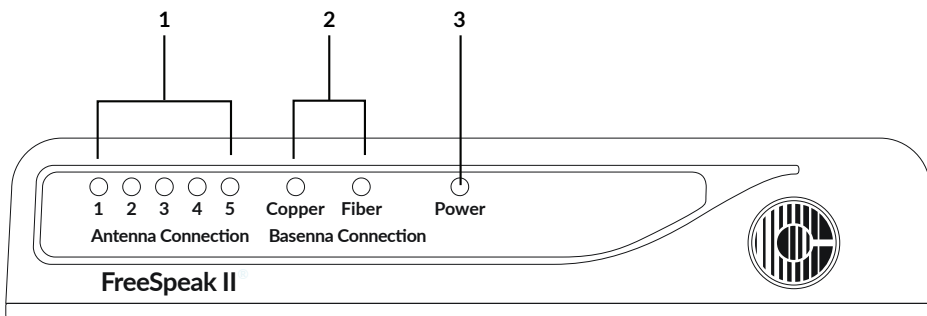

## Legend


### Front Panel

1. Antenna connection LED's
2. Connection type LED's (RJ-45/Fiber)
3. Power LED

### Back Panel

4. DC Power In
5. Fiber connector to Base/Splitter
6. RJ-45 connector to Base/Splitter
7. Antenna connectors

## Back Panel

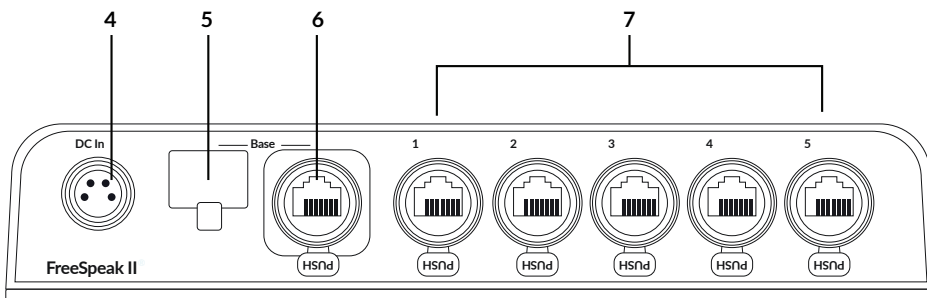

## Order Codes

**FSII-SPL:** FreeSpeak II Splitter

### Includes:

**HLI-MMFO:** Multi-mode fiber SFP transceiver

**HLI-SMFO:** Single-mode fiber SFP transceiver

### Optional Parts:

**RK-100:** 1RU Rack Mount for (1) FSII-SPL

Note: 4-40 x 0.2in screws for FSII-SPL are not included

**SFP-MMFO-100M-FX:** Multi-mode E1 SFP

**SFP-SMFO-100M-LX:** Single-mode E1 SFP

**HLI-MMFO:** Multi-mode E1 SFP - Legacy

**HLI-SMFO:** Single-mode E1 SFP - Legacy



[www.clearcom.com/  
freespeakii-knowledge-center/](http://www.clearcom.com/freespeakii-knowledge-center/)