


# 1 *FreeSpeak II® Base station menu 'at-a-glance' guide*

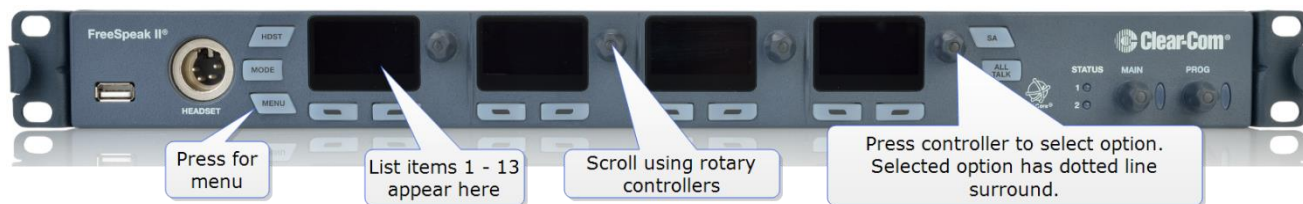

	List item	Description
1.	Audio Settings	Headset, Program input, Stage announce.
2.	Station settings	<ul style="list-style-type: none"> <li>• Program audio on Base station Keysets (1-4).</li> <li>• Base display options.</li> <li>• Make Base headset a Group Member (listen to group announcements)</li> </ul>
3.	Channels	Change Channel name (label).
4.	Groups	Change Group name (label).
5.	4-wire audio	Program audio for 4-wire (Ports 1-4).
6. & 7.	2-wire audio, A&B, C&D.	Program audio for 2-wire (Ports A&B, C&D).
8.	Key Assign	Select each beltpack (Role) and program/edit audio and settings on keys (A,B,C,D).
9.	Beltpacks	<ul style="list-style-type: none"> <li>• Change beltpack Role</li> <li>• Unregister beltpack,</li> <li>• Check beltpack software version,</li> <li>• Fix beltpack Role.</li> </ul>
10.	Roles	<ul style="list-style-type: none"> <li>• Create, clone and/or delete Roles.</li> <li>• Edit Role settings, change channel, alter volume, set menu access etc.</li> </ul>
11.	Antennas	<ul style="list-style-type: none"> <li>• Change antenna name (label).</li> <li>• Set cable compensation if required.</li> </ul>
12.	Networking	<ul style="list-style-type: none"> <li>• Station id (name),</li> <li>• DHCP or Static IP (See <b>Networking/IP Issues</b> for more information),</li> <li>• Station IP address.</li> </ul>
13.	Administration	<ul style="list-style-type: none"> <li>• Beltpacks: start over-the-air registration.</li> <li>• Software: View version and upgrade</li> <li>• License: View license and upgrade</li> <li>• Reset to default, save/restore system settings</li> <li>• Set menu access pin code</li> <li>• Set AA battery type</li> </ul>