

# User Guide

## Arcadia R4.1 Central Station User Guide



Part Number: PUB-00021 Revision J

March 20, 2026

## Document reference

---

Arcadia® Central Station User Guide

Part Number:PUB-00021 Revision J

Legal disclaimers

Copyright © 2026 HME Clear-Com Ltd

All rights reserved

Clear-Com and the Clear-Com logo are trademarks or registered trademarks of HM Electronics, Inc.

The software described in this document is furnished under a license agreement and may be used only in accordance with the terms of the agreement.

The product described in this document is distributed under licenses restricting its use, copying, distribution, and decompilation / reverse engineering. No part of this document may be reproduced in any form by any means without prior written authorization of Clear-Com, an HME Company.

Clear-Com Offices are located in California, USA; Cambridge, UK; Dubai, UAE; Montreal, Canada; and Beijing, China. Specific addresses and contact information can be found on Clear-Com's corporate website: [www.clearcom.com](http://www.clearcom.com)

## Clear-Com contacts

### Americas and Asia-Pacific Headquarters

California, United States

Tel: +1 510 337 6600

Email: [SalesSupportUS@clearcom.com](mailto:SalesSupportUS@clearcom.com)

### Europe, Middle East, and Africa Headquarters

Cambridge, United Kingdom

Tel: +44 1223 815000

Email: [SalesSupportEMEA@clearcom.com](mailto:SalesSupportEMEA@clearcom.com)

### China Office

Beijing Representative Office

Beijing, P.R. China

Tel: +8610 59000198/59002608

Email: [SalesSupportChina@Clearcom.com](mailto:SalesSupportChina@Clearcom.com)

## Table of contents

---

|   |           |
|---|-----------|
| <b>Table of contents</b> .....  | <b>3</b>  |
| <b>1 Introduction</b> .....   | <b>8</b>  |
| 1.1 Arcadia Central Station .....   | 9         |
| 1.2 Connections .....   | 15        |
| <b>2 System Examples</b> .....  | <b>16</b> |
| 2.1 Arcadia with Freespeak II Wireless - E1 .....                                   | 17        |
| 2.2 Arcadia with FreeSpeak II Wireless-E1 and Splitter .....                        | 19        |
| 2.3 Arcadia with FreeSpeak Edge IP Transceivers .....                               | 21        |
| 2.4 Split Frequency Setup (5, 2.4 and 1.9 GHz System) .....                         | 23        |
| 2.5 Arcadia as HelixNet System Host .....   | 24        |
| 2.6 Arcadia with FreeSpeak E1 and HelixNet .....                                    | 24        |
| 2.7 Arcadia with V-Series Panels (I.V. Port) .....                                  | 25        |
| 2.8 Arcadia using LQ as Interface Expansion (I.V. Direct) .....                     | 25        |
| <b>3 Installing Arcadia Central Station</b> .....                                   | <b>27</b> |
| 3.1 Front Panel Connectors, Controls and Indicators .....                           | 28        |
| 3.2 Front Panel Touchscreens .....  | 29        |
| 3.3 Rear Panel Connectors and Indicators .....                                      | 32        |
| 3.4 System Power .....  | 33        |
| 3.5 Stage Announce and Program Audio .....  | 34        |
| 3.6 Device Allocation .....   | 35        |
| <b>4 Configuring from the Front Panel</b> .....                                     | <b>37</b> |
| 4.1 Introduction to Configuring from the Front Panel .....                          | 38        |
| 4.2 Passwords, IP Addresses, Reset to Default, Save and Restore Configuration ..... | 38        |
| 4.3 Setting the Management IP Address .....   | 40        |
| 4.4 Front Panel Menus .....   | 42        |
| <b>5 Workflows</b> .....  | <b>48</b> |
| 5.1 Channels for Teams .....  | 48        |
| 5.2 Directs for Private Conversations .....   | 48        |
| 5.3 Groups for Announcements with a Private Talk Back .....                         | 49        |

|   |            |
|---|------------|
| 5.4 IFB for Interrupting/Ducking .....                    | 49         |
| 5.5 Roles .....   | 49         |
| 5.6 Logic .....   | 50         |
| 5.7 Interface Ports for using Generic Audio Devices ..... | 50         |
| <b>6 The Core Configuration Manager (CCM) .....</b>       | <b>51</b>  |
| 6.1 CCM Introduction .....                                | 52         |
| 6.2 Changing the CCM Password .....                       | 55         |
| 6.3 Setting the Management IP from the CCM .....          | 56         |
| 6.4 Saving and Restoring System Configuration .....       | 56         |
| 6.5 Resetting to Default .....                            | 57         |
| 6.6 Hardware Page Overview .....                          | 58         |
| 6.7 Host Page .....                                       | 58         |
| 6.8 Configuring the Network .....                         | 60         |
| 6.9 Upgrading .....                                       | 63         |
| 6.10 Setting Up the Wireless Beltpack System .....        | 65         |
| 6.11 Configuring Device Allocation .....                  | 68         |
| 6.12 Resources .....                                      | 69         |
| 6.13 Configuration Overview .....                         | 75         |
| 6.14 Channels and Groups .....                            | 76         |
| 6.15 Channels .....                                       | 78         |
| 6.16 Groups .....   | 84         |
| 6.17 IFB .....  | 90         |
| 6.18 Roles .....  | 94         |
| 6.19 Logic .....  | 105        |
| 6.20 Status Overview .....                                | 109        |
| <b>7 Using FreeSpeak Wireless Intercom .....</b>          | <b>120</b> |
| 7.1 Overview of Transceivers .....                        | 121        |
| 7.2 Connecting Transceivers Over E1 .....                 | 121        |
| 7.3 Adding IP Transceivers .....                          | 126        |
| 7.4 Network Setup for IP Transceivers .....               | 127        |
| 7.5 Registering FreeSpeak Beltpacks .....                 | 131        |

|   |            |
|---|------------|
| 7.6 FS Edge Transceivers .....                                  | 134        |
| <b>8 Using HelixNet Wired Partyline Intercom .....</b>          | <b>137</b> |
| 8.1 Introduction .....  | 138        |
| 8.2 HelixNet Connections - General Outline .....                | 139        |
| 8.3 Connecting HelixNet User Stations to the network .....      | 140        |
| 8.4 Connecting User Stations via Digital Powerline Device ..... | 140        |
| 8.5 Pairing HelixNet User Stations to Arcadia .....             | 141        |
| 8.6 Digital Powerline Device Statistics and Messages .....      | 144        |
| <b>9 Using V-Series Keypanels .....</b>                         | <b>146</b> |
| 9.1 Introduction .....  | 147        |
| 9.2 Panel connection methods .....                              | 147        |
| 9.3 Connecting Panels to the Network .....                      | 148        |
| 9.4 Panel roles .....   | 149        |
| 9.5 Panel menu controls .....                                   | 152        |
| 9.6 Connecting Keypanels via I.V. Ports .....                   | 154        |
| 9.7 Connecting Keypanels via AES67 Ports .....                  | 157        |
| 9.8 Using the Panel .....                                       | 159        |
| <b>10 Using I.V. Direct .....</b>                               | <b>161</b> |
| 10.1 What is I.V. Direct? .....                                 | 162        |
| 10.2 I.V. Direct Configuration Overview .....                   | 163        |
| 10.3 Connecting I.V. Direct on your Network .....               | 167        |
| 10.4 Configure I.V. Direct in the Arcadia CCM .....             | 168        |
| 10.5 Using GPIO with I.V. Direct .....                          | 172        |
| <b>11 Using Dante Systems .....</b>                             | <b>177</b> |
| <b>12 Using 2-Wire Systems .....</b>                            | <b>181</b> |
| 12.1 Introduction to 2-Wire Systems .....                       | 182        |
| 12.2 2-Wire Port Compatibility .....                            | 185        |
| <b>13 Using 4-Wire Systems .....</b>                            | <b>186</b> |
| 13.1 Connecting 4-Wire .....                                    | 187        |
| 13.2 Port Function (4-Wire Pinout) .....                        | 191        |
| 13.3 Connecting 4-Wire Clear-Com to Clear-Com .....             | 192        |

|  |            |
|--|------------|
| 13.4 Setting Port Function (Pinout) on a 4-Wire Connection .....     | 193        |
| <b>14 Upgrading Firmware .....</b>                                   | <b>194</b> |
| 14.1 Introduction .....  | 195        |
| 14.2 Upgrading using the CCM .....                                   | 195        |
| 14.3 Upgrading using a USB Stick .....                               | 195        |
| 14.4 Upgrading sub-systems .....                                     | 196        |
| <b>15 Licensing .....</b>  | <b>198</b> |
| 15.1 Licensed Ports .....  | 199        |
| 15.2 Online Activation of Additional Licenses (Recommended) .....    | 199        |
| 15.3 Offline Activation of Additional Licenses .....                 | 201        |
| <b>16 Security .....</b>   | <b>205</b> |
| 16.1 Warning .....   | 206        |
| 16.2 Secure HyperText Transfer Protocol (HTTPS) .....                | 206        |
| 16.3 Using HTTPS .....   | 206        |
| 16.4 The Force HTTPS Feature .....                                   | 206        |
| 16.5 Forcing HTTPS .....   | 207        |
| 16.6 Using Security Certificates .....                               | 209        |
| 16.7 EasyDNS update button (Arcadia 4.1 and up) .....                | 209        |
| <b>17 Appendix A: Pinouts .....</b>                                  | <b>210</b> |
| 17.1 GPIO pinouts .....  | 210        |
| 17.2 2-Wire Pinouts .....  | 212        |
| 17.3 4-Wire Pinouts .....  | 213        |
| 17.4 DECT Sync .....   | 213        |
| <b>18 Appendix B: Clear-Com Ethernet Cable Recommendations .....</b> | <b>214</b> |
| <b>19 Appendix C: Specifications .....</b>                           | <b>215</b> |
| 19.1 Arcadia Central Station .....                                   | 216        |
| 19.2 Capacity .....  | 220        |
| 19.3 Network Specifications .....                                    | 221        |
| <b>20 Appendix D: Spare Parts .....</b>                              | <b>223</b> |
| <b>21 Appendix E: Front Panel Menu Reference Tables .....</b>        | <b>224</b> |
| 21.1 Audio Settings .....  | 225        |

|  |            |
|--|------------|
| 21.2 Host Settings .....   | 225        |
| 21.3.2 W Audio (A/B) (C/D) .....   | 226        |
| 21.4 Discovery .....   | 226        |
| 21.5 Transceiver .....   | 226        |
| 21.6 Networking .....  | 227        |
| 21.7 Administration .....  | 228        |
| <b>22 Appendix F: Regulatory Compliance (Regulatory Model: 1410) .....</b> | <b>231</b> |
| 22.1 FCC Notice .....  | 231        |
| 22.2 Industry Canada Compliance Statement .....                            | 231        |
| 22.3 Korean Notice .....   | 232        |
| 22.4 European Union (CE mark) .....  | 233        |
| 22.5 United Kingdom (UKCA Mark) .....                                      | 233        |
| 22.6 Electrical and Electronic Equipment (WEEE) Waste .....                | 234        |
| <b>23 Appendix G: Setting up a Cold Standby Unit .....</b>                 | <b>235</b> |

# 1 Introduction

---

This chapter provides an overview of the Arcadia Central Station. It contains the following sections:

|                                   |    |
|-----------------------------------|----|
| 1.1 Arcadia Central Station ..... | 9  |
| 1.2 Connections .....             | 15 |

---

## 1.1 Arcadia Central Station

The Arcadia® Central Station provides a scalable IP networked intercom system. It has a compact 1RU form and can be configured either from the browser-based Core Configuration Manager (CCM) or the front panel menu system. The Arcadia intercom system supports wireless, wired and keypanel user stations, in a variety of form factors, frequencies and connectivity types.

As an intercom user station, Arcadia provides 4 keysets with high resolution touch-screen control. Keysets are assignable to any channel, group, beltpack, program audio or stage announce. The user station has a headset connection, a gooseneck mic connector and a loudspeaker, in addition to All Call, Stage Announce and Remote Mic Kill buttons.

Arcadia interfaces with a variety of audio and intercom systems; Clear-Com's I.V. Direct, Dante, 4-wire line-level audio, 2-wire partyline connections to existing analog intercom systems. GPIO connections provide inputs and relay outputs for system control and interfacing, programmable in Arcadia's logic configurator ( navigate to: **CCM>Configuration>Logic**).

### 1.1.1 Features

- Combined intercom system using FreeSpeak wireless, HelixNet wired intercom and V-Series keypanel endpoints
- I.V. Direct for intercom expansion and system bridging locally or globally
- Dante network and analog audio interfacing
- 2-wire partyline intercom
- GPIO control and interfacing
- Plug-and-go with central discovery and pairing
- Intuitive CCM browser configuration
- Front panel touch screen intercom user station and configuration
- Scalable capacity licensing

## 1.1.2 Maximum System Capacity

### • Wireless intercom



IP transceivers up to **32**



E1 transceivers up to **10**



Beltpacks up to **64**  
(subject to licensed ports)

### • Wired intercom




HelixNet user stations up to **128**

### • V-Series keypanels



Up to **32**  
depending on  
Device Allocation

### • I.V. Directs

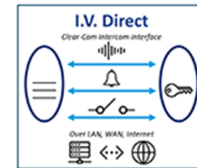

- **4-wire ports x 8** (Port 8 = program feed and stage announce)
- **2-wire ports x 4** (Clear-Com and RTS)
- **Dante ports up to 64** (subject to licensed ports)
- **I.V. Panel/Direct ports up to 32** (subject to licensed ports and Device Allocation)
- **AES67 keypanels up to 32** (subject to licensed ports)

### FreeSpeak wireless intercom

- 10 E1 transceivers (1.9, 2.4 GHz)
- 32 IP transceivers (1.9 GHz, 5 GHz)
- 64 beltpacks\* (1.9, 2.4, 5 GHz)

### HelixNet wired partyline intercom

- 0 - 24 HelixNet enabled channels\*
- 128 HelixNet user stations (beltpacks, remote station, speaker station)
- 24 HXII-DPL powerline devices

### V-Series keypanel

- 0 - 32 using I.V. ports \*
- 0 - 32 using AES67 \*
- 64 panels max. in total\*

### I.V. ports (used for I.V. Directs and Panels)

- Up to 32 I.V. ports (default = 16 ports)\*

### \* Subject to licensed port capacity

### AES67 ports (Panels)

- Up to 32 AES67 ports \*

### Dante audio network interfaces

- 64 Dante ports\*

### Hardwired ports

- 8 four-wire connections
  - Port 8 is dedicated to program feed and stage announce audio
- 4 two-wire connections
  - Clear-Com or RTS


### System limits

- Up to 100 channels and groups
- 200 roles

### 1.1.3 Licensed Ports – Scalable Port Capacity




1 wireless beltpack consumes 1 licensed port

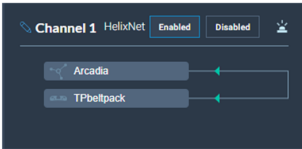

1 HelixNet enabled channel consumes 1 licensed port



1 V-Series keypanel consumes 1 licensed port (AES67 or I.V connection)

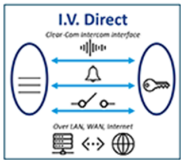

1 I.V. Direct consumes 1 licensed port



1 channel consumes 1 licensed port

How many licensed ports do I need? Use the *Arcadia Online Licensed Port Calculator* available from the [Arcadia Knowledge Center](#).

Arcadia is ordered from Clear-Com with Licensed Port capacity:

| Part number  | Licensed ports     |
|--|--------------------|
| ARCADIA-X4-16P   | 16 Licensed ports  |
| ARCADIA-X4-32P   | 32 Licensed ports  |
| ARCADIA-X4-48P   | 48 Licensed ports  |
| ARCADIA-X4-64P   | 64 Licensed ports  |
| ARCADIA-X4-80P   | 80 Licensed ports  |
| ARCADIA-X4-96P   | 96 Licensed ports  |
| ARCADIA-X4-112P  | 112 Licensed ports |
| ARCADIA-X4-128P  | 128 Licensed ports |
| ARCADIA-X4-144P  | 144 Licensed ports |
| ARCADIA-X4-160P  | 160 Licensed ports |
| ARCADIA-X4-168P  | 168 Licensed ports |
| ARCADIA-X5-176P  | 176 Licensed ports |
| ARCADIA-X5-192P  | 192 Licensed ports |
| ARCADIA-X5-200P  | 200 Licensed ports |
| <b>Note:</b> X5 models have a five-pin headset connector |                    |

Arcadia Licensed Port capacity can be upgraded in the field in increments of 8 or 16 ports available from Clear-Com.

### 1.1.4 More Information

For more information, refer to the [Arcadia Knowledge Center](#).



[www.clearcom.com/Download-Center/Knowledge-Centers/Arcadia-Knowledge-Center](http://www.clearcom.com/Download-Center/Knowledge-Centers/Arcadia-Knowledge-Center)

# 1.2 Connections

**Arcadia LAN Ports** (configurable)


**LAN 1:** Management, CCM, HelixNet, I.V. ports and panels

**LAN 2:** AES67 (with TCVRs and panels)

**LAN 3:** (fiber) Dante secondary

**LAN 4:** (fiber) Dante primary

**Note:** Dante primary can be combined with Management

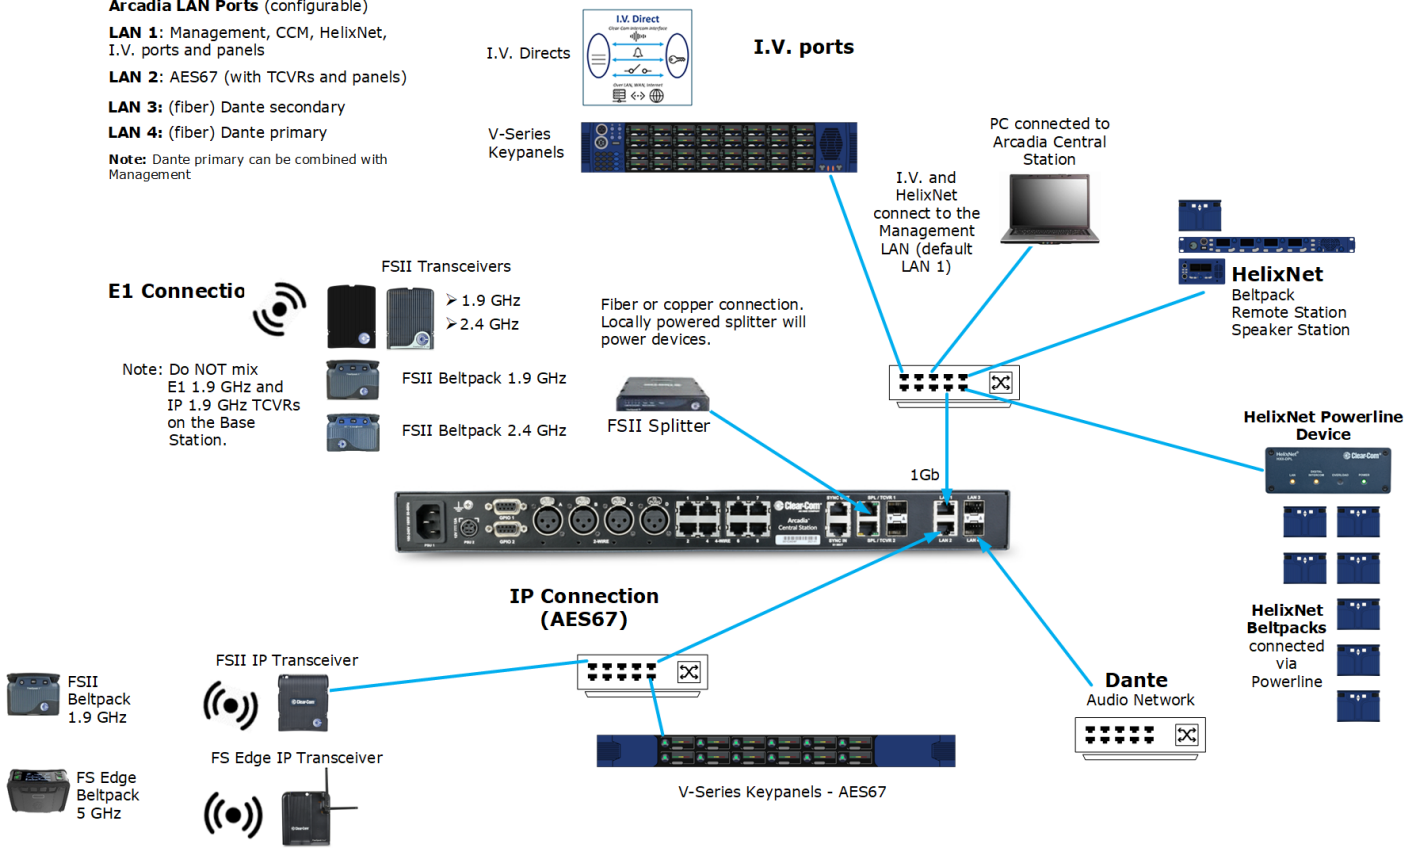

# 2 System Examples

---


This chapter contains examples of typical applications. It contains the following sections:

- 2.1 Arcadia with Freespeak II Wireless - E1 ..... 17
- 2.2 Arcadia with FreeSpeak II Wireless-E1 and Splitter ..... 19
- 2.3 Arcadia with FreeSpeak Edge IP Transceivers ..... 21
- 2.4 Split Frequency Setup (5, 2.4 and 1.9 GHz System) ..... 23
- 2.5 Arcadia as HelixNet System Host ..... 24
- 2.6 Arcadia with FreeSpeak E1 and HelixNet ..... 24
- 2.7 Arcadia with V-Series Panels (I.V. Port) ..... 25
- 2.8 Arcadia using LQ as Interface Expansion (I.V. Direct) ..... 25

---

## 2.1 Arcadia with Freespeak II Wireless - E1

The FreeSpeak II E1 transceivers use an E1 connection (telecommunications standard) directly to the Arcadia. The Core Configuration Manager (CCM) is the easiest way to configure your system, but this setup can be configured with minimal use of the CCM if you work with the default role setup. Using the default setup, all devices have talk and forced listen keys to Channel 1 and Channel 2 and can engage call signals to those channels.

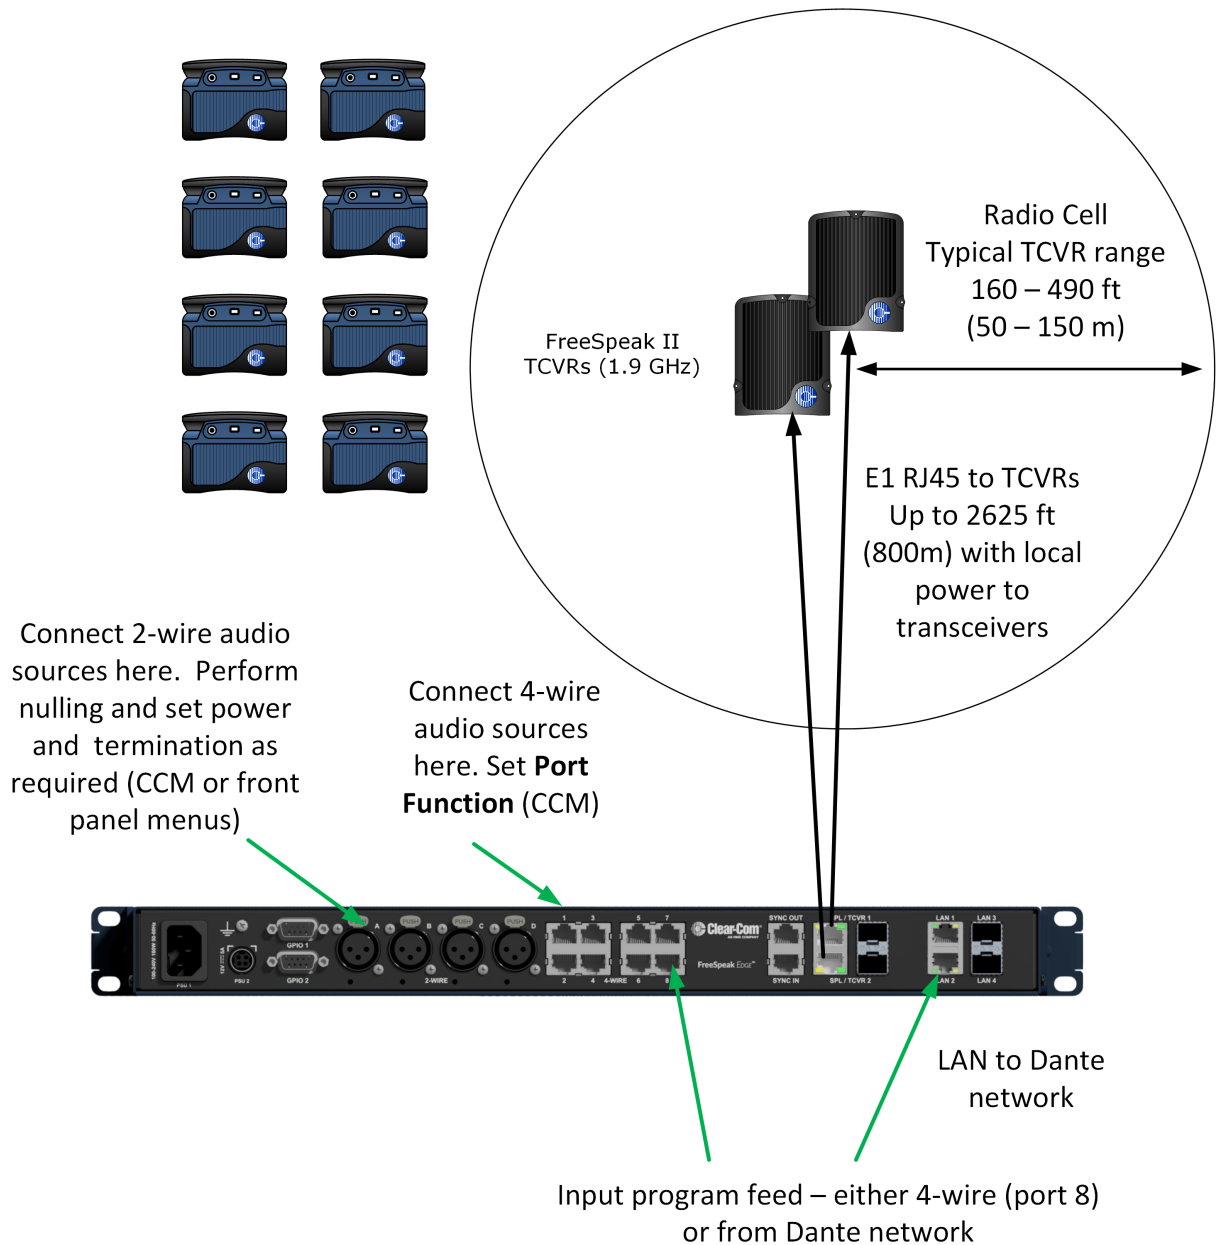


## 2.1.1 Outline of General Setup and Configuration

- For E1 setup, see [Connecting Transceivers Over E1 on page 121](#).
- To access the CCM, see: [The Core Configuration Manager \(CCM\) on page 51](#).
- To register beltpacks, see [Registering FreeSpeak Beltpacks on page 131](#).
- To set Port Function, see [Setting Port Function \(Pinout\) on a 4-Wire Connection on page 193](#).
- To perform null and set power, see [Using 2-Wire Systems on page 181](#).
- To connect Program Feed, see [Stage Announce and Program Audio on page 34](#)

## 2.2 Arcadia with FreeSpeak II Wireless-E1 and Splitter

This setup includes two splitters, both connected via shielded Cat 5e cable using E1 connectivity. Four channels are configured in the CCM: Channel 1=ALL, Channel 2=Lighting, Channel 3=Sound, Channel 4=FoH. 16 roles are configured for the beltpacks.

There are four connectors on the rear of the device for splitters. Two splitters can be connected using Cat 5e cable or Fiber or a combination of Cat 5e and Fiber.

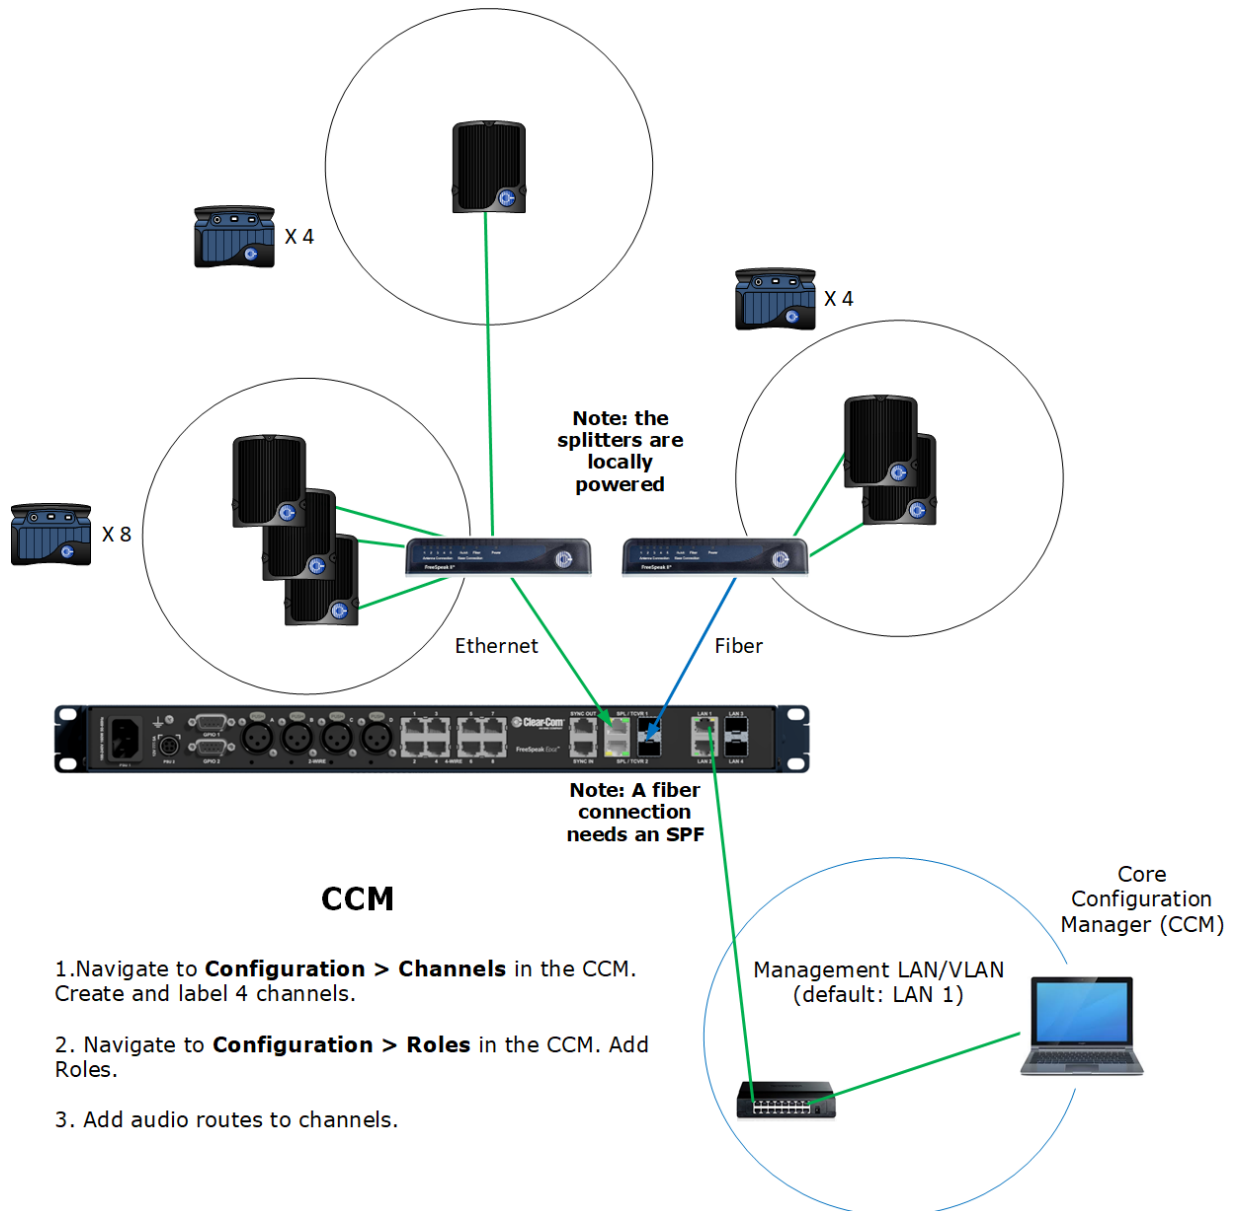

## 2.2.1 Outline of General Setup and Configuration

- For E1 setup, see [Connecting Transceivers Over E1 on page 121](#).
- To set the splitter DIP switches, see the FSII Splitter Quick Start Guide (FSII SPL-QSG) in the Clear-Com FreeSpeak II Knowledge Center on the Clear-Com website:  
[Clear-Com FreeSpeak II Knowledge Center](#)
- To access the CCM, see [The Core Configuration Manager \(CCM\) on page 51](#).
- To register beltacks, see [Registering FreeSpeak Beltacks on page 131](#).
- To set port settings for 2-Wire sources, see [Using 2-Wire Systems on page 181](#).
- To set port settings for 4-Wire sources, see [Using 4-Wire Systems on page 186](#).
- To connect program and stage announce, see [Stage Announce and Program Audio on page 34](#).
- To configure channels, see: [Managing Channels on page 78](#).
- To configure Roles, see: [Managing Roles on page 95](#).

## 2.3 Arcadia with FreeSpeak Edge IP Transceivers

This setup has a total of 6 FS Edge transceivers with 16 beltpacks. The transceivers are connected via a network that is configured for AES67 traffic. These are configured using the CCM. There are four 2-wire partylines and a Dante network.

**Note:** The Dante network must be on a different VLAN or network from the IP transceivers.

**Note:** The AES67 network must be set up correctly for the IP transceivers in order to meet the needs of Clear-Com IP transceivers for high levels of PTP accuracy.

See the *AoIP Network Recommendations* guide, available from the [Clear-Com FSII Knowledge Center](#).


FS Edge 5 GHz  
beltpacks x 16

Register at the  
Base or in the  
CCM



**Note:** This setup assumes a dedicated network switch for the Edge Base, transceivers and CCM.

**Note:** You cannot configure the IP transceiver network (AES67) and Dante to the same network port.

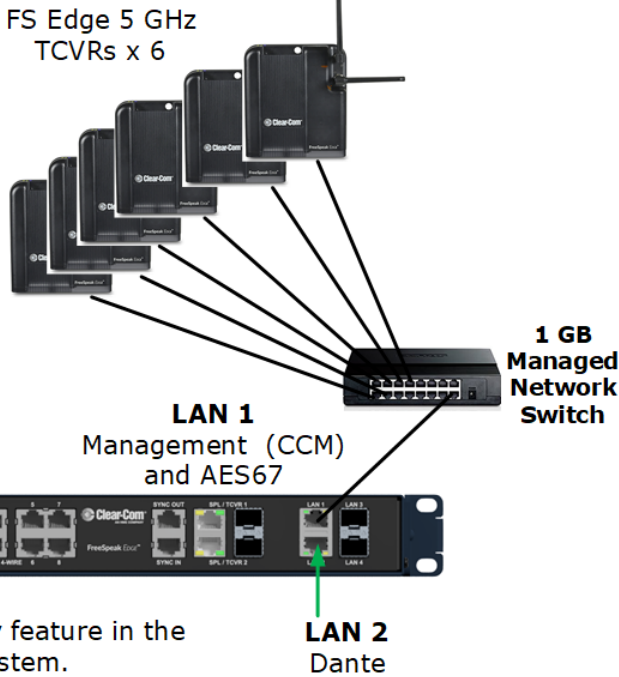

1. You will need to use the **Discovery** feature in the CCM to add IP transceivers to your system.

2. You will need to configure Dante feeds in the Audinate Dante Controller before these can be added to channels in the CCM.

Key

---

Cat5e/6a Shielded Ethernet cable  
23/24 AWG  
(max 100m)

## 2.3.1 Outline of General Setup and Configuration


- For network setup, see [Network Setup for IP Transceivers on page 127](#).
- To access the CCM, see [The Core Configuration Manager \(CCM\) on page 51](#).
- To add IP transceivers to your system, see [Using FreeSpeak Wireless Intercom on page 120](#).
- For information on the connection process for IP transceivers, see the Quick Start Guides (QSGs) for FS Edge IP transceivers available from the [FreeSpeak Edge Knowledge Center](#).
- For information about connecting to 2-Wire systems, see: [Using 2-Wire Systems on page 181](#).
- For information about connecting to Dante, see: [Using Dante Systems on page 177](#).
- For information about Channels, see [Managing Channels on page 78](#).
- For information about Roles, see: [Managing Roles on page 95](#).

## 2.4 Split Frequency Setup (5, 2.4 and 1.9 GHz System)

This setup has:

- E1 FS II transceivers (1.9) with 5 beltpacks
- E1 FS II transceivers (2.4) with 4 beltpacks
- FS Edge IP transceivers (5) with 10 beltpacks
- FS II IP transceivers (1.9) with 10 beltpacks.

The E1 Transceivers will automatically connect to the Arcadia once powered, but the Edge IP transceivers require additional configuration in the CCM and must be connected to a network that is configured for AES67 traffic.

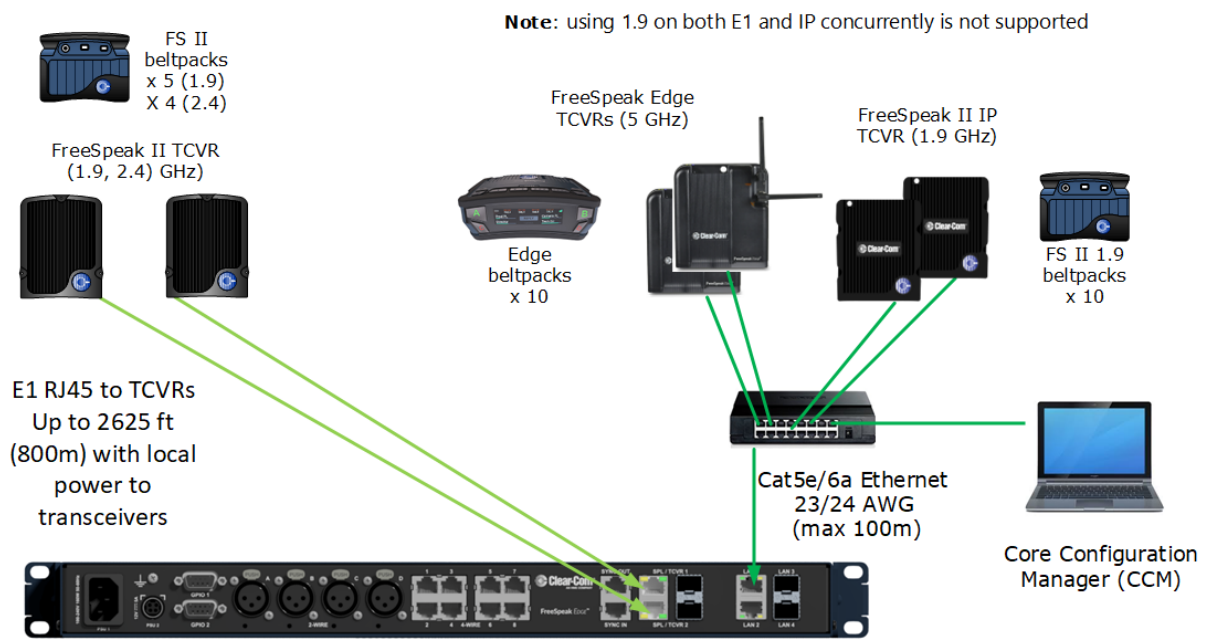


### CCM Configuration

2 x Channels: Cameras, Lighting

16 x Roles: Director, Stage Manager, Runners, Maintenance, Lighting, Sound

**Note:** you can create roles that can be used by FS Edge and/or FS II beltpacks (the role can only be used by 1 beltpack at any given time).

## 2.5 Arcadia as HelixNet System Host

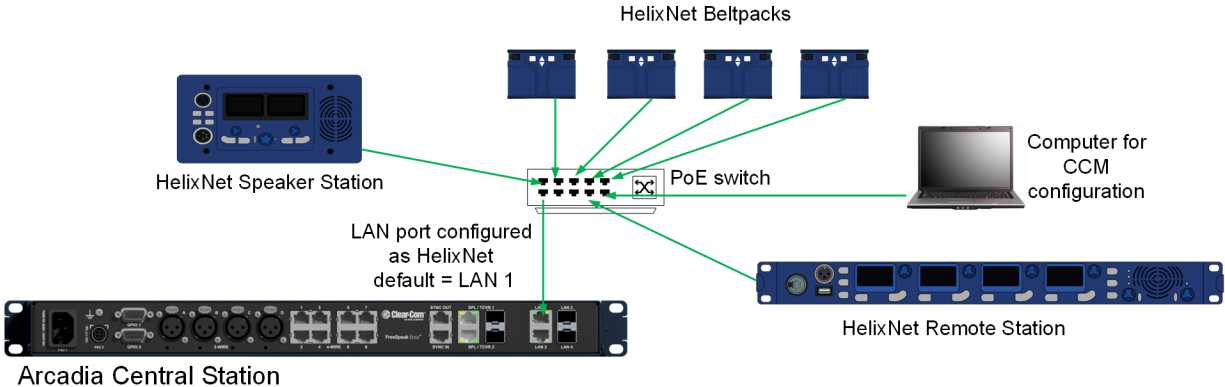


Up to:

- 24 HelixNet enabled channels (subject to licensed ports and device allocation)
- 128 HelixNet user stations

For information on how to configure this set up see [Using HelixNet Wired Partyline Intercom on page 137](#).

## 2.6 Arcadia with FreeSpeak E1 and HelixNet

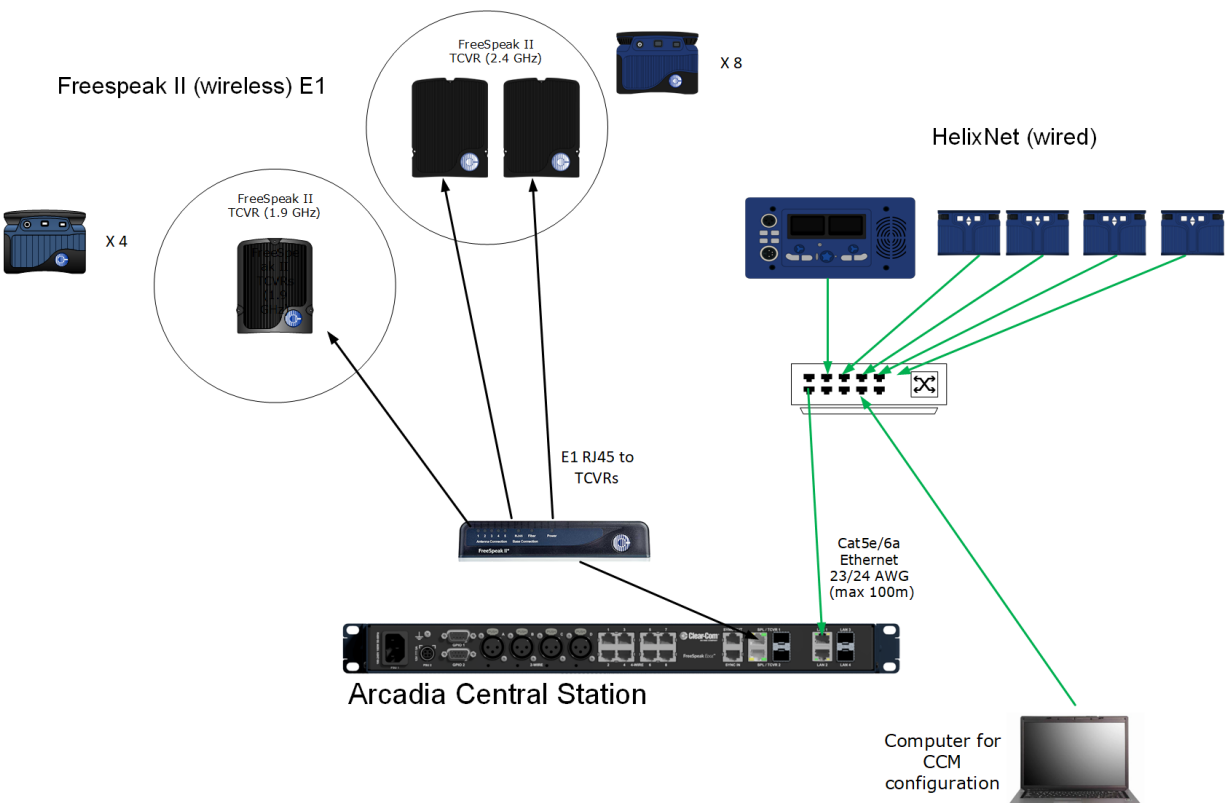


To configure FreeSpeak with E1 see [Connecting Transceivers Over E1 on page 121](#)

To configure HelixNet in Arcadia see [Using HelixNet Wired Partyline Intercom on page 137](#)

## 2.7 Arcadia with V-Series Panels (I.V. Port)

V-Series, V-Series Iris & IrisX Panels

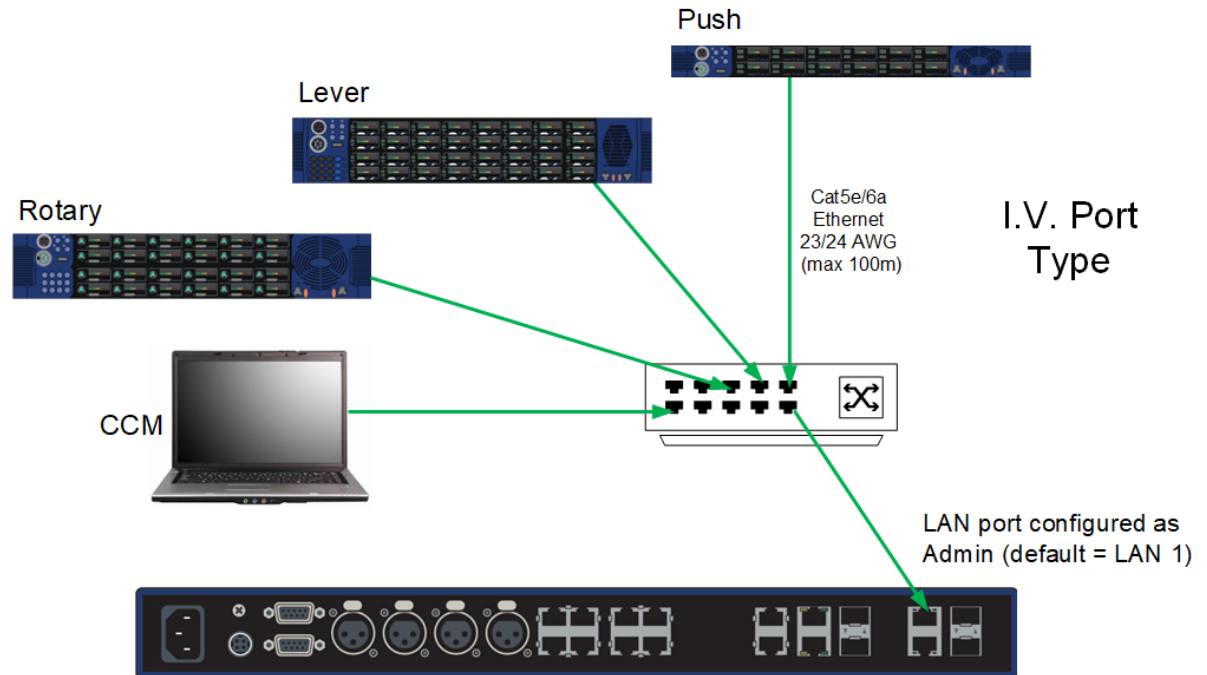


For information on how to configure this set up see [Connecting Keypanels via I.V. Ports on page 154](#)

## 2.8 Arcadia using LQ as Interface Expansion (I.V. Direct)


I.V. Direct connections enable various workflows:

- Interface expansion via LQ
  - 2-Wire and 4-Wire
  - 2-way radio
  - SIP
  - Agent-IC and Station-IC
  - LAN/WAN/Internet


### Remote Partyline (Encore) to Arcadia Central

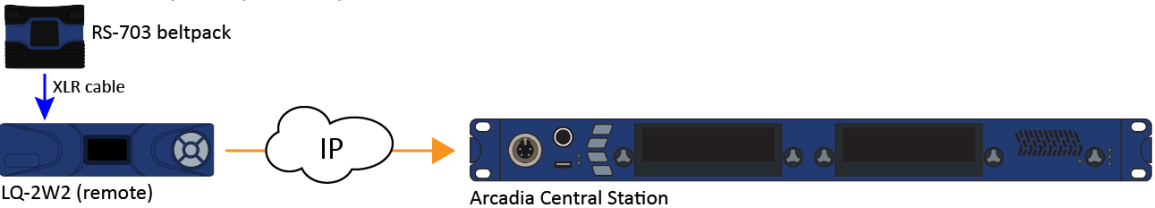

### Radio to Arcadia Central

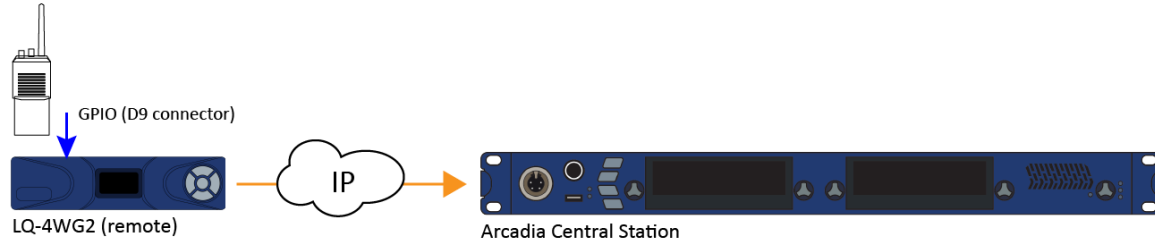

### Agent-IC to Arcadia Central

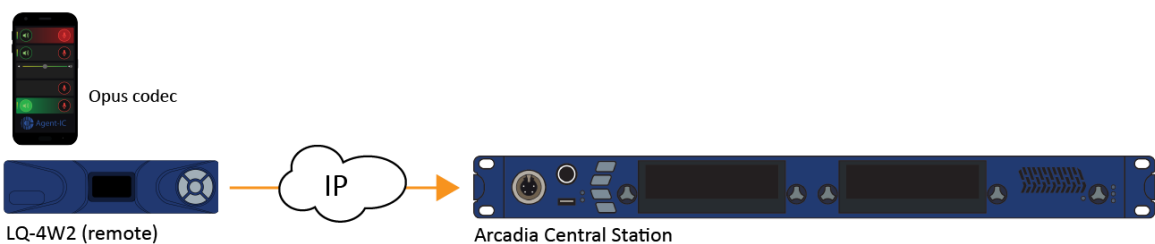

For configuration examples see [Using I.V. Direct on page 161](#)

# 3 Installing Arcadia Central Station


---

This chapter describes the front and rear panels, power supplies and cabling recommendations. It also describes network setup and illustrates example applications. It contains the following sections:

- 3.1 Front Panel Connectors, Controls and Indicators ..... 28
- 3.2 Front Panel Touchscreens ..... 29
- 3.3 Rear Panel Connectors and Indicators ..... 32
- 3.4 System Power ..... 33
- 3.5 Stage Announce and Program Audio ..... 34
- 3.6 Device Allocation ..... 35

---

### 3.1 Front Panel Connectors, Controls and Indicators

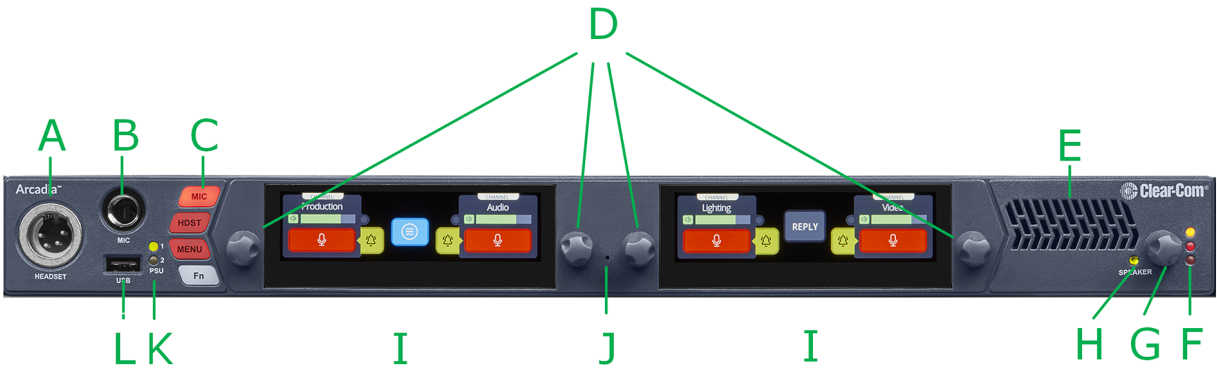

The Arcadia front panel connectors, controls and indicators are listed below.


| Item | Description   |
|------|---|
| A    | Headset connector (4-pin or 5-pin XLR).   |
| B    | Gooseneck mic socket (1/4-inch jack)  |
| C    | <p><b>Mic:</b> Toggles microphone audio on and off to the keysets on the unit (similar to the Talk button). The Mic button overrides the effect of a latched talk on a keyset.</p> <p><b>HDST:</b> When a headset is connected, this button switches audio between the headset microphone and the gooseneck microphone.</p> <p><b>Menu:</b> Press to enter menu mode. Press again to exit, or allow menu mode to time out.</p> <p><b>Fn:</b> Function button. For future use.</p> |
| D    | Rotary Encoders. Use these to control channel volume or to navigate through the menu system.  |
| E    | Loudspeaker   |
| F    | <p>Main Volume Level LEDs:</p> <ul style="list-style-type: none"> <li>• Red - high volume level</li> <li>• Amber - medium volume level</li> <li>• Green - low volume level</li> </ul>   |
| G    | Main Volume Control. This controls the listen levels for both the speaker and the headset. Pressing this control will mute/unmute the speaker audio output.   |

| Item | Description  |
|------|--|
| H    | Speaker active LED: lights green when the speaker is active. Arcadia channel audio is heard here. The speaker is automatically active when there is no headset plugged into the Arcadia.                                       |
| I    | Color touchscreen displays   |
| J    | Pin reset. Pin reset causes the device to power cycle (reboot)   |
| K    | Power input status indicators  |
| L    | USB A connector. Use to: <ul style="list-style-type: none"> <li>• Register beltpacks</li> <li>• Upgrade the Arcadia</li> <li>• Save/Restore system settings</li> <li>• Obtain detailed logs for diagnostic purposes</li> </ul> |

## 3.2 Front Panel Touchscreens


The Arcadia has two intercom control touchscreens, available when the front panel screens are not in menu mode. Each touchscreen provides access to two keys which can be configured for channels, groups or point to point communications channels.

### 3.2.1 Left Intercom Touchscreen

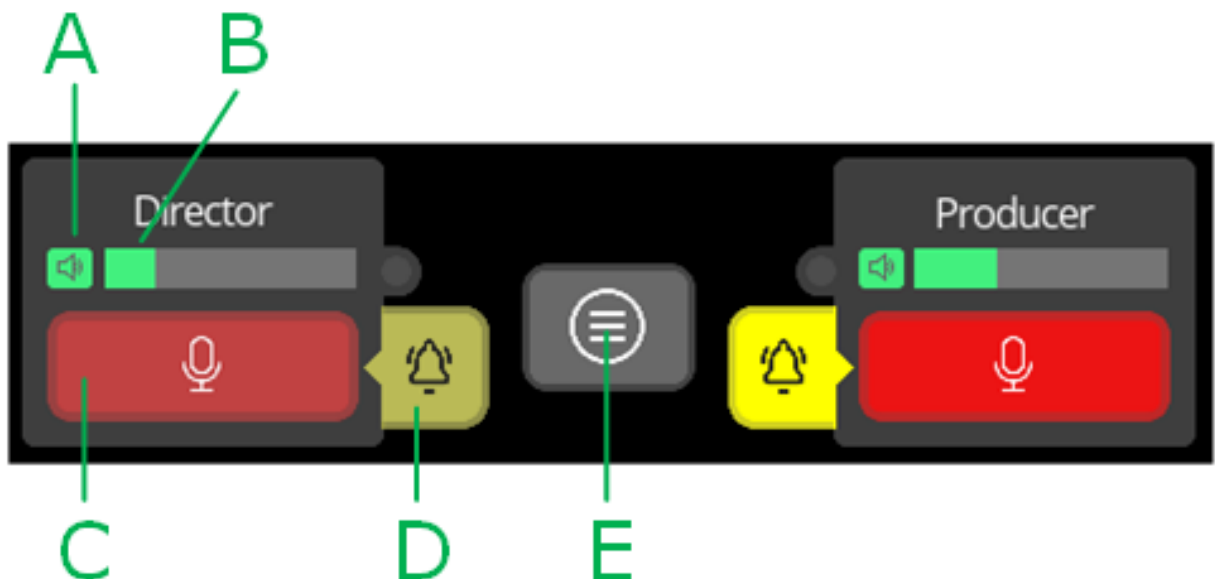


| Item | Description  |
|------|--|
| A    | Listen activation indicator.   |
| B    | Volume level indicator. Control the volume with the rotary controller next to the channel/audio source.  |
| C    | Talk button.   |
| D    | Call button. Use this to send a call signal.   |
| E    | Menu button. Touch to see: <ul style="list-style-type: none"><li>• Stage Announce</li><li>• All talk</li><li>• Remote mic kill (RMK)</li></ul> |

3.2.2 Right Intercom Touchscreen

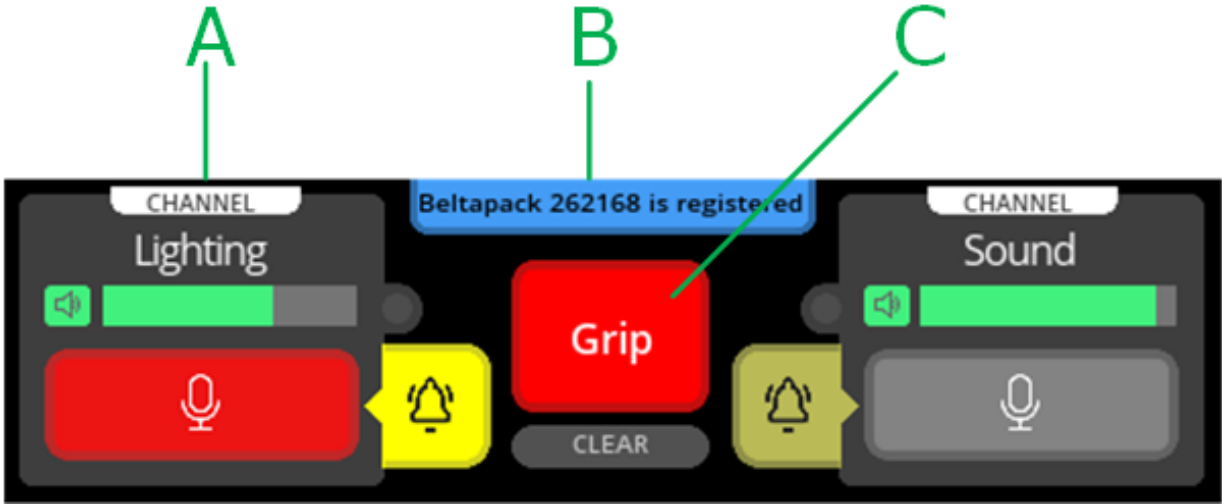

| Item | Description   |
|------|---|
| A    | Channel indication. Channels are set in the CCM: <b>Configuration&gt;Roles&gt;Arcadia Central Station</b> . Audio routes can be point-to-point or channels.   |
| B    | Notification bar <ul style="list-style-type: none"><li>• Beltpack registration</li><li>• Progress of upgrades</li><li>• Support information gathering</li><li>• Restoration of configuration progress</li></ul> |
| C    | Reply button. Use CLEAR to clear the currently visible entry (does not clear the entire key stack).   |

### 3.3 Rear Panel Connectors and Indicators

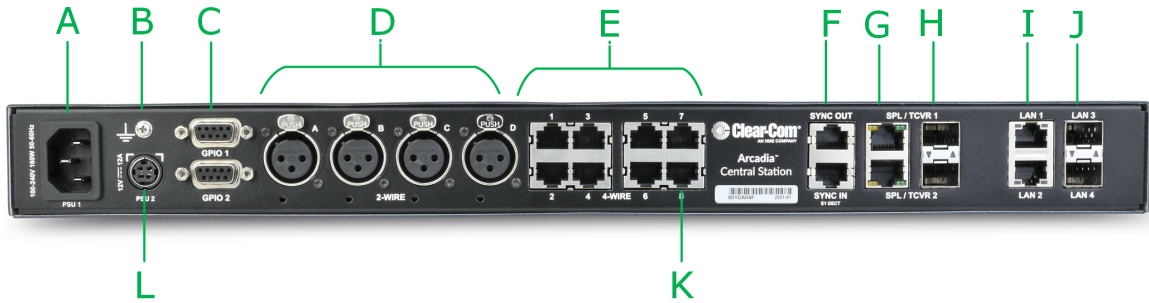

The Arcadia rear connectors and indicators are listed below.

| Item | Description   |
|------|---|
| A    | Internal power connector. Mains power lead with internal power supply.  |
| B    | Grounding screw.  |
| C    | General Purpose Input/Output connectors x2 (DB-9F). <ul style="list-style-type: none"> <li>GPIO 1 hosts GPI1 and GPO1 &amp; 2</li> <li>GPIO 2 hosts GPI2 and GPO 3 &amp; 4.</li> </ul>                        |
| D    | XLR 2-wire Partyline connectors (analog)  |
| E    | RJ45 4-wire audio and data connectors. Port 8 is dedicated to Program Feed ( <b>PGM</b> ) and Stage Announce ( <b>SA</b> ), to be used with the split RJ45 cable connector that is supplied with the Arcadia. |
| F    | Dect Sync RJ45 connectors, IN, OUT.   |
| G    | E1 RJ45 connectors to FreeSpeak II splitter/transceiver. Do not connect IP transceivers here.   |
| H    | SFP cage for E1 fiber connection to splitter/transceiver. Either single-mode or multi-mode fiber modules. Modules must match existing cabling. Do not connect IP transceivers here.                           |
| I    | RJ45 LAN connectors. Assignable to Management (HelixNet/I.V. Port), Dante primary, Dante secondary, AES67 for FreeSpeak IP transceivers.  |
| J    | SFP cage for optional fiber or RJ45 LAN modules. Assignable to Management (HelixNet/I.V. Port), Dante primary, Dante secondary, AES67 for FreeSpeak IP transceivers.  |

| Item | Description  |
|------|--|
| K    | Program Audio input and Stage Announce output. Use with supplied RJ45 to XLR adaptor cable.                  |
| L    | External power supply connector. <b>CAUTION:</b> Before using, see <a href="#">System Power on page 33</a> . |

## 3.4 System Power

Arcadia features dual power inputs:

- Mains power connector (IEC) internal power supply
- DC connector. External AC/DC power adapter (12V DC, 12A)

Both power inputs can be connected in parallel for redundancy.

### 3.4.1 Using the External DC Power Connector

**CAUTION: YOU MUST CONNECT THE EXTERNAL DC POWER SUPPLY IN THE ORDER DESCRIBED AND ILLUSTRATED BELOW:**

1. Connect the external power supply 12V cable connector (A) to the rear chassis 12V input connector of the Station.


**Note:** When connecting the power cable, be sure to push until the connector locks into the device.

Station (rear, left-side)



2. Connect External Power Supply mains cord (B) to the AC input source.

Mains connector

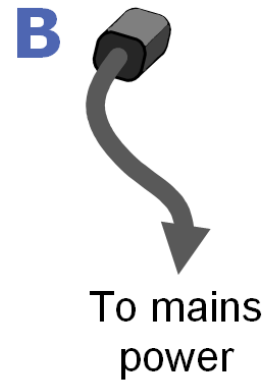


### 3.5 Stage Announce and Program Audio



Your Arcadia Central Station is supplied with an RJ45 connector that uses a splitter cable to split into two XLR connectors. If you wish to use an external Stage Announce (SA) and Program

audio (**PGM**), you must connect this to the RJ45 port labeled **SA/PGM** (port 8) on the rear of your device, and connect your input (**PGM**) and output (**SA**) to these connectors.

- Stage announce (audio out): Male XLR
- Program feed (audio in): Female XLR

Navigate to **Configuration > Channels** in the CCM and click the add button  next to the PGM and SA ports to put them into channels as required. These audio resources can be routed with **Channels**, **Groups**, **Roles** and **Logic** events (GPIOs).

**Note:** *These resource are unidirectional (simplex, not duplex).*

## 3.6 Device Allocation

Device Allocation allows you to use HelixNet channel resources for additional I.V. Direct or panel ports in a configuration.

| Allocation  | HelixNet Channels | I.V. Panels/Directs |
|-------------|-------------------|---------------------|
| 1 (default) | 24                | 16                  |
| 2           | 12                | 24                  |
| 3           | 6                 | 28                  |
| 4           | 0                 | 32                  |

- This feature is expected to be used primarily during the initial setup, as it includes significant changes to the system and a device reboot
- The numbers of HelixNet Channels and I.V. Panels/Directs do not add up, as they require different operational resources

The screenshot displays the Clear-Com web interface for configuring a host. The top navigation bar includes 'HARDWARE', 'CONFIGURATION', and 'STATUS'. The 'Host' page is selected, showing 'Resources' for host 'ff080925'. The left sidebar lists host details: NAME (ff080925), TYPE (Arcadia Central Station), IP ADDRESS (10.50.17.165), CONNECTIONS (2W, 4W, DANTE, FSE, FSII, HELIXNET, I.V. Direct), LICENSED PORTS (96), VERSION NUMBER (3.2.83.33), and POWER STATUS. The main panel has tabs for Network, Upgrade, Wireless, Security, License, and Device Allocation. The 'Device Allocation' tab is active, showing a description: 'Provides the ability to redeploy the device hardware resources for Licensed Port use. Changes require a reboot.' Below this is a table with the following data:

| Active | Label        | HelixNet Channels | I.V. Panels/Directs |
|--------|--------------|-------------------|---------------------|
| ✓      | Allocation 1 | 24                | 16                  |
|        | Allocation 2 | 12                | 24                  |
|        | Allocation 3 | 6                 | 28                  |
|        | Allocation 4 | 0                 | 32                  |

An 'Apply' button is located at the bottom right of the table.

To configure Device Allocation see: [Configuring Device Allocation on page 68](#)

# 4 Configuring from the Front Panel

This chapter describes how to configure the Arcadia Central Station from the front panel. It contains the following sections:

- 4.1 Introduction to Configuring from the Front Panel .....38
- 4.2 Passwords, IP Addresses, Reset to Default, Save and Restore Configuration .....38
- 4.3 Setting the Management IP Address ..... 40
- 4.4 Front Panel Menus .....42

---

## 4.1 Introduction to Configuring from the Front Panel

Some common tasks you might perform from the front panel menus are:

- See/configure the Arcadia IP address
- See the default CCM password
- Null your 2-wire audio ports
- Reset the Arcadia to factory settings
- Reset the CCM password

To enter the Arcadia menu system, press the **Menu** button on the front panel. Navigate through the hierarchical menu using the rotary controllers. To select or commit a menu item, press the rotary encoder next to it.

To exit the menu system, press the Menu button again, or leave the device to time-out of menu mode (20 seconds).

## 4.2 Passwords, IP Addresses, Reset to Default, Save and Restore Configuration

You can find the Arcadia IP address, manage the CCM password and reset to default settings.


### 4.2.1 Find the Arcadia IP Address

1. Press the **Menu** button on the front of the Arcadia.
2. Navigate to **Networking > Management > IP Address** using the rotary controllers.
3. You will see the device IP address.




### 4.2.2 Find the default password for the CCM

1. Press the **Menu** button on the front of the Arcadia.
2. Navigate to **Administration > CCM Access > Default Password** using the rotary controllers.
3. You will see the default password in the right hand menu screen.

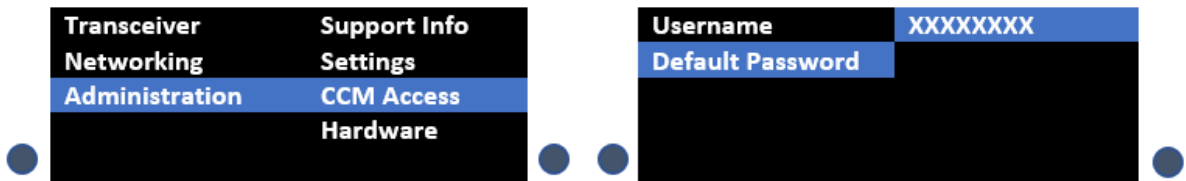

### 4.2.3 Reset the device to default settings

1. Press the **Menu** button on the front of the Arcadia.
2. Navigate to **Administration > Reset > Reset To Default > Reset Base**.
3. The Arcadia will reset to factory settings.

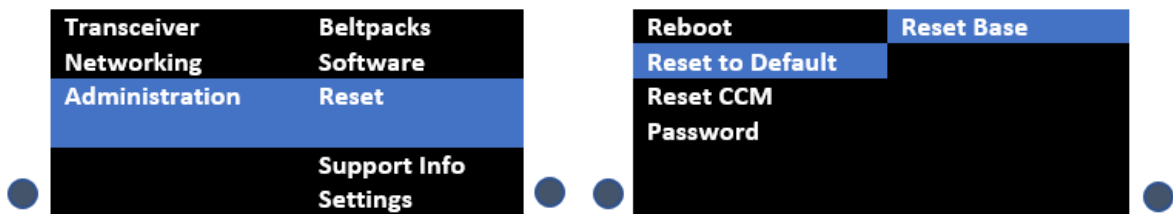

**Note:** When you use a pin reset on front the front of the Arcadia the device power cycles.


**Note:** When resetting the Arcadia to default settings using the front panel menu system, all the system configuration details, including network settings are reset. The management IP of the Arcadia will change.

**Note:** When you reset the Arcadia to default settings, you must **Add** the IP transceivers to the system again. See [Adding IP Transceivers on page 126](#).

**Note:** HelixNet endpoints will all revert to default configuration.

## 4.2.4 Reset the CCM password

1. Press the **Menu** button on the front of the Arcadia.
2. Using the right hand rotary controller select **Administration > Reset > Reset CCM Pass.**
3. Press the right hand rotary controller.
4. The password will reset to its default setting.

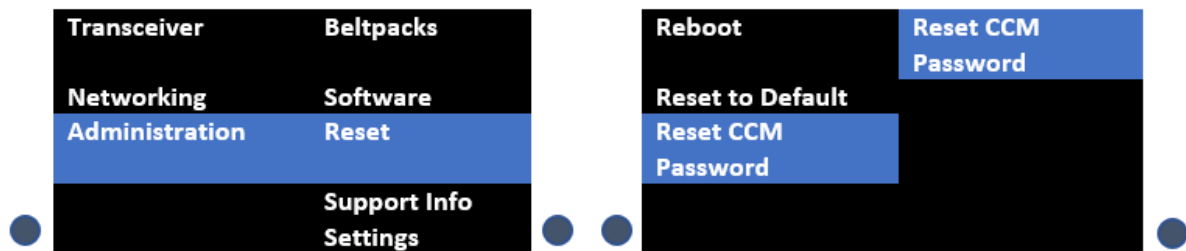

## 4.2.5 Save/Restore System Setup

1. Insert a USB drive into the USB connector on the front of the Arcadia.
2. Press the **Menu** button.
3. Using the rotary controllers, navigate to **Administration > Settings > Save.**
4. Push the 4th rotary controller. System settings are saved to the USB drive. The progress of this Save is shown in the notification bar on the front panel.
5. The file is saved in a folder called **/backupConfig/** in the USB. The file name format is **hostNameDateTime.cca.**

**Note:** *When you restore system settings in the CCM, Network and OTA System ID settings are optional. When you restore system settings from the front panel all settings are recalled which may cause system conflicts, unless you are intending to configure a cold standby Arcadia unit.*

## 4.3 Setting the Management IP Address

By default your Arcadia works with DHCP. However, you can set a static IP address for any of the station Ethernet ports (with the exception of Dante audio that is defined by the Audinate Dante Controller).

The Management IP address can be set:

- From the Arcadia front panel menus
- From the CCM

### 4.3.1 Setting the Management IP Address from the Front Panel Menus

1. Press the **MENU** button.
2. Using the far left rotary controller, navigate to **Networking**.
3. Select **Management**.
4. Navigate to **DHCP** and select **DISABLED**. Push to select menu item.
5. A numerical touchscreen keypad appears in the screen.
6. Using the touchscreen, press **Clr** to clear the IP address field.
7. Enter the new IP address using the touchscreen.
8. Press **OK**.
9. Edit the subnet if required.
10. Press **OK**.
11. The Management IP address has been changed.

For more information, see [LAN Configuration Rules on page 60](#).

## 4.4 Front Panel Menus

The front panel menu options are listed below.

### 4.4.1 Audio Settings

#### Headset

- **Headset Limit.** This allows the user to set the headset limiter for the front panel headset.
  - -12 dB to +8 dB/ OFF
- **Headset Detect**
  - Enabled (default)
  - Disabled
- **HS Mic Type**
  - Dynamic (default)
  - Electret
- **Sidetone Gain**
  - -12 dB to +8 dB (-12 dB default)
- **Sidetone Control**
  - Tracking (default)
  - Non-Tracking
  - Disabled

#### Gooseneck

- Electret
- Dynamic

### 4.4.2 Host Settings

**Host Name.** Pushing the fourth rotary will open the on screen keyboard to allow the user to enter a new name for the device (touchscreen). [OK] when done.

#### Display

- Screen Brightness. High, Medium (default), Low, Very Low
- Screen Dimming. The screen will dim to Very Low when there is no activity. Timeout time: 1,2 (default),3,5,10 or 15 minutes.
- Touchscreen sensitivity: Low, Medium (default), High.

#### 4.4.3 2W Audio (A,B)

Configure power settings for 2-wire audio sources and perform nulling.

- Interface - power settings
  - Power detected? Yes/No
  - Power Enabled/Disabled (default = disabled)
  - Mode Clear-Com/RTS (default = Clear-Com)
- Nulling: 2W A and 2W B. Press the rotary control (Start) to perform a null. Nulling is only available if power is detected.

#### 4.4.4 2W Audio (C,D)

See 2W Audio (A,B)

#### 4.4.5 Discovery

- Discover FSII TCVR.
  - Lists all FSII IP transceivers visible on the network. Select the transceiver you wish to register (third rotary). Select **Register** and push the rotary (fourth rotary) to begin the connection sequence.
- Discover FSE TCVR.
  - Lists all FS Edge transceivers visible on the network. Select the transceiver you wish to register (third rotary). Select **Register** and push the rotary (fourth rotary) to begin the connection sequence.

**Deregister** will remove the transceiver from the system. You will only see the **Deregister** option if the transceiver has been already registered.

#### 4.4.6 Transceiver

Lists all registered transceivers. You can view and edit **Label** and **Cable Comp (E1 only)** here. Pushing the fourth rotary will open the onscreen keyboard (touchscreen). [OK] when done.

**Note:** *Cable Comp is the same as Cable Length Offset.*

- FSII IP. Version, Label.
- FS Edge. Version, Label.
- FSII E1. Version , Label, Cable Comp.

## 4.4.7 Networking

### Management

Configure and view:

- LAN Port Assignment
- DHCP **Enabled**/Disabled
- IP Address (read only when DHCP is Enabled)
- Subnet Mask (read only when DHCP is Enabled)
- MAC Address (read only)

Push the fourth rotary to open the on screen touchscreen keyboard to change IP and Subnet. [OK] when done. The keyboard is only available when DHCP is disabled.

**Note:** *When changing from DHCP **Enabled** to DHCP **Disabled**, the address previously assigned by the DHCP server will be set as the static address. This can cause IP conflicts so you must change the address to one not provisioned by the DHCP server.*

### AES67 (for IP transceivers and AES67 panels)

The section of the menu is read only and only shown if the AES67 connection has been configured with a LAN port from the CCM. It shows:

- LAN Port Assignment
- DHCP Enabled/Disabled
- IP Address
- Subnet Mask
- MAC Address

### Dante

The section of the menu is read only and only shown if the Dante connection has been configured with a LAN port from the CCM. It shows:

- LAN Port Assignment
- IP Address
- Subnet Mask
- MAC Address

## 4.4.8 Administration

- Beltpacks
  - Over the Air: Press rotary four to **Start OTA**. Put the Arcadia in pairing mode for OTA registration of beltpacks (600 seconds).
  - BP Role List Sorting:
    - Role Number
    - Alphabetical
  - Battery type: use this setting if the beltpacks are not using the supplied Li-ion batteries.
    - Alkaline (default)
    - NiMh (for use in high pressure environments)
- Software
  - Current version
  - Update software from a file on a USB (insert into USB on front of Arcadia)
- License
  - Connections - current connected ports on this Arcadia
  - Licensed Ports
    - Total Ports
    - Wireless Ports
    - HelixNet Ports
    - Dante
    - I.V. Ports
    - V-Series IrisX
  - Any Ports. Licensed ports can be allocated to Wireless, HelixNet, I.V Port, AES67, Dante or Any. This is a way to control your system resources. A port allocated to Wireless (for example) will not accept connections of any other type. Ports are able to accept all connections by default (Any). Port type is assigned in the CCM: **CCM > Hardware > Resources > Licensed Ports > Type**.
- Reset

- Reboot
- Reset to Default. Reset here will reset role, channel and network details. You will need to **Add** your transceivers back into the system after reset. HelixNet devices will revert to default configuration
- Reset CCM Password
- Support Info
- Settings
  - Save
  - Restore
- CCM Access
  - Username
  - Default password
- Hardware (view only)

Information is for troubleshooting purposes only. Please note: the serial number in this section is the electronic main board serial number, not the device serial number.


## 5 Workflows

Arcadia's Essential feature set includes various configuration options to provide users with effective intercom workflows.

Combined with the ability to have various keys on the intercom user stations, Arcadia Essential gives you tools to increase the power and efficiency of your teams.

### 5.1 Channels for Teams

- Channels support team collaboration where everyone hears everyone
- Use a main channel for announcements and sub-channels for focused collaboration

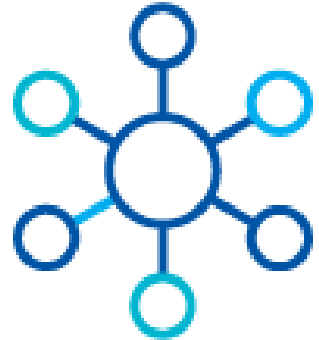

You may have a team of people working on a project. Partyline channels enable everyone to talk and be heard by any member of the channel without restrictions. Channels are a mainstay of Clear-Com intercom systems.

For example, a Main / Production partyline is established for everyone to convey important announcements. Then, additional sub-channels are created for sections of the team who collaborate on different topics. Creating and assigning sub-channels minimizes chatter on the main channel and enables collaboration on team topics and tasks.

### 5.2 Directs for Private Conversations


- Directs support 1:1 communication between team members
- If the call recipient does not have a direct key, they can respond using a reply key



In some cases, the ability to have a private conversation with a team member is needed. With a direct talk key, you can contact someone directly, whether the call recipient has a key to you or not (in which case, they can respond with the reply key).

## 5.3 Groups for Announcements with a Private Talk Back

- Groups allow announcements or general requests to multiple users
- If someone responds, the conversation automatically becomes private for follow-up

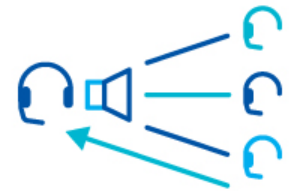

A variation of directs are groups, which allow direct talk to the assigned users of the group at the press of a button. Responding to a group call automatically becomes a private conversation.

## 5.4 IFB for Interrupting/Ducking


- IFB (Interruptible Foldback) overrides background audio to deliver critical instructions clearly. IFB are commonly used in broadcast and paging environments
- IFB are for switching between awareness monitoring and one-way instructions with clarity and priority



This communication system workflow is commonly used in broadcast. For example, on-air talent hears program- or monitoring audio input until someone talks to them, interrupting the program or monitoring audio to get the talent's undivided attention. This same workflow is also common in paging systems whether it is in the lobby of the theater or a supermarket where background music feeds the paging zone and ducks during a page. In theatre, a performer can be given an ongoing clear guide track which ducks when receiving instructions from a stage manager.

## 5.5 Roles

- Roles are used to assign keysets to intercom user stations, defining their function and simplifying setup. Roles can be made for specific users (for example, John) or their operational roles (for example, Cameras)

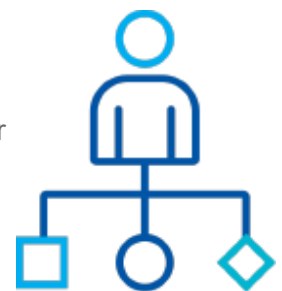

You are provided with role templates, but these can be created, edited and cloned to suit your team needs.

## 5.6 Logic

- General Purpose Inputs and Outputs (GPIO) are triggered by audio routing, call-signals or crosspoints. These enable simple 3rd party control or automation



GPIO can be used for a variety of purposes. An on-air light or other beacon can be triggered either by an external device (footswitch or push-button) or by a call-signal, crosspoint or audio-gate. Two-way radios can be activated, or a curtain raised. GPIO can be used across systems, enabling remote applications.

## 5.7 Interface Ports for using Generic Audio Devices

- Interfaces are commonly used to interconnect different intercom systems
- In addition, interfaces allow any audio device to be used as part of your intercom system



Interfaces are most commonly used to interconnect different intercom systems. Interfaces can also facilitate any audio peripheral to be used for communications. This can include; multi-zone paging for stage announce into side fills, ceiling or powered speakers, direct inputs into musician's in-ear monitor systems, listens to various audio sources for monitoring, microphone inputs, quality control or cueing purposes.

# 6 The Core Configuration Manager (CCM)

---

This chapter describes the main pages of the Core Configuration Manager (CCM). It contains the following sections:

- 6.1 CCM Introduction ..... 52
- 6.2 Changing the CCM Password ..... 55
- 6.3 Setting the Management IP from the CCM ..... 56
- 6.4 Saving and Restoring System Configuration ..... 56
- 6.5 Resetting to Default ..... 57
- 6.6 Hardware Page Overview ..... 58
- 6.7 Host Page ..... 58
- 6.8 Configuring the Network ..... 60
- 6.9 Upgrading ..... 63
- 6.10 Setting Up the Wireless Beltpack System ..... 65
- 6.11 Configuring Device Allocation ..... 68
- 6.12 Resources ..... 69
- 6.13 Configuration Overview ..... 75
- 6.14 Channels and Groups ..... 76
- 6.15 Channels ..... 78
- 6.16 Groups ..... 84
- 6.17 IFB ..... 90
- 6.18 Roles ..... 94
- 6.19 Logic ..... 105
- 6.20 Status Overview ..... 109


---

## 6.1 CCM Introduction

The CCM is an easy-to-use browser-based software tool with intuitive menus that enable you to quickly set up, configure and edit your system. It provides an overview of all the system components and interfaces. It is password protected and suitable for use in light sensitive environments.

### At-a-glance guide to using the Core Configuration Manager (CCM)

HARDWARE




This is where you will initially set up your system and resources


- Register IP transceivers
- Register beltpacks
- Network setup
- Register IP ports and panels
- Set 5 GHz channels on transceivers
- Interface port settings

CONFIGURATION

This is where you will configure the intercom aspect of your system: channels and audio keys




Add ports to channels



Roles: beltpacks, Station and other endpoints

STATUS

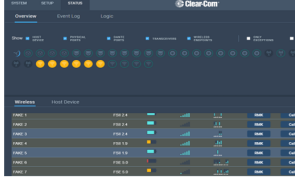

This section provides detailed status of system overview, information and performance


### 6.1.1 CCM Configuration and Information Icons



Click to label this device



Click to go to configuration options

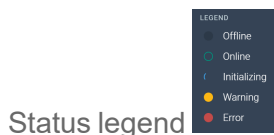

Click on the icon for status information

The CCM makes use of context sensitive navigation to help with troubleshooting and configuring specific devices. For example, from a beltpack in the **Resources** page, click the cog icon to go to role configuration for this beltpack.

Hover over an icon, it will enlarge if it is clickable.


## 6.1.2 Compatible Internet Browsers

You can access the CCM using the following internet browsers:

- Chrome
- Safari
- Firefox
- Microsoft Edge

### 6.1.3 Accessing the CCM

1. Make sure that the Arcadia is connected to a network using the LAN connector that is configured for management (Default LAN 1) on the rear panel of the device
2. Open a supported internet browser on a desktop that is connected to the same network as the Arcadia.
3. In the browser address field, enter the IP address of the Arcadia. You can find this from the front panel menus, see [Introduction to Configuring from the Front Panel on page 38](#). The login screen appears:

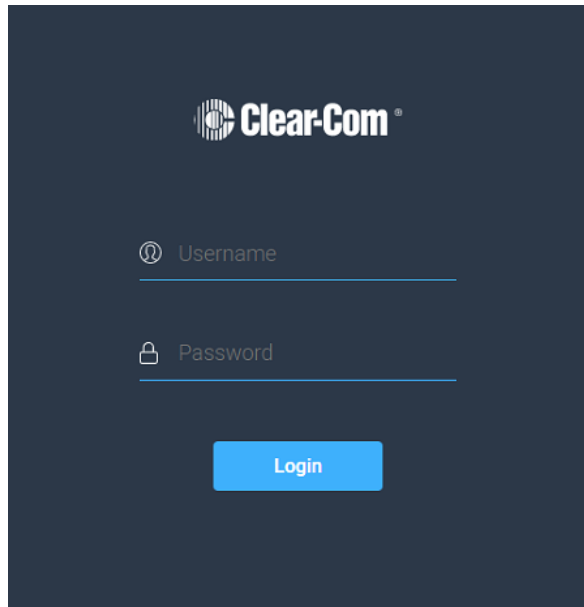

If you enter an incorrect user name or password, an error message appears and you are prompted to re-enter your user credentials.


4. Enter the username and password, and then click **Login**.

The default values are:

- username: **admin**
- password: find the default password in the front panel menu system, see [Passwords, IP Addresses, Reset to Default, Save and Restore Configuration on page 38](#).

**Note:** *The username and password are case sensitive.*


The CCM **Hardware** page opens.

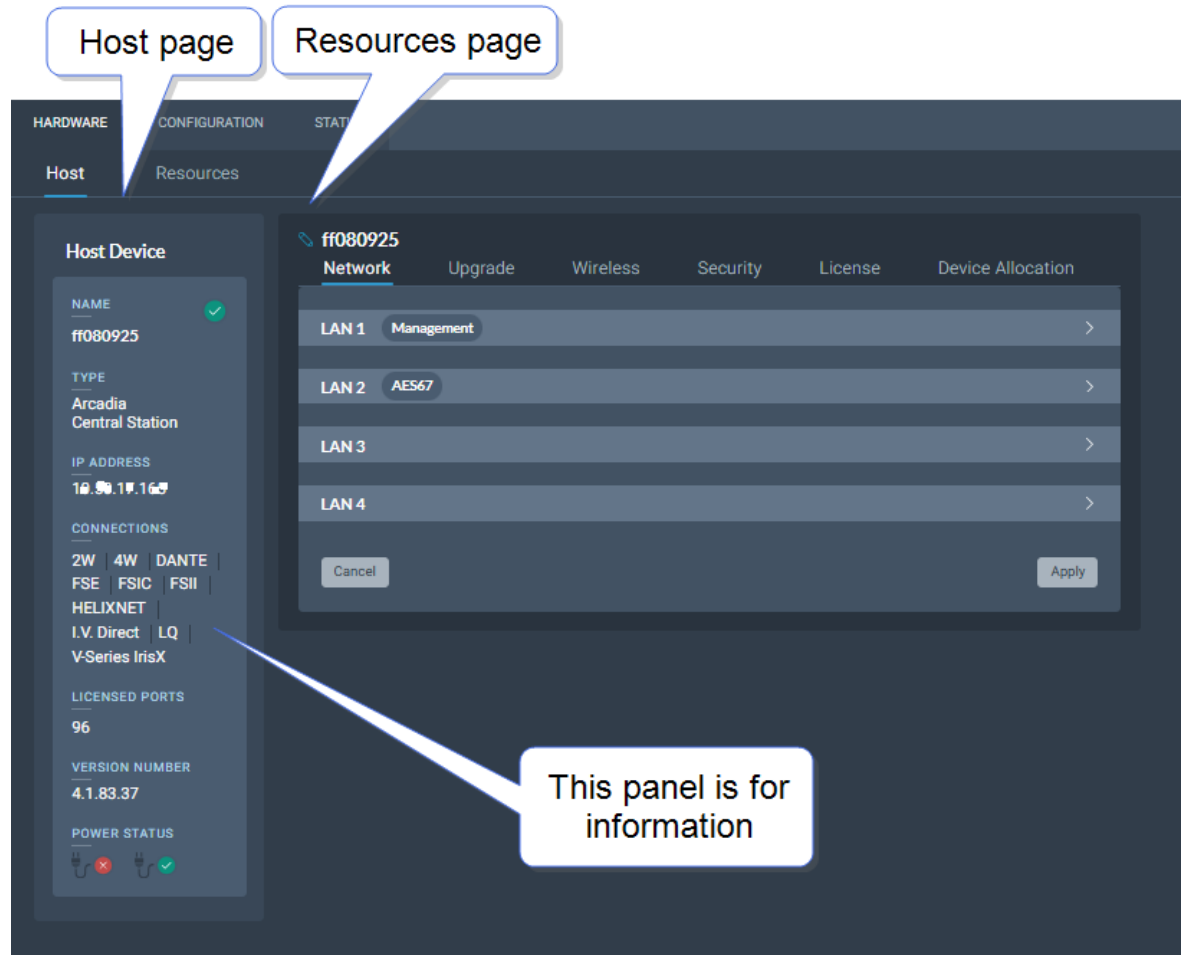

**Note:** On first opening the CCM, the **Hardware** page opens. On subsequent occasions, the **Status** page opens.

## 6.2 Changing the CCM Password

Change the password to one of your own choosing in the top right corner of the navigation bar.

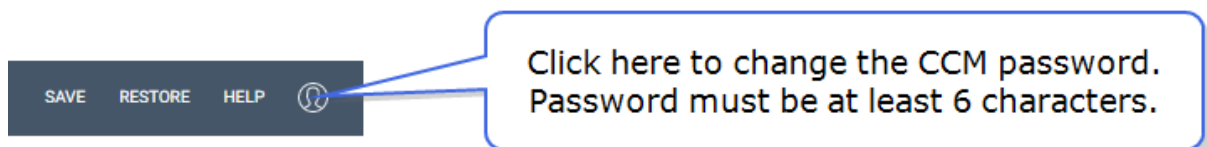


**Note:** You can reset your password to the default at any time from the Arcadia front panel menus.

## 6.3 Setting the Management IP from the CCM

To access the CCM, input the Management IP address into a browser. Find the management IP address of the Arcadia in the front panel menu system: **Menu>Networking>Management**.

1. In the CCM, navigate to **Hardware >Host**.
2. In the Network tab, click **Management**.
3. Select **Static**.
4. Enter the required IP address and press the [Enter] key.

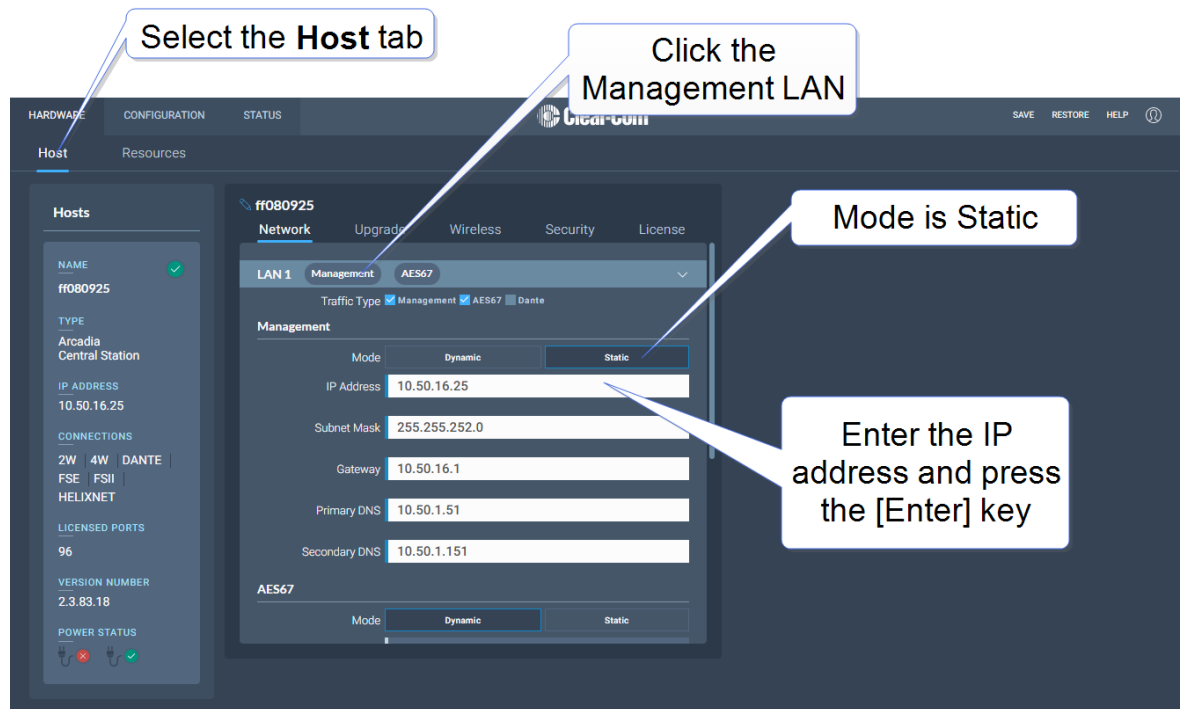

5. For more information, see: [LAN Configuration Rules on page 60](#).

## 6.4 Saving and Restoring System Configuration

Clear-Com recommends that you make a backup of your system configuration using the Save option that is available in the CCM and the front panel menu system.

## 6.4.1 Saving System Configuration in the CCM

The **Save** and **Restore** options are available in the CCM top navigation bar.



When you click **Save**, all system configuration; channels, roles and network details are saved to a file (.cca) on your computer.

## 6.4.2 Restoring System Configuration

Your system configuration can be restored to the Arcadia at any time using the **Restore** button in the CCM and also from the front panel menu system.

On restore, the saved configuration is reapplied to the Arcadia. The following aspects of the configuration are optionally restored:

- Network settings (IP addresses)
- Over The Air system ID.

You do not get these options when restoring by USB directly to the Arcadia. If you want to restore system settings taken from different Stations, you must use the CCM Restore option, as restoring directly from the Arcadia in this situation would restore network and OTA system ID and IP and could cause wireless ID conflicts.

## 6.5 Resetting to Default

Your Arcadia can be reset to default settings either from the front panel menus or from the Core Configuration Manager (CCM).


**Note:** *When you use a pin reset on front the front of the Arcadia the device power cycles (reboots).*

### 6.5.1 Resetting to Default from the CCM

1. In the CCM, navigate to **Status > Overview > Host Device**.
2. Select **Reset to Default**.
3. From the confirmation dialog box, click **Reset to Default**.
4. The device will reset to factory defaults and reboot.

When resetting to default from the CCM, network settings are not reset, and the password is also not reset. This is not the case when resetting to default from the front panel menus.

## 6.6 Hardware Page Overview

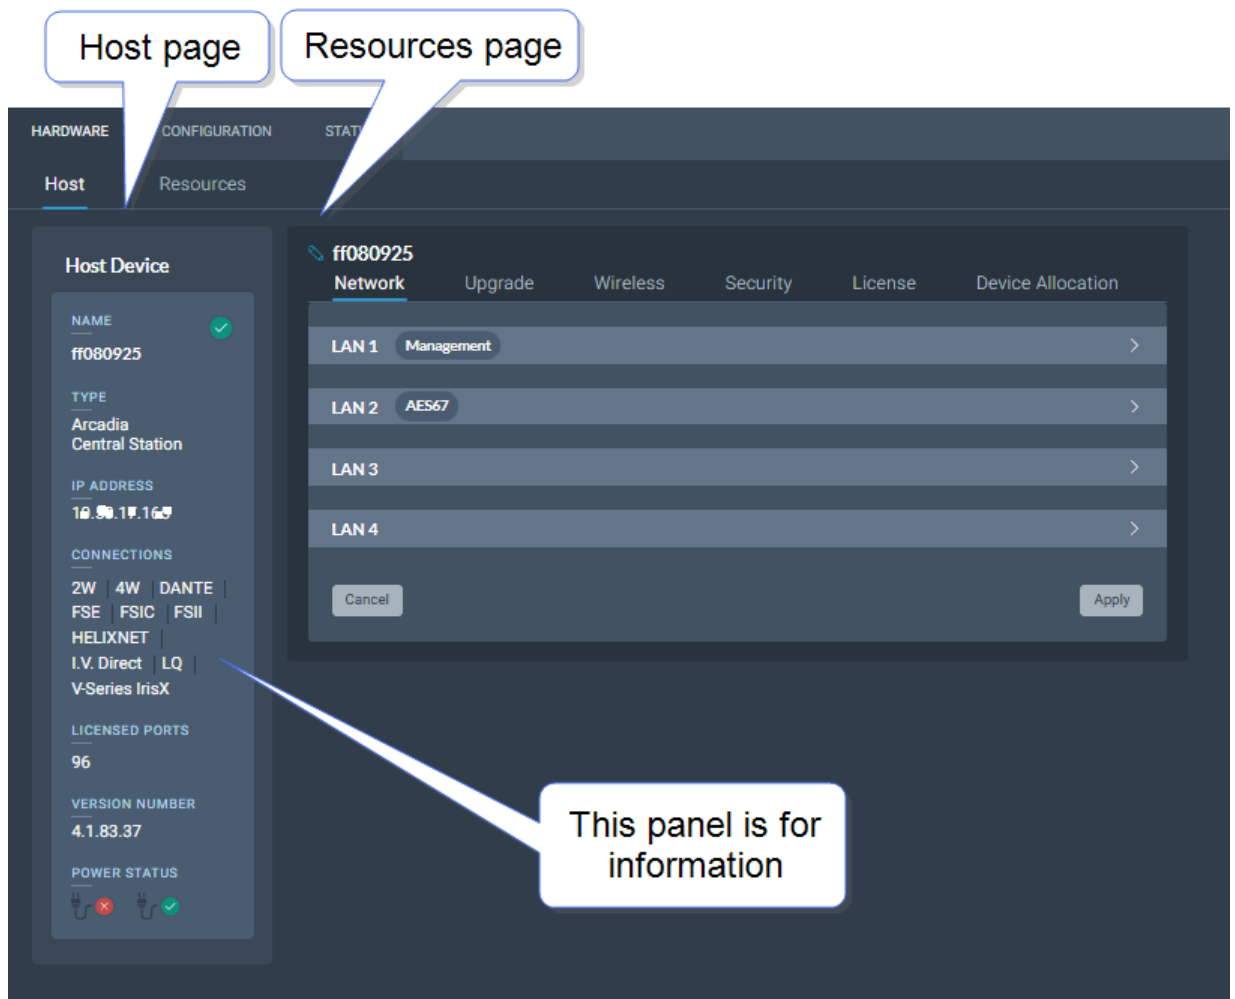


The Hardware page of the CCM is where you set up your system. It has two pages:

- The Hosts page where you can set up your Arcadia Central Station settings. See [Host Page on page 58](#)
- The Resources page where you can set up and configure the intercom resources that are connected to your central station. See [Resources on page 69](#)

## 6.7 Host Page

To configure the Arcadia, settings, navigate to **Hardware > Host**.

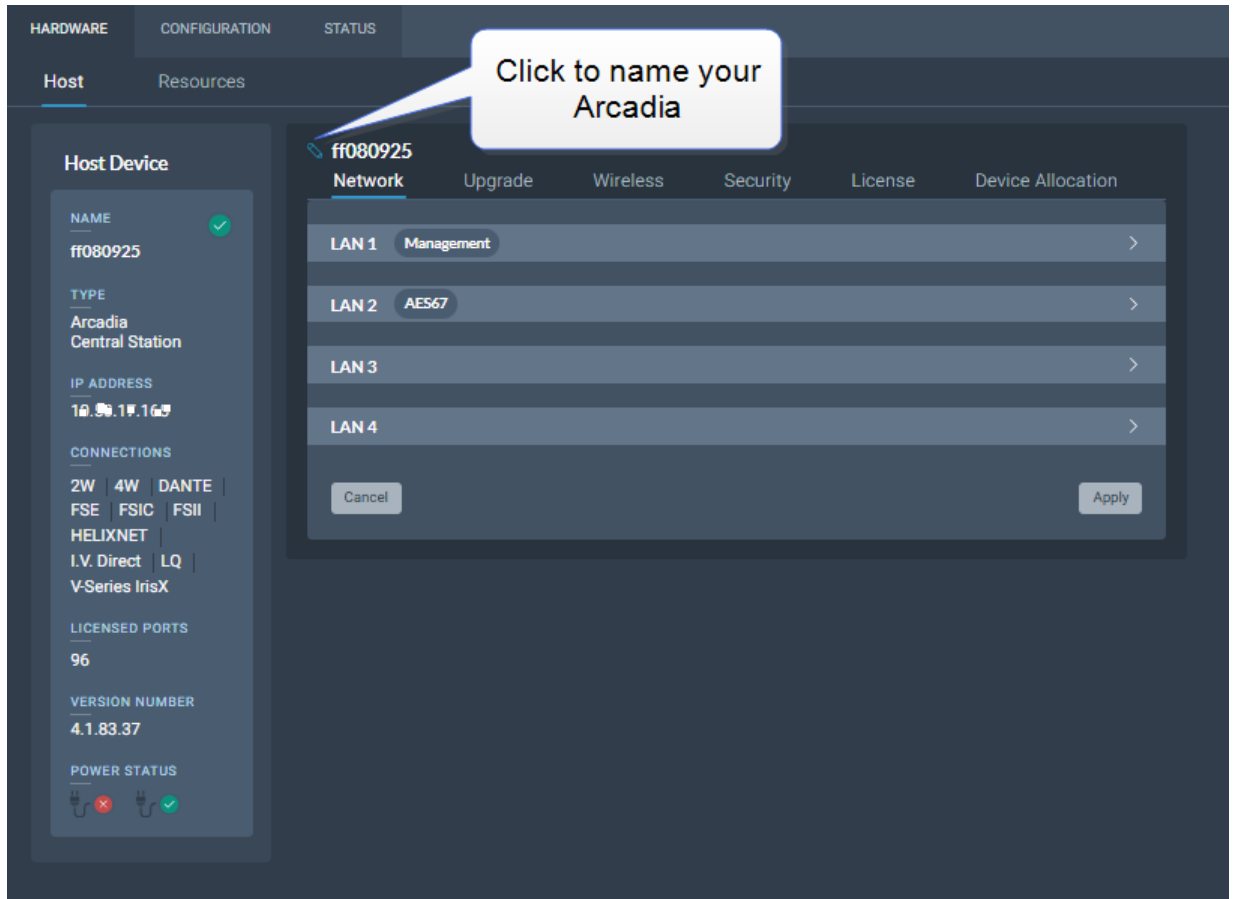

Here you can:

- Configure the network
- Upgrade the Arcadia and connected resources
- Change the following wireless beltpack system settings:
  - Beltpack administration pin numbers
  - FS Edge wireless region (important for system compliance)
  - FSII battery type, if you are not using the supplied Li-ion batteries you may use Alkaline or NiMH type batteries
- Configure security settings
- Add new licenses
- Set device allocation [Device Allocation on page 35](#)


Click the pencil icon  to name your Arcadia .

## 6.8 Configuring the Network

Your Arcadia Station has 4 LAN ports. Click on a dropdown arrow to configure network traffic and details for each port.

After changing the network configuration, you must click **Apply** or [Enter] key.

For information see: [LAN Configuration Rules on page 60](#).

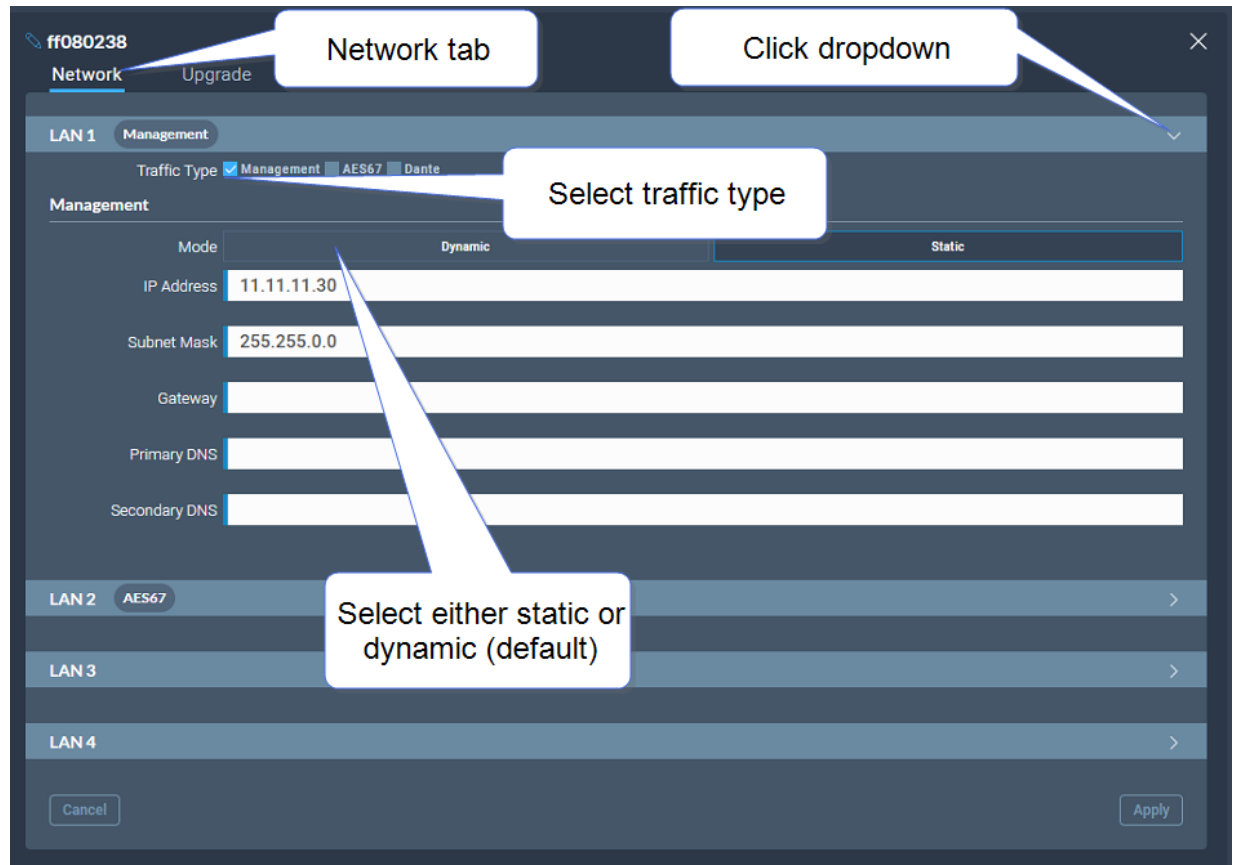

### 6.8.1 LAN Configuration Rules

**Note:** Do not plug any two LAN ports into the same LAN or VLAN. This can create a network loop affecting IP stability.

**Note:** Configuring/changing the AES67 IP address will cause the Arcadia to reboot.

#### AES67 Rules

- AES67 should not be on the same subnet as Management unless on the same LAN port
- AES67 cannot be on the same LAN port as DANTE primary or secondary

**Note:** Clear-Com recommends that you configure AES67 port on the Station to a Static IP address if there is no third-party DHCP server on the network.

## IP Rules

- The IP addresses cannot be in the reserved range: 10.0.0.0-10.0.0.7
  - The subnet mask may cause an overlap with the reserved range
- The IP addresses cannot be in the LQ tunnel range 172.23.xxx.xxx
- The IP addresses cannot be in the localhost range 127.xxx.xxx.xxx
- The IP addresses cannot be in the multicast range 224.xxx.xxx.xxx-239.xxx.xxx.xxx

## Static IP Rules

- The static IP addresses cannot be in link local range: 169.254.xxx.xxx

**Note:**

*Clear-Com recommends that you configure AES67 port on the Station to a Static IP address if there is no third-party DHCP server on the network.*

## Dante Rules

- Dante primary and secondary cannot be on the same LAN port (rear connector)

## Management Rules

- You cannot disable the Management LAN.


## 6.8.2 AES67 Network - PTP Follower Configuration

### PTP Follower Mode

- **Enabled:** The intercom station is set as PTP Follower
- **Disabled** (default setting): The intercom station is set as PTP Reference, unless there is a PTP Reference on the network with a priority higher than 127



Setting the PTP clocking status of your intercom stations

1. In the CCM, navigate to : **Hardware > Host > Network**[select the LAN that has been configured for AES67] > **PTP Follower Mode**
2. Select **Enabled**
3. Click **Apply**

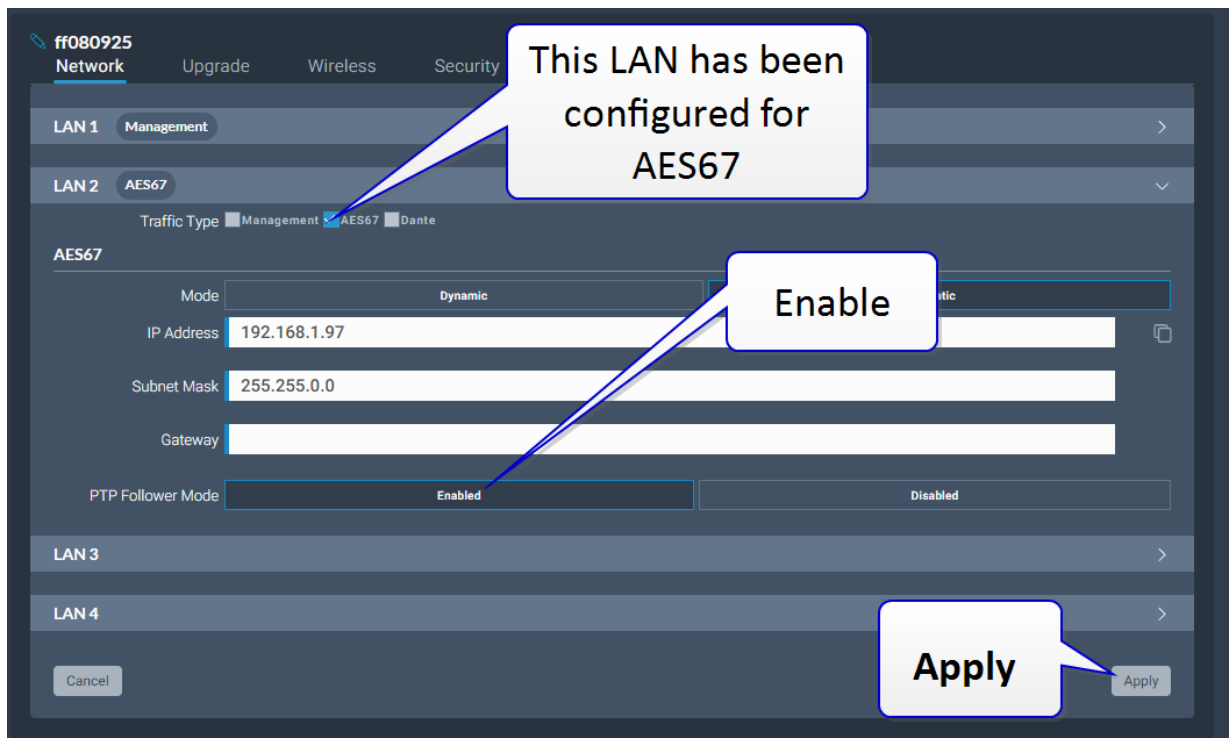

The system will warn you that there must be a Reference clock on your network. While the clock is synchronizing (or if there is no PTP Reference clock on your network) you will see **Status FREERUN** in the device **Stats** tab. When the clocks are synchronized, you will see **Status LOCKED**.

In the CCM navigate to : **Status > Overview > Host Device > Stats:**

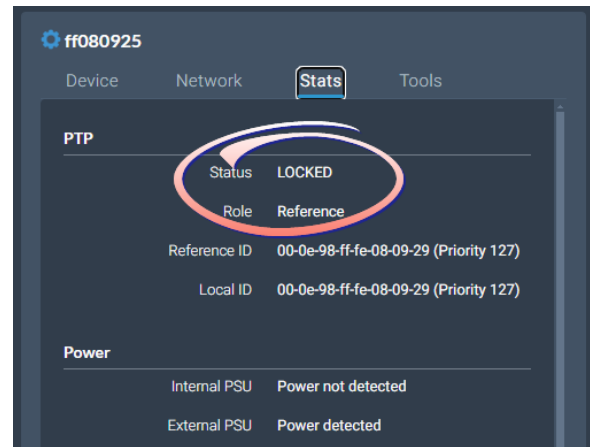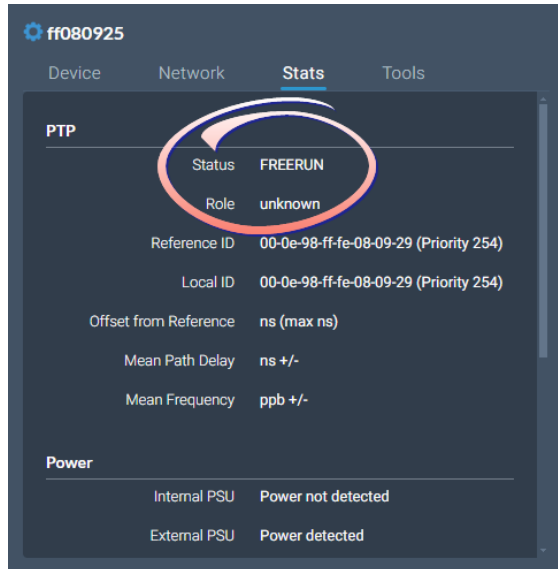


For information and history, also look in the event log: **Status > Event Log.**

## 6.9 Upgrading

To upgrade the Arcadia and connected resources:

1. Select the **Upgrade** tab.
2. **Select File** then navigate to where the upgrade file is stored on your computer.
3. Select the file and when the **Upgrade** button lights, click it. This begins the upgrade process.

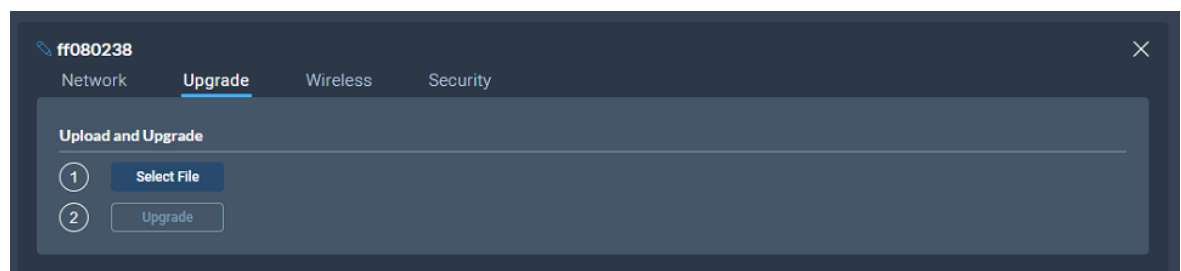

**Note:** Arcadia validates firmware versions to internal hardware. In some instances, Arcadia and its components cannot be downgraded. In these instances use a newer firmware version.

### 6.9.1 Upgrading using the CCM

1. In the CCM, navigate to **Hardware > Hosts > Upgrade.**
2. Press **Select File** and select the file containing the updated firmware.

3. When the file is uploaded, the **Upgrade** button will be enabled.
4. Press the **Upgrade** button.
5. The upgrade process will start and the Arcadia will reboot before being available again.
6. The new version of the firmware will be displayed in the **Hosts** panel.

## 6.9.2 Upgrading using a USB stick

1. Copy the firmware file onto a USB stick. The file must be at the top level of the USB drive, not within any folders.
2. Insert the USB into the USB port on the front of the Arcadia.
3. Press the **Menu** button.
4. Using the rotary controllers, navigate to **Administration > Software > Update**.
5. The display will show the available firmware files stored on the USB. Select the one you require.
6. Press the 4th rotary encoder. The unit will upgrade and then reboot.
7. To check the current firmware version, in the menu system navigate to **Administration > Software > Current**. The current software version is displayed in the 4th menu screen.

## 6.10 Setting Up the Wireless Beltpack System

Select the **Wireless** tab.

The screenshot shows the configuration interface for a wireless beltpack system. At the top, there are tabs for Network, Upgrade, **Wireless**, Security, License, and Device Allocation. The main content is organized into three sections:

- General:**
  - Administration PIN: 1111
  - System ID: 925
  - BP Role List Sorting: Role Number (dropdown)
- FreeSpeak Edge:**
  - Edge Wireless Region: US (dropdown)
  - Excluded Channel(s): Unassigned (dropdown)
- FreeSpeak Icon & FreeSpeak II:**
  - Splitter/Transceiver 1: RJ45 (dropdown)
  - Splitter/Transceiver 2: RJ45 (dropdown)
  - Audio RF Filter:  Enabled  Disabled
  - AA Battery Type: Alkaline (dropdown)
  - Over The Air (OTA) PIN: 0000

From the Wireless tab, you can set or view the following System and Station settings.

### 6.10.1 System

- The administration pin for local admin to access locked configuration menus on wireless beltpacks and keypanels
- System ID. This is used to differentiate this system's RF signals from those of other systems
- Beltpack role list sorting:
  - Role number
  - Alphabetical

## 6.10.2 FreeSpeak Edge

- The wireless region for your FreeSpeak Edge beltpacks. The region set here **MUST** match the hard-coded setting on your Edge transceiver or the system will not work. You will see an error flag in the **Status** page if the regions do not match. Please contact your Clear-Com representative if you have any difficulties with this.
- Select from a list of 5 GHz channels that you can exclude and prevent transceivers from using
- Scan all transceivers. Use this feature to scan the local 5 GHz RF space. All available channels will be scanned, and traffic reported. Each transceiver will be scanned and the system will report on the RF performance of selected channels. To view results of the scan and adjust channels, navigate to: **Hardware > Resources > Transceivers > [select a transceiver to view] > Wireless Channels**

**ff080274**  
Network Upgrade **Wireless** Security Lic

**General**

Administration PIN 1111

System ID 274

BP Role List Sorting Role Number

**Freespeak Edge**

Edge Wireless Region EU

Excluded Channel(s) Unassigned

5GHz Scan All

Auto Select All

**Freespeak II**

Splitter/Transceiver 1 RJ45

Splitter/Transceiver 2 RJ45

Audio RF Filter Enabled

AA Battery Type Alkaline

Over The Air (OTA) PIN 0000

**Wireless region**

Select any channels for exclusion

Scan and select transceivers. Only visible when one or more Edge transceivers are registered

### 6.10.3 FreeSpeak II and FreeSpeak Icon

- Splitter/Transceiver ports: select RJ45 or Fiber connectivity for each port
- Audio RF Filter (improve resilience to corrupt wireless transmission) - for use with E1 1.9GHz transceivers only
- AA Battery type. You can choose not to use the Li-ion batteries supplied with the belt packs, in which case you must specify battery type here. Choose between:
  - Alkaline (AA) batteries (default setting)
  - NiMH batteries for use in settings where air pressure is an issue (for instance on an underwater site).
- The OTA pin you need for over-the-air (OTA) registration of your FreeSpeak II and FreeSpeak Icon belt packs.

## 6.11 Configuring Device Allocation

The screenshot shows the Clear-Com web interface for configuring device allocation. The main content area displays the 'Device Allocation' tab for host 'ff080925'. Below the title, there is a description: 'Provides the ability to redeploy the device hardware resources for Licensed Port use. Changes require a reboot.' A table lists the current allocation settings:

| Active | Label        | HelixNet Channels | I.V. Panels/Directs |
|--------|--------------|-------------------|---------------------|
| ✓      | Allocation 1 | 24                | 16                  |
|        | Allocation 2 | 12                | 24                  |
|        | Allocation 3 | 6                 | 28                  |
|        | Allocation 4 | 0                 | 32                  |

An 'Apply' button is located at the bottom right of the table.

For explanation see: [Device Allocation on page 35](#)

### Configuring Device Allocation

1. Navigate to **Hardware > Host > Device Allocation**
2. The **Device Allocation** tab will display the current allocation with a check mark

3. To change the allocation, click on the desired row. This will highlight the row and enable the **Apply** button in the bottom right corner
4. Click **Apply**
5. Clicking **Continue** will apply the new allocation and reboot the device

**Note:** *There can be a delay in showing the reboot pop-up after clicking **Apply** if a large number of HelixNet/I.V.Ports are being removed*

### Decreasing HelixNet Channels

- If you decrease the number of HelixNet Channels, all HelixNet Channels will be disabled. You can re-enable HelixNet capabilities in the necessary channels after reboot, provided you have enough licenses and the allocation limit is not reached

### Decreasing I.V.Ports

- The system will delete the most recently created I.V.Panel/Direct ports.

## 6.12 Resources

Click the **Resources** tab to see the resources page. This gives an overview of the hardware and ports that are present. From this page, you can use the **Add Resource** button to:

- View a list of both discovered and registered IP transceivers
- Add/remove any discovered IP transceivers to/from the system
- Register beltacks to the system
- View a list of both discovered and paired HelixNet devices
- Add/remove any discovered HelixNet devices to/from the system
- View a list of V-Series keypanels with connection status
- Add/remove keypanels
- Enable/disable licensed ports (keypanels and I.V. Directs). If a port license is disabled, the port will remain in your configuration but you will not be able to connect to it and it will not consume one of your licensed port capacity. Port licenses are disabled to conserve license capacity.
- View a list of configured I.V. Directs, with connection status
- Add/remove I.V. Directs
- Create Dante ports

- Adjust settings on interface ports: 2-wire and 4-wire
- Allocate **Licensed Ports** for use with different connection types: **Any**, **Dante**, **Wireless**, **I.V. Ports**, **AES67 Keypanels**, **HelixNet**. This allows you to keep track of how you are using the licensed port capacity that you have, and avoid being unable to connect due to lack of available port capacity.

## 6.12.1 Configuring System Resources

- Transceivers
- Endpoints
- Physical ports; 2-wire, 4-wire, Stage Announce, Program
- I.V. Ports
- Dante ports
- Licensed ports

The screenshot displays the 'Resources' configuration page in the Clear-Com web interface. The page is divided into two main sections: 'Host Device' and a list of resource categories.

**Host Device Information:**

- NAME:** ff080925 (with a green checkmark)
- TYPE:** Arcadia Central Station
- IP ADDRESS:** 10.50.17.165
- CONNECTIONS:** 2W, 4W, DANTE, FSE, FSIC, FSII, HELIXNET, I.V. Direct, LQ, V-Series IrisX
- LICENSED PORTS:** 96
- VERSION NUMBER:** 3.2.83.47
- POWER STATUS:** Indicated by a red 'X' and a green checkmark.


**Resource Categories:**

- Transceivers:** 0/10 ONLINE
- Endpoints:** 2/3 ONLINE
- Physical Ports:** 9/13 IN USE
- I.V. Ports:** 1/1 ONLINE
- Dante Ports:** 0/0 ONLINE
- Licensed Ports:** 6/96 IN USE

Each category has a plus icon and a dropdown arrow. A 'Capture screenshot' button is visible at the bottom of the interface.

### Transceivers

Click the dropdown arrow to see transceivers connected to your system. Select a transceiver to configure it or view details.

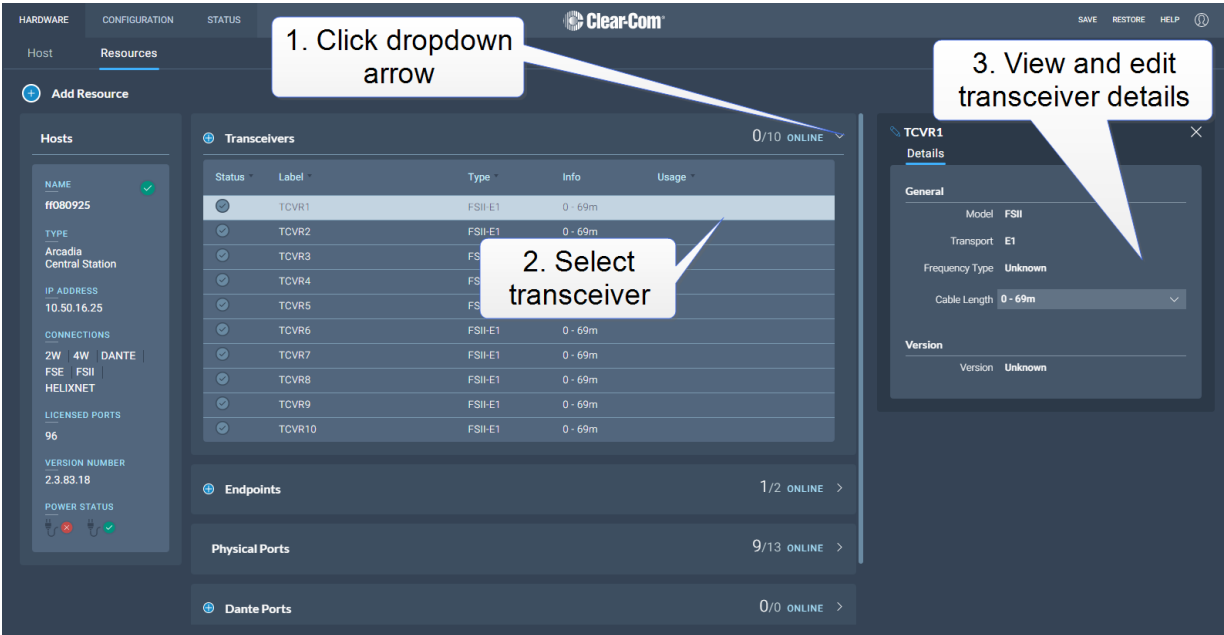


For IP transceivers you will also set networks details in this page. For Edge transceivers you will configure channels and conduct a local area RF scan and set channels automatically for each transceiver.

### Endpoints


If you click the down arrow in the **Endpoints** section of the screen you will see a list of connected Endpoints (FreeSpeak and HelixNet beltpacks, HelixNet remote and speaker stations, V-Series keypanels). Select an Endpoint to show configuration details such as:

- Fix/unfix a role. If a role is fixed to a beltpack, the user cannot select from a list of roles on powering on the beltpack.
- Reboot some devices.
- Unregister (FreeSpeak) or unpair (HelixNet) a beltpack from the system.

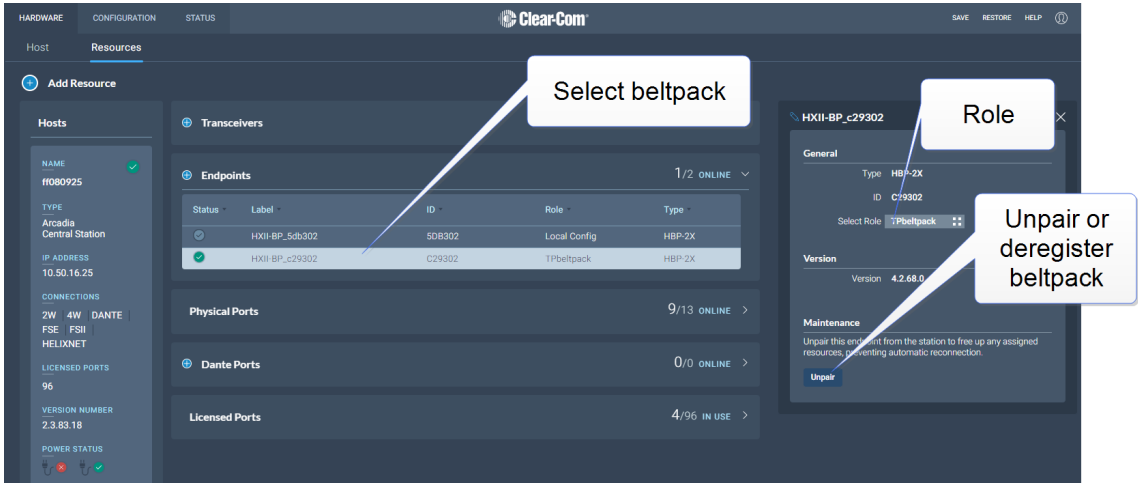


### Physical Ports

Click the dropdown arrow to see the physical ports on your Arcadia. Select a port to configure it or view details.

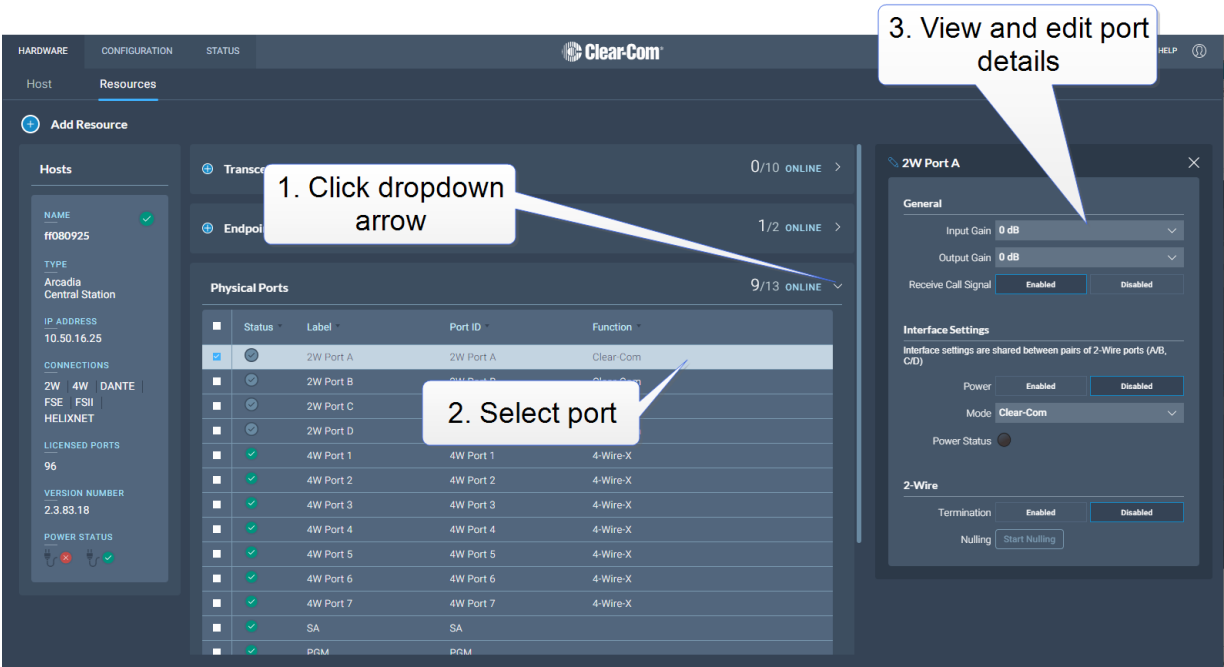

### I.V. Ports


Click the dropdown to see I.V. connections (Directs or keypanels) configured on your Arcadia. Select a port to configure it or view details.

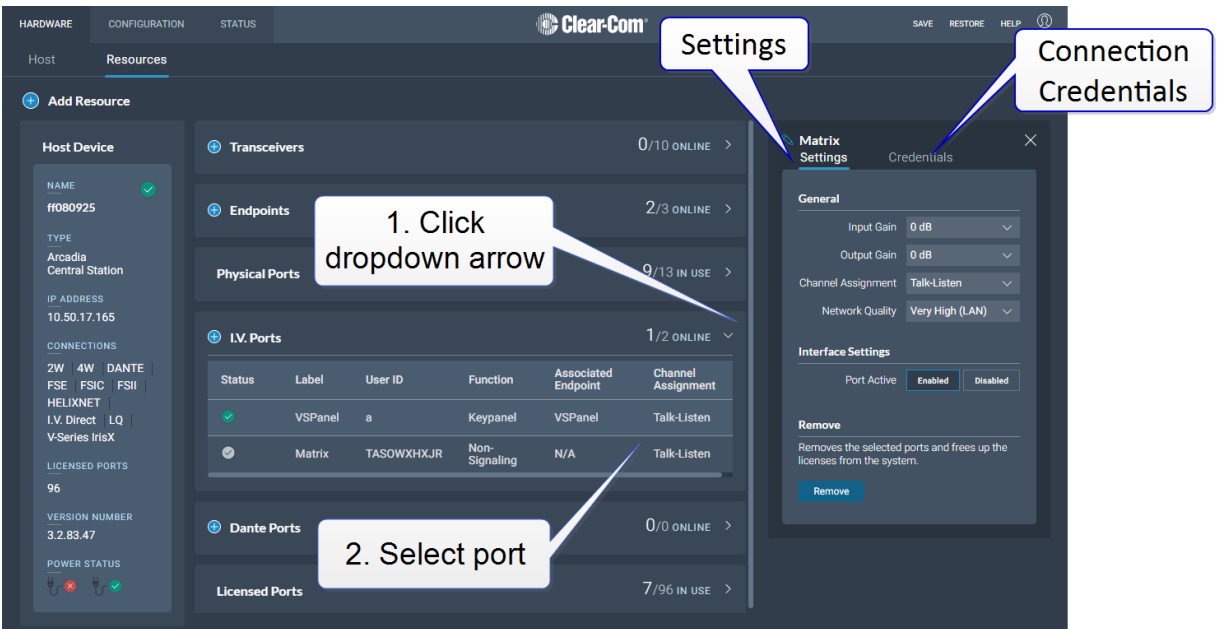

For more information, see [Configure I.V. Direct in the Arcadia CCM on page 168](#) or [Adding an I.V. Keypanel in the CCM on page 154](#)

### Error messages - I.V. Ports

Click or hover on the red cross to see error messages

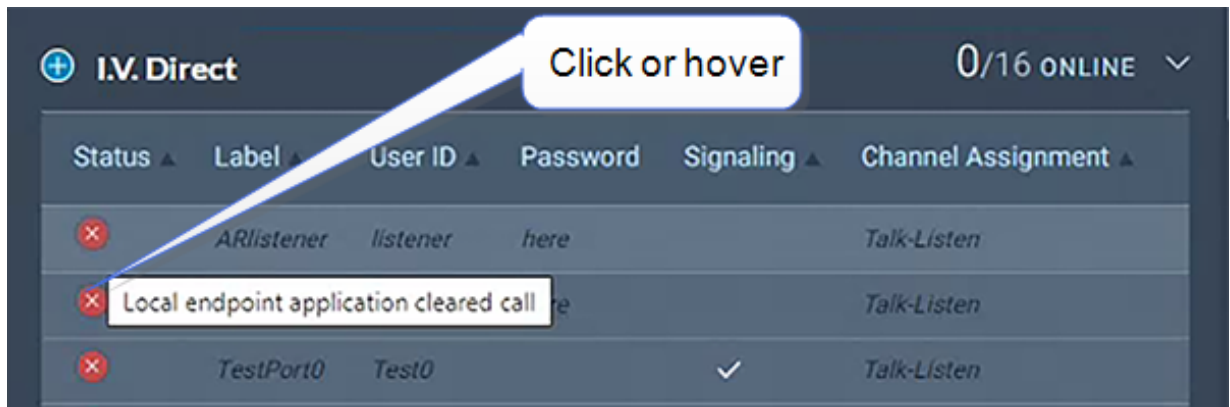

In the event of a connection failure you will see the following error messages:

| Message   | Reasons for closing the connection  |
|---|---|
| <p><i>Local endpoint application cleared call</i></p> <p>The local device has closed a connection</p>     | <p>The License was removed on the local side (Arcadia) for an active I.V. Direct connection</p> <p>The username and password were changed on the local side (Arcadia) for an active I.V. Direct connection</p> <p>There are no free licenses for I.V. Direct ports on the local side</p>  |
| <p><i>Remote endpoint application cleared call</i></p> <p>The remote device has closed the connection</p> | <p>The username and password were changed on the remote side (LQ/Arcadia/EHX) for an active connection</p> <p>The License was removed on the remote side (LQ/Arcadia/EHX) for an active connection</p> <p>The I.V. Direct port was disabled on the remote side (LQ/Arcadia/EHX) for an active connection</p> <p>There are no free licenses for I.V. Direct ports on the remote side</p> |
| <p><i>Call failed a security check and was ended</i></p>  | <p>The username or password is wrong</p>  |

## Dante Ports

Click the dropdown arrow to see the Dante connections on your Arcadia. Select a port to configure it or view details.

## Licensed ports


This section allows you to see and keep track of port licenses and how you are using them in your system. For example, if you know that you must have 14 wireless beltpacks connected, you can allocate 14 ports as 'Wireless' here. If you try to connect a device that you do not have a port type allocated for, the connection will be refused. Select use type for ports:

- Any (**default setting**) - in this case, any connection type is possible
- Dante
- Wireless
- I.V. Port
- AES67 Keypanel Port
- HelixNet

The screenshot shows the Clear-Com Arcadia Central Station interface. The 'Licensed Ports' section is highlighted, showing a table with columns for ID, Allowed Endpoint, In Use By, and Type. The table contains 8 rows, all with 'Any' in the 'Allowed Endpoint' column and 'HelixNet' in the 'Type' column. A callout box labeled '1. Click dropdown arrow' points to the dropdown arrow in the 'Dante Ports' section. Another callout box labeled '2. Select port' points to the 'Type' column in the 'Licensed Ports' table. A third callout box labeled '3. Select port type' points to the 'Type' dropdown in the 'Port 1' configuration dialog.

| ID | Allowed Endpoint | In Use By | Type     |
|----|------------------|-----------|----------|
| 1  | Any              | Channel 1 | HelixNet |
| 2  | Any              | Channel 2 | HelixNet |
| 3  | Any              | Channel 3 | HelixNet |
| 4  | Any              | Channel 4 | HelixNet |
| 5  | Any              |           |          |
| 6  | Any              |           |          |
| 7  | Any              |           |          |
| 8  | Any              |           |          |

## 6.13 Configuration Overview

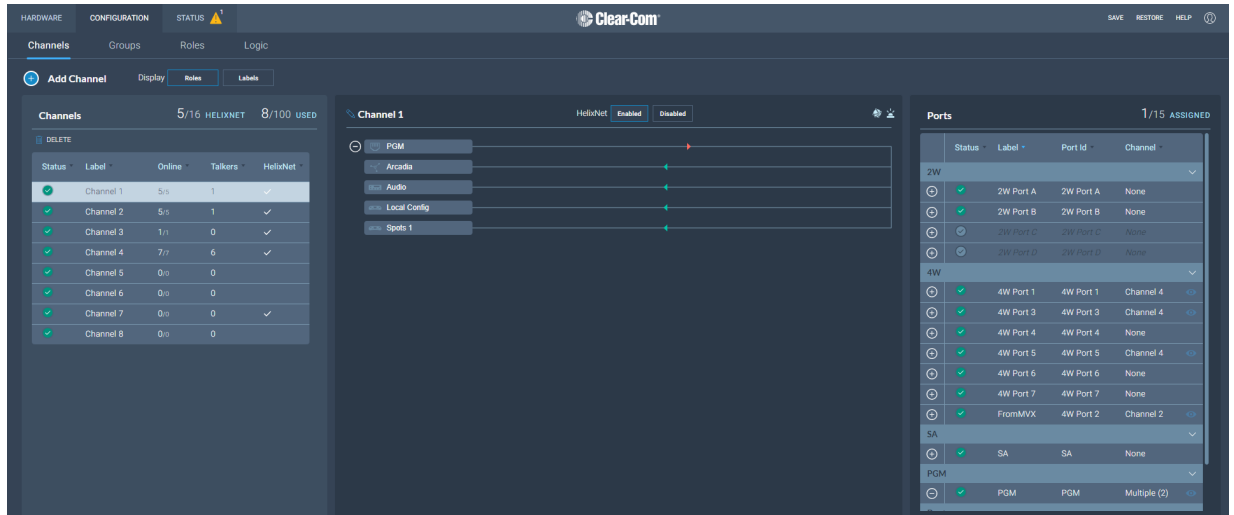

The **Configuration** page of the CCM is where you configure the intercom routing aspects of your system (add audio to channels and set up talk and call keys for beltpacks). It consists of four areas:

- Channels
- Roles
- Groups
- Logic (GPIOs)

The **Configuration** page enables you to:


- View existing channels and add new channels
- Add ports to channels
- View existing groups and add new groups
- View and edit roles for user stations
- View and edit General Purpose Inputs (GPIs) and General Purpose Outputs (GPOs)

## 6.14 Channels and Groups

Channels and groups are both essentially digital containers for audio sources, allowing communication between members.

### 6.14.1 Channels


A Channel operates as an intercom Partyline or conference. All members can talk to and listen to all other members, as long as they have keys to do so.

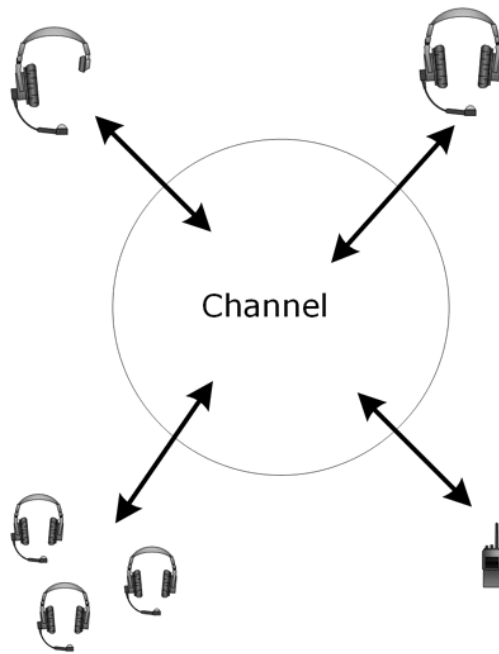

The default key behavior setting for a wireless beltpack in a Channel is **Talk and Forced Listen**. For more information, see **Key Behavior**.

## 6.14.2 Groups


A Group configuration enables an announcement or broadcast to a number of members at the same time.

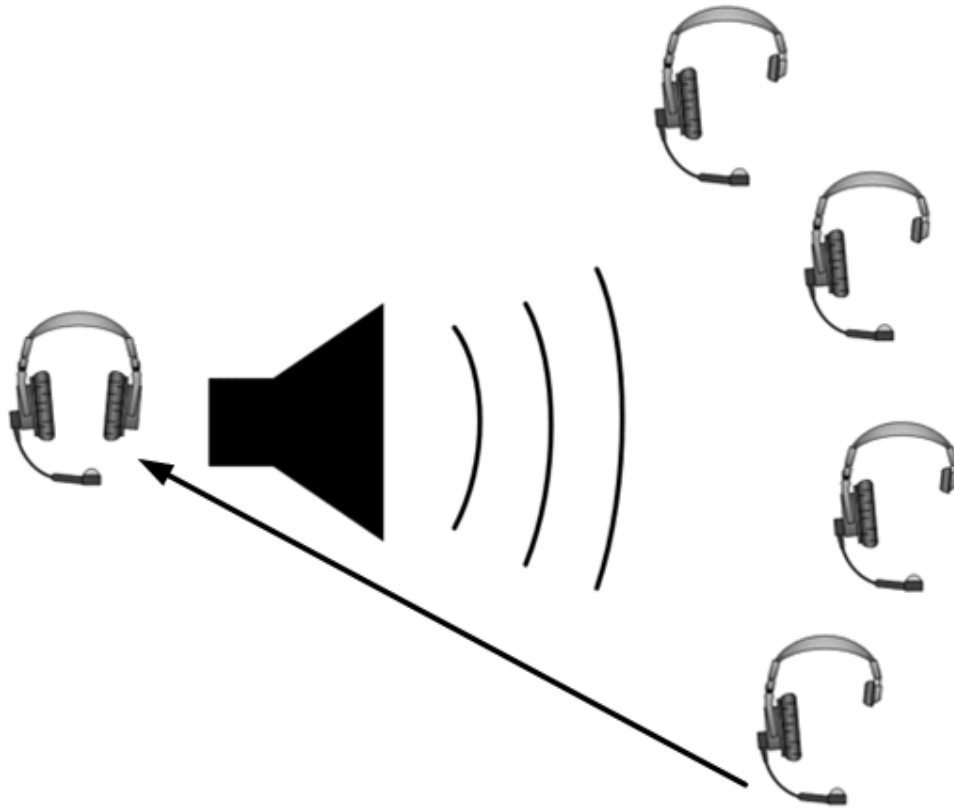

A group member can reply directly to the announcer using the **Reply** key. The other group members will not hear this.

To set up a group, you must first put the members in the Group. Then, when the members are in the Group, you can set up a key or keys to talk to it.

# 6.15 Channels

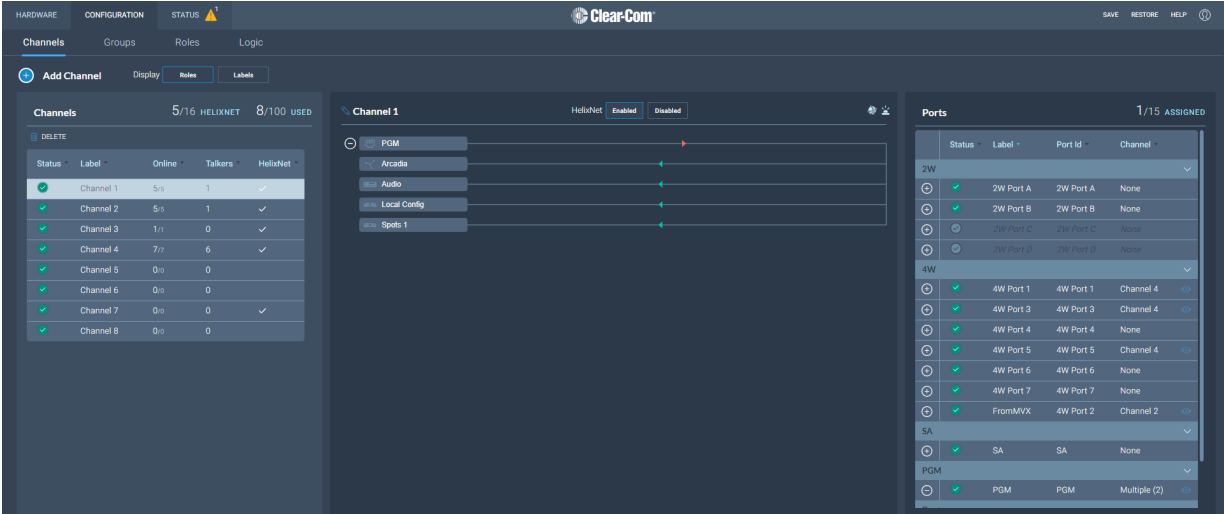


The Channels page enables you to view channels and add ports to channels. Audio keys are added to channels in the **Roles** page. The center panel on this screen shows the live state of audio routing.

## 6.15.1 Managing Channels

From the **Channels** tab, you can:

- View existing channels and add or remove new channels.
- View existing ports, and add or remove ports from the channel.

To access the **Channels** screen, navigate to **Configuration > Channels**. The Channels screen appears.

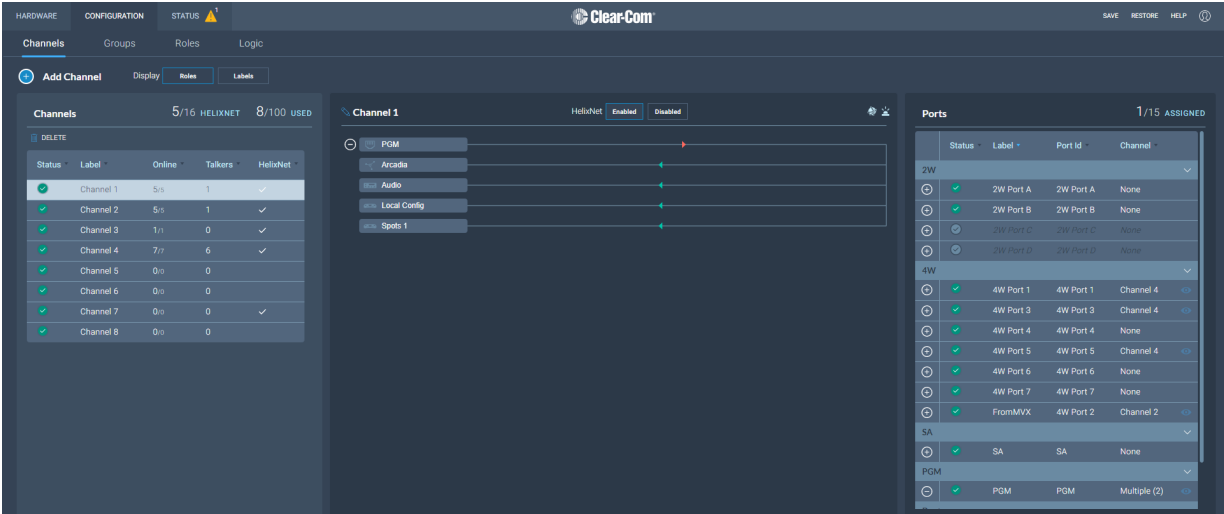

## Viewing Information About a Channel

When you open the **Channels** screen, the left-hand panel displays a list of all the channels that are currently present. The following information is displayed for each channel.

The screenshot shows the 'Channels' screen with a table of channels. Callouts point to various elements:

- Click this icon to delete a channel:** Points to the three-dot menu icon in the top left of the table.
- A green tick mark indicates that all configured ports are connected:** Points to the green checkmark in the 'Status' column for Channel 1.
- This indicates how many users are talking on this channel:** Points to the 'Talkers' column value of 1 for Channel 1.
- The channel count indicates that eight out of a maximum of 100 channels:** Points to the '8/100 USED' text in the top right.
- This is a label for the channel:** Points to the 'Channel 1' text in the 'Name' column.
- This indicates how many configured ports are connected:** Points to the '2/2' text in the 'Online' column for Channel 1.

| Status | Id | Name      | Online | Talkers |
|--------|----|-----------|--------|---------|
| ✓      | 1  | Channel 1 | 2/2    | 1       |
| ✓      | 2  | Channel 2 | 0/0    | 0       |
| ✓      | 3  | Channel 3 | 0/0    | 0       |
| ✓      | 4  | Channel 4 | 0/0    | 0       |
| ✓      | 5  | Channel 5 | 0/0    | 0       |
| ✓      | 6  | Channel 6 | 0/0    | 0       |
| ✓      | 7  | Channel 7 | 0/0    | 0       |

### Status

A green tick mark indicates that all the ports that are configured for the channel are connected. Otherwise, a warning triangle is shown.

### Name

This field contains a label that enables you to identify the channel.

**Note:** A label can contain up to 10 characters. You can edit this label from the center panel.


### Online

This indicates how many of the total channel members are online.

### Talkers

This indicates how many members have active talk routes on this channel.


### Display Roles or Labels

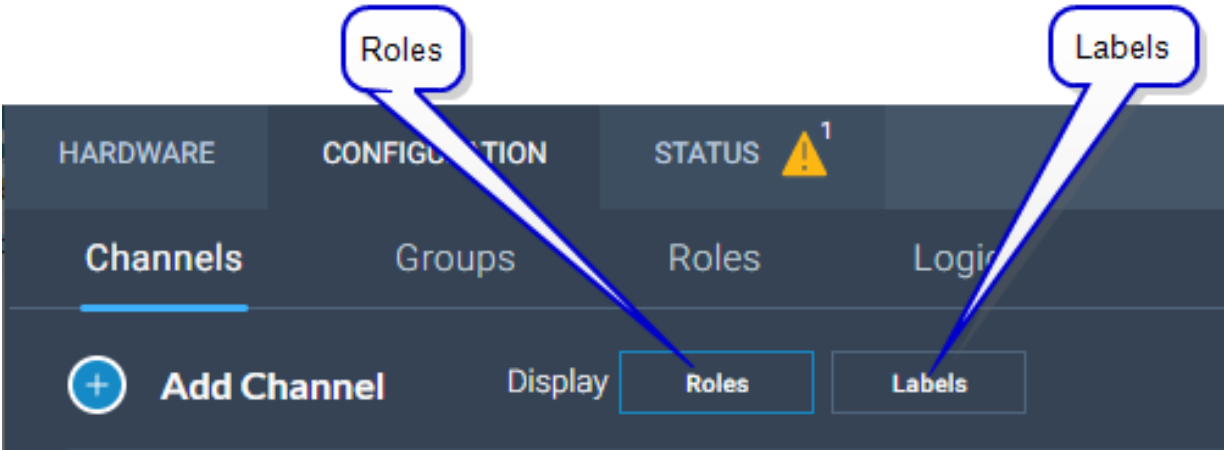

### Display Roles




### Display Labels

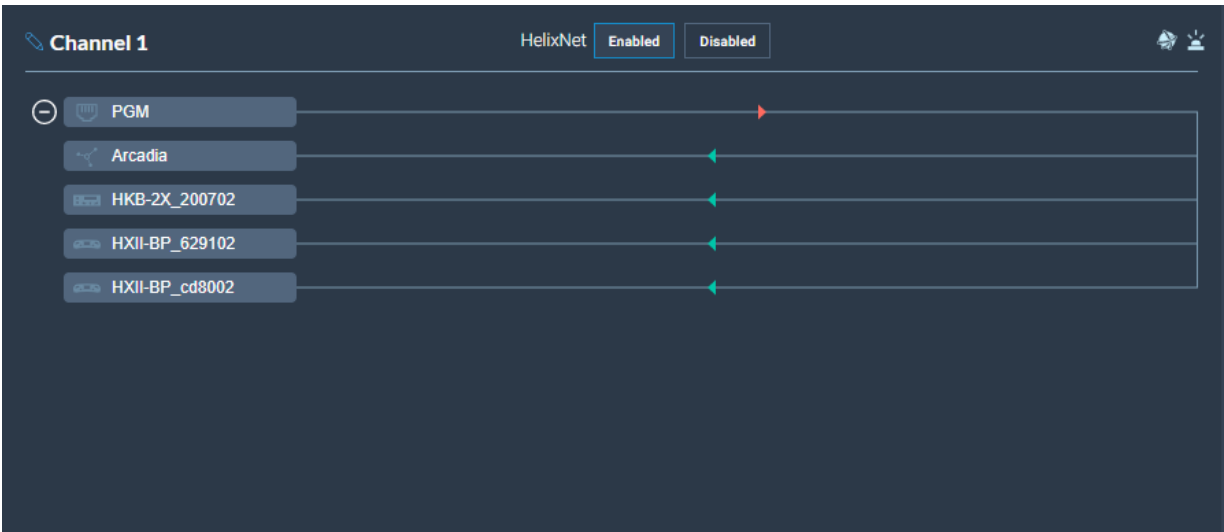

## Adding a New Channel

To add a new channel:


1. Click the new channel icon . A new entry appears in the list of added channels.


**Note:** *You can only add new channels up to a maximum number (100).*

2. Add any required ports to the channel.

### Adding Ports to a Channel

To add ports to a channel:

1. From the **Channel** panel, select the channel in which the port is to be added.
2. From the **Ports** panel, click the add port icon  of the port that you require.

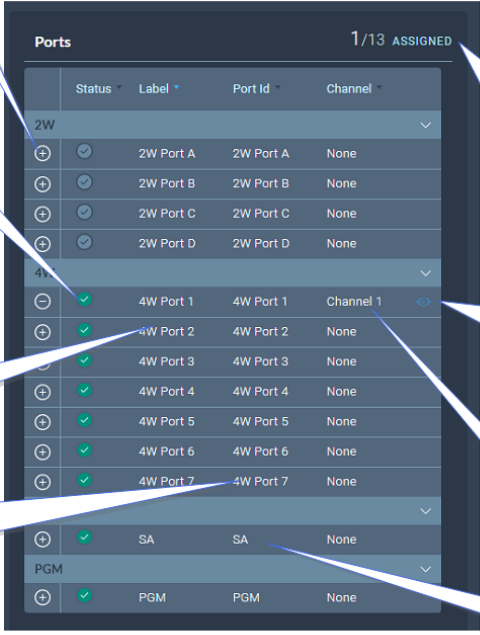

Click here to add this port to a channel

A green checkmark indicates that the port is online

This is a label that helps you to identify the port

This identifies the port. Changing the label does not affect the Port Id

This indicates how many of the total number of ports are assigned to the currently selected channel


Click on the eye icon to highlight the channels that the port is assigned to

This is the name of the channel that the port is currently assigned to

Stage Announcement

| Status     | Label     | Port Id   | Channel   |
|------------|-----------|-----------|-----------|
| <b>2W</b>  |           |           |           |
| +          | 2W Port A | 2W Port A | None      |
| +          | 2W Port B | 2W Port B | None      |
| +          | 2W Port C | 2W Port C | None      |
| +          | 2W Port D | 2W Port D | None      |
| <b>4W</b>  |           |           |           |
| +          | 4W Port 1 | 4W Port 1 | Channel 1 |
| +          | 4W Port 2 | 4W Port 2 | None      |
| +          | 4W Port 3 | 4W Port 3 | None      |
| +          | 4W Port 4 | 4W Port 4 | None      |
| +          | 4W Port 5 | 4W Port 5 | None      |
| +          | 4W Port 6 | 4W Port 6 | None      |
| +          | 4W Port 7 | 4W Port 7 | None      |
| <b>SA</b>  |           |           |           |
| +          | SA        | SA        | None      |
| <b>PGM</b> |           |           |           |
| +          | PGM       | PGM       | None      |

The port is now added to the channel, and appears in the list of ports in the center panel.

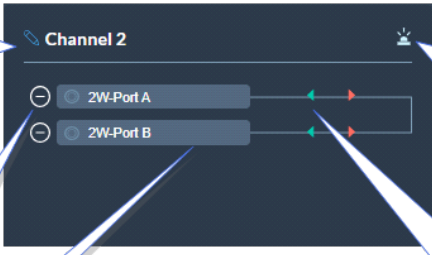

Click here to edit the channel label

Click here to remove the port from the channel

This is the label of the port

When this is lit it indicates that a call signal is active in this channel

The green arrows indicate active listen (left arrow). The red arrows indicate active talk (right arrow).

## Removing Ports From a Channel

To remove a port from a channel:

1. From the **Channels** panel, select the required channel.

2. Click the remove icon  of the port that you want to remove.

The port is removed.

## Deleting a Channel

To delete a channel:


1. From the **Channels** panel, select the channel that you want to delete.
2. Remove all the ports from the channel

**Note:** If you do not remove the ports, you will be prompted to do so in step 3.

3. Click the **More Actions** icon , and select **Delete**.

## Enabling Channels for HelixNet

If you wish to use HelixNet in a channel, that channel must be enabled for HelixNet. By default, channel 1, 2, 3 and 4 are enabled for use with HelixNet products.

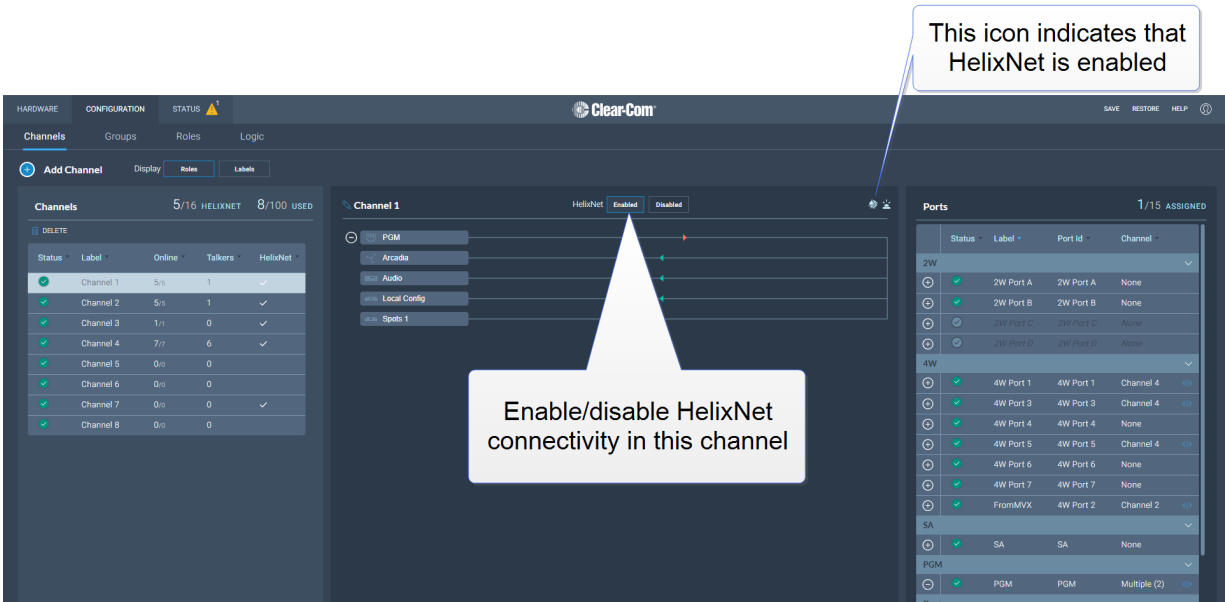

This icon indicates that HelixNet is enabled


Enable/disable HelixNet connectivity in this channel

| Status | Label     | Online | Talkers | HelixNet |
|--------|-----------|--------|---------|----------|
| ✓      | Channel 1 | 5/5    | 1       | ✓        |
| ✓      | Channel 2 | 5/5    | 1       | ✓        |
| ✓      | Channel 3 | 1/1    | 0       | ✓        |
| ✓      | Channel 4 | 7/7    | 6       | ✓        |
| ✓      | Channel 5 | 0/0    | 0       | ✗        |
| ✓      | Channel 6 | 0/0    | 0       | ✗        |
| ✓      | Channel 7 | 0/0    | 0       | ✗        |
| ✓      | Channel 8 | 0/0    | 0       | ✗        |

| Status | Label     | Port Id   | Channel      |
|--------|-----------|-----------|--------------|
| ✓      | 2W Port A | 2W Port A | None         |
| ✓      | 2W Port B | 2W Port B | None         |
| ✓      | 2W Port C | 2W Port C | None         |
| ✓      | 2W Port D | 2W Port D | None         |
| ✓      | 4W Port 1 | 4W Port 1 | Channel 4    |
| ✓      | 4W Port 3 | 4W Port 3 | Channel 4    |
| ✓      | 4W Port 4 | 4W Port 4 | None         |
| ✓      | 4W Port 5 | 4W Port 5 | Channel 4    |
| ✓      | 4W Port 6 | 4W Port 6 | None         |
| ✓      | 4W Port 7 | 4W Port 7 | None         |
| ✓      | FromMXV   | 4W Port 2 | Channel 2    |
| ✓      | SA        | SA        | None         |
| ✓      | PGM       | PGM       | Multiple (2) |

**Note:** A HelixNet enabled channel will consume one of your licensed ports.

# 6.16 Groups

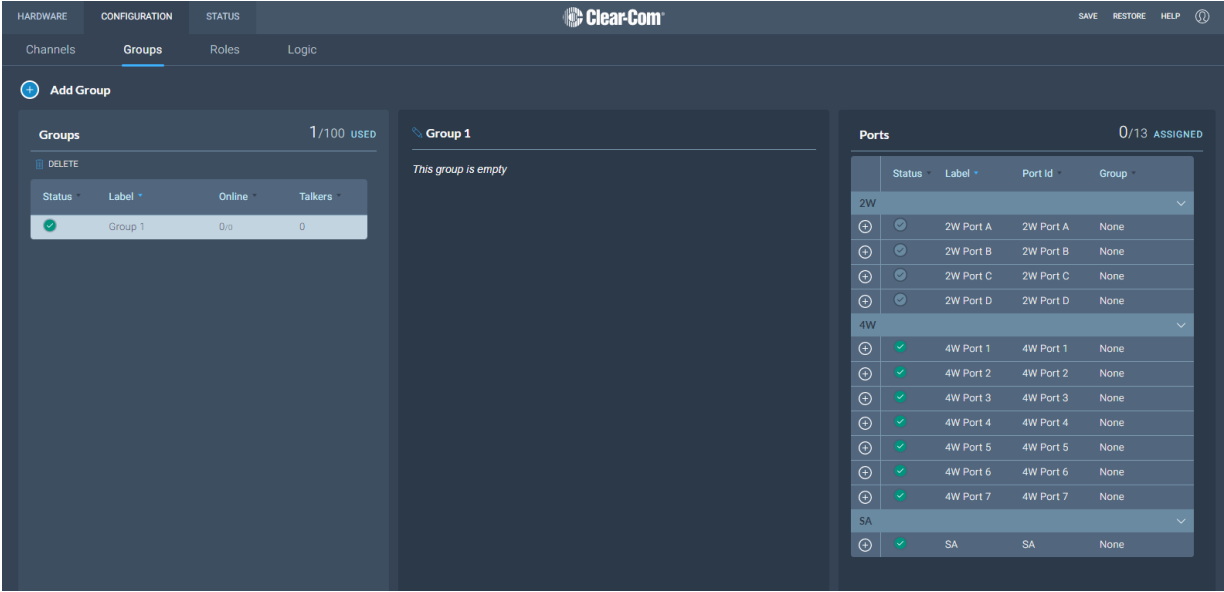

The Groups Page allows you to view Groups and add ports to Groups. Roles are added to Groups in the **Roles** page.


## 6.16.1 Managing Groups

From the **Groups** tab, you can:

- View existing groups and add or remove new groups.
- View existing ports, and add or remove ports from the groups.


**Note:** *Wireless beltpacks and keypanels are added to Groups in the Roles page.*

To access the **Groups** screen, navigate to **Configuration > Groups**. The Groups screen appears:

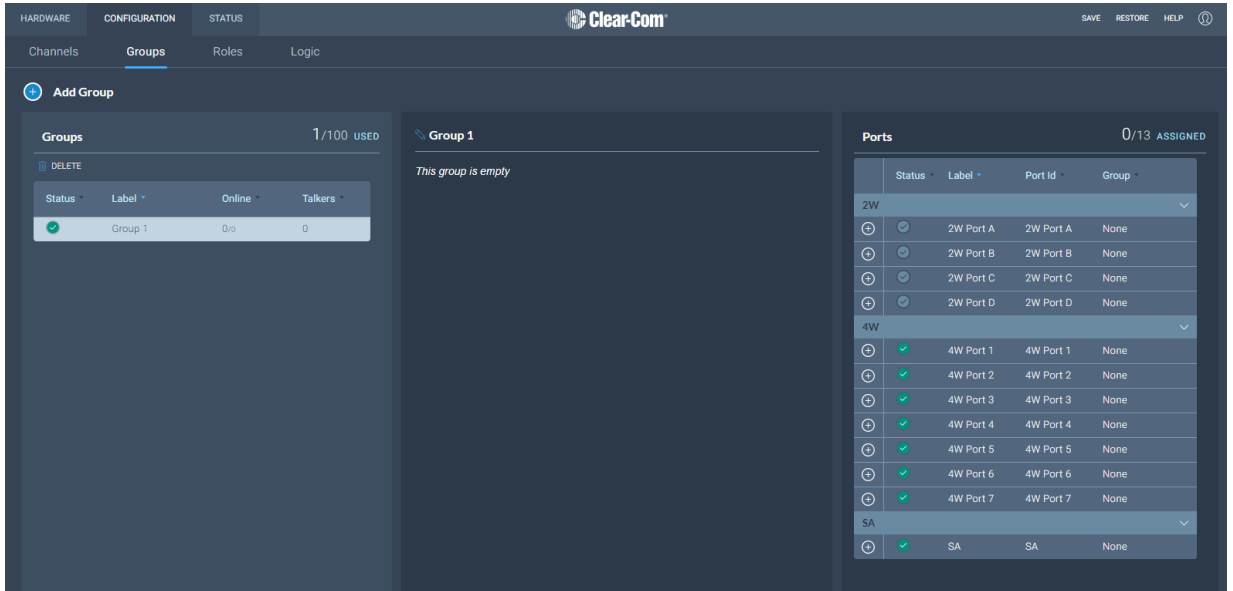

## Viewing Information About a Group

When you open the **Groups** screen, the left-hand panel displays a list of all the groups that have been created. The following information is displayed for each group.

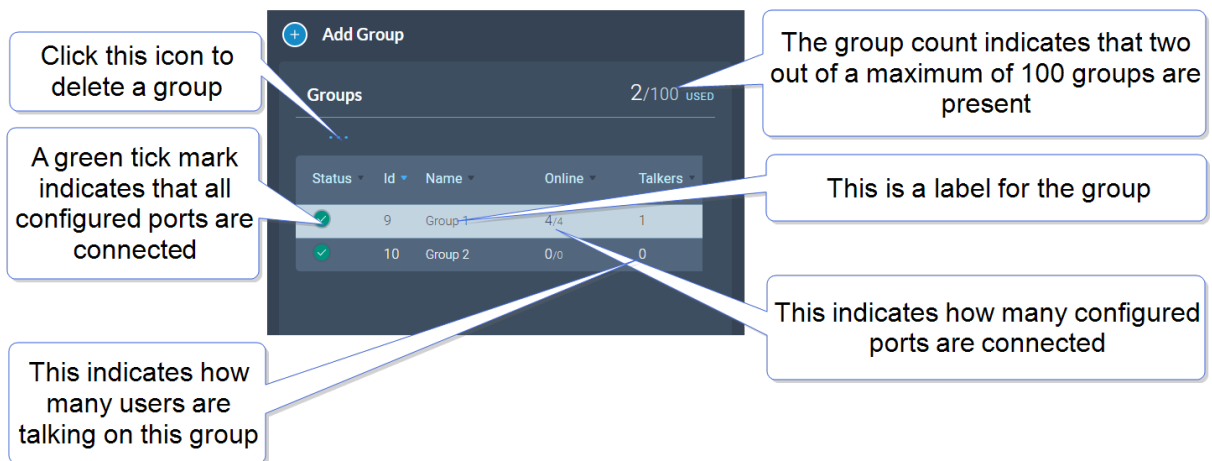

### Status

A green tick mark indicates that all the ports that are configured for group are connected. Otherwise, a warning triangle is shown.

### Name

This field contains a label that enables you to identify the group.

**Note:** A label can contain up to 10 characters. You can edit this label from the center panel.

### Online


This indicates how many of the total group members are online.

### Talkers

This indicates how many FreeSpeak beltpacks, V-Series keypanels or logic-routed ports have active talk routes on this group.

### Adding a New Group

To add a new group:

1. Click the new group icon . A new entry appears in the list of added groups.


**Note:** You can only add new groups up to a maximum number (100).


2. You can now add any required ports and members to the group.

## Adding Ports and Roles to a Group

To configure a group you must first put the members in the group. These can be ports and/or roles. When you have done this you will configure a talk key to the group (group administrator).

### Adding Ports to a Group

1. From the **Group** panel, select the group in which the port is to be added.
2. From the **Ports** panel, click the add port icon  of the port that you require.

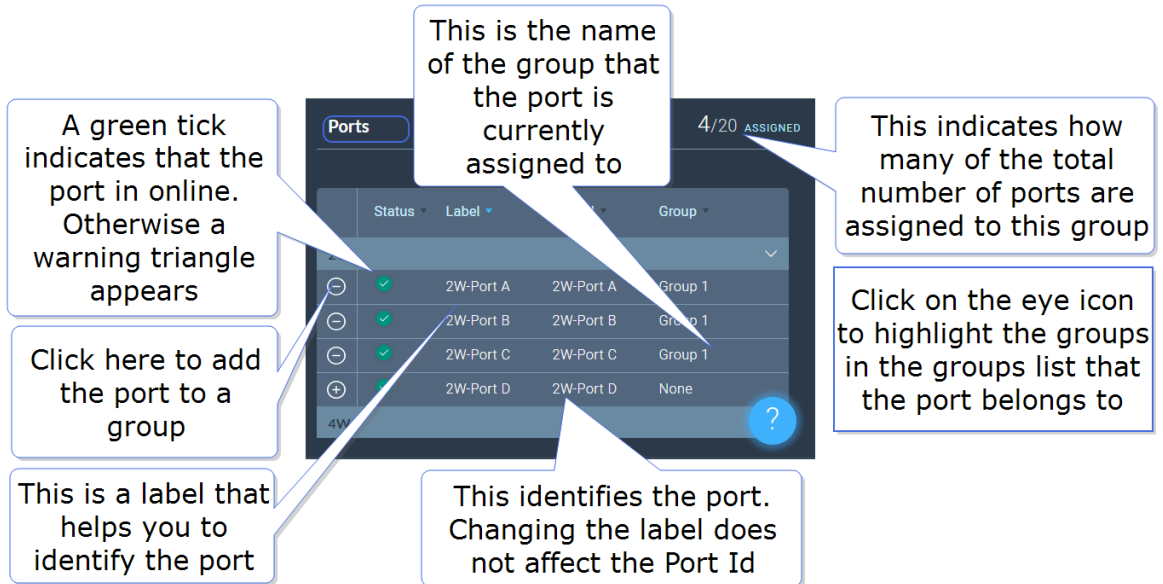

A green tick indicates that the port is online. Otherwise a warning triangle appears

Click here to add the port to a group

This is a label that helps you to identify the port

This identifies the port. Changing the label does not affect the Port Id

This is the name of the group that the port is currently assigned to

This indicates how many of the total number of ports are assigned to this group

Click on the eye icon to highlight the groups in the groups list that the port belongs to


| Status | Label     | Group   |
|--------|-----------|---------|
| ✓      | 2W-Port A | Group 1 |
| ✓      | 2W-Port B | Group 1 |
| ✓      | 2W-Port C | Group 1 |
| ✓      | 2W-Port D | None    |

The port is now added to the group, and appears in the list of ports in the center panel.


### Adding Roles to a Group


1. In the **Roles** page, select the role you wish to add to the group.
2. On the left side of the screen, select **Group Membership**.

**Group Membership**

Group Membership **Unassigned** 

**Headset**


Limiters **0 dB** 

Sidetone Gain **-12 dB** 

Sidetone Control **Tracking** **Non-Tracking** **Disabled**


Headphone Detect **Enabled** **Disabled**

Headset Mic Type **Dynamic** **Electret**

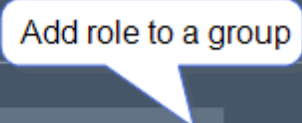


## Configuring a Talk Key to the Group

1. In the **Roles** page, select the role you want to talk to the group.
2. Configure a talk key to the group (Talk Only)

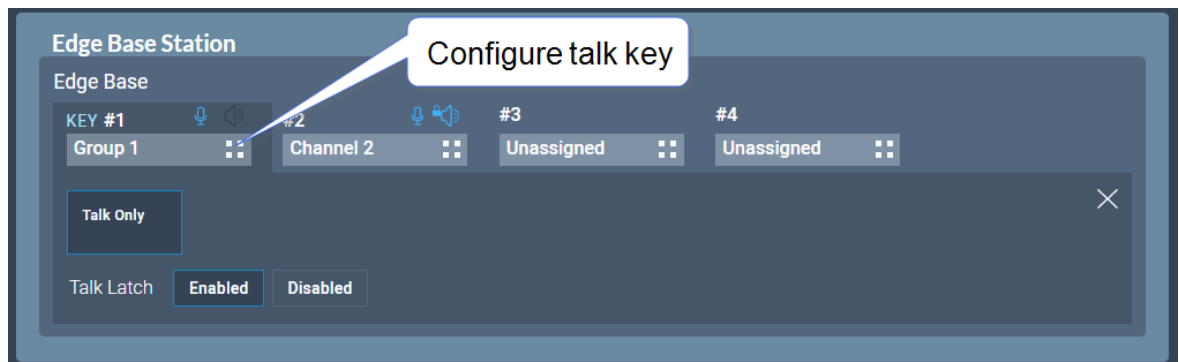

3.

When you have configured members and a talk key to a group, you will see the group by selecting it in the **Groups** page. The group administrator will talk to the whole group. The group members can talk directly back to the group administrator using the **Reply** key. This communication will not be broadcast to the group, only the administrator will hear.

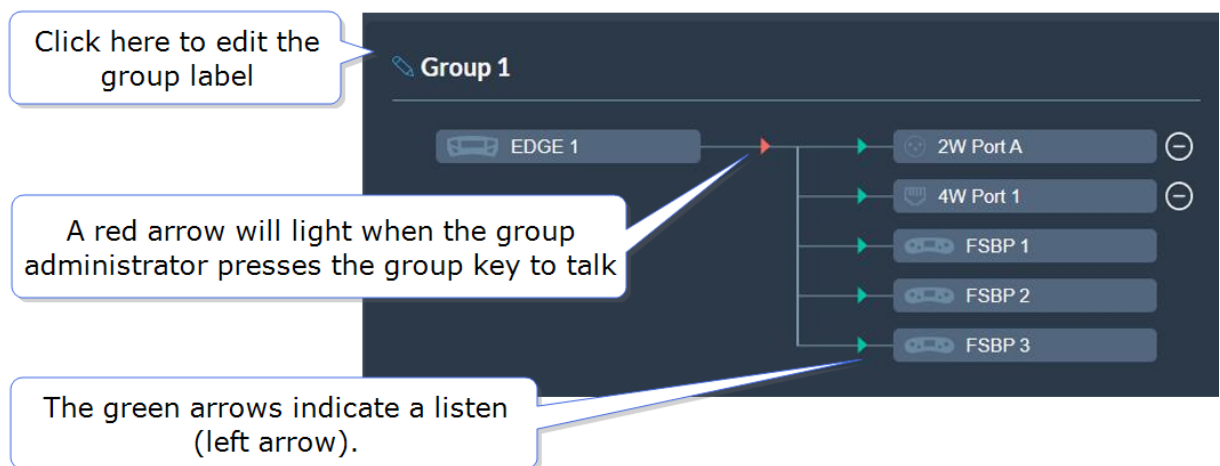

## Removing Ports from a Group

To remove a port from a group:

1. From the **Groups** panel, select the required group.

2. Click the remove icon  of the port that you want to remove.

The port is removed.

## Deleting a Group

To delete a group:

1. From the **Groups** panel, select the group that you want to delete.
2. Remove all the ports from the group


**Note:** *If you do not remove the ports, you will be prompted to do so in step 3.*

3. Click the trash can icon. The group is deleted.

## 6.16.2 Arcadia Offline Configuration Editor

Delete this text and replace it with your own content.

## 6.17 IFB

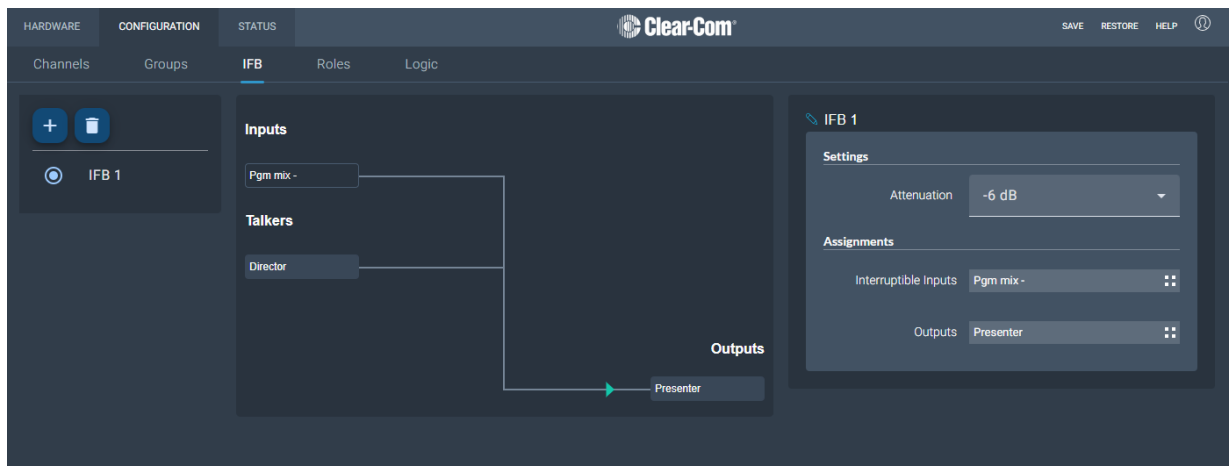

Arcadia's IFB (Interruptible Foldback) page allows you to configure and monitor IFB within the system. When using an IFB, audio is routed from the interruptible input to the output and when a talker talks on the IFB, the interruptible input audio level is attenuated (lowered/ducked) by the specified amount.

IFB are commonly used for one way communication to an on-air talent in broadcast application and paging to areas such as backstage dressing rooms in performing arts facilities.

Arcadia IFB can be used with any interface port and FreeSpeak, V-Series and Arcadia Front Panel.

To access the IFB page, navigate to: **Configuration > IFB**.

**Note:** *At the time of writing, HelixNet cannot be used with IFBs. This is due in a future release.*

## 6.17.1 Configuring IFB

### IFB Overview

From the IFB tab you can:


- Create IFB (max. 100)
- Add interface ports (input) to an IFB (max. 6)
- Add interface ports and/or roles (output) to an IFB (max. 6)

Talkers are added to the IFB IFB by assigning them to a role keyset with a Talk activation.(max. 6)

**Note:** *HelixNet role keysets cannot be assigned to IFB.*

### Adding a New IFB

1. In the CCM, navigate to **Configuration > IFB**.
2. Click the blue + sign to add a new IFB.
3. You will see the new IFB appear in the list on the left side of the page, and an overlay on the right side where you can configure the IFB. Add **Interruptible Inputs**, **Outputs**, and set **Attenuation** level here.

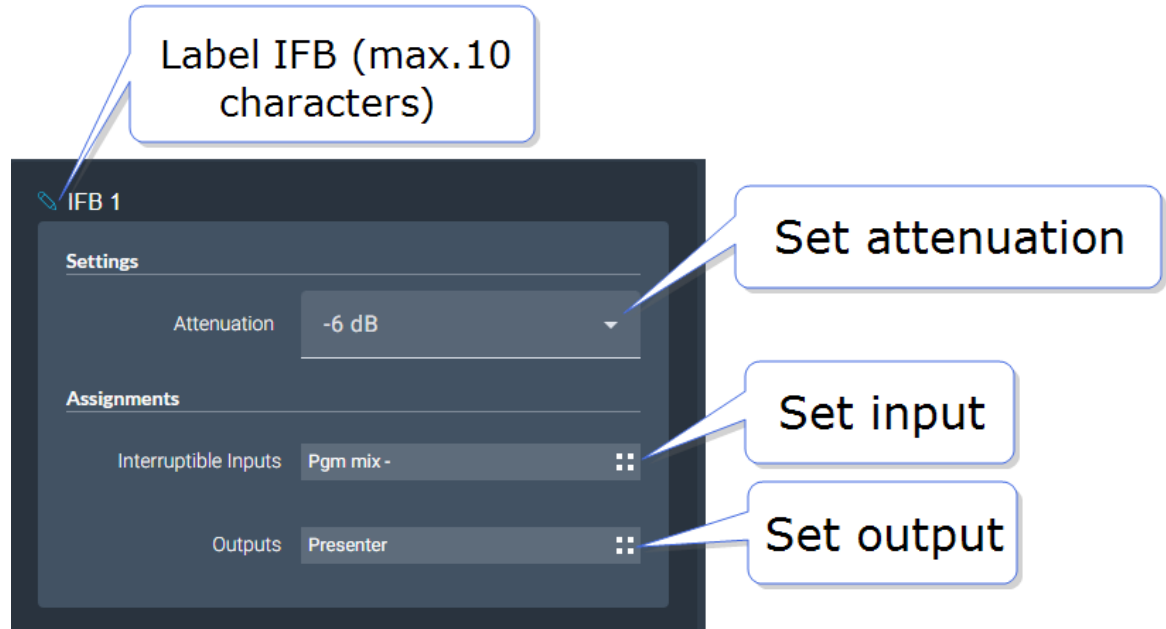



4. Set input.
5. Set output.

6. Set the attenuation level on the input (how much the input volume is attenuated (lowered/ducked) when the talker talks).
7. Once you have set input and output, the input can be heard at the output.

## Adding Talkers to IFB

When you have added inputs and outputs, you can add a talker.


1. In the CCM, navigate to **Configuration > Roles**.
2. Select the role you wish to configure with a talk key to the IFB.
3. Add the IFB to a key.

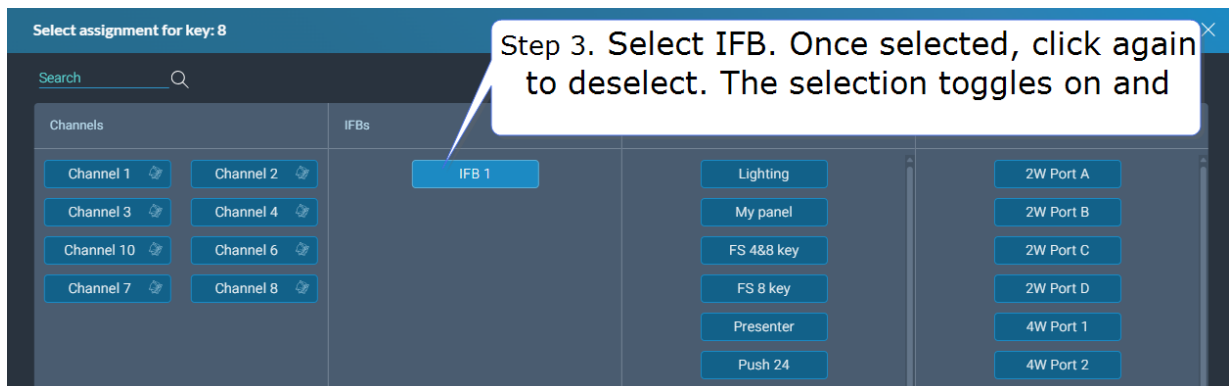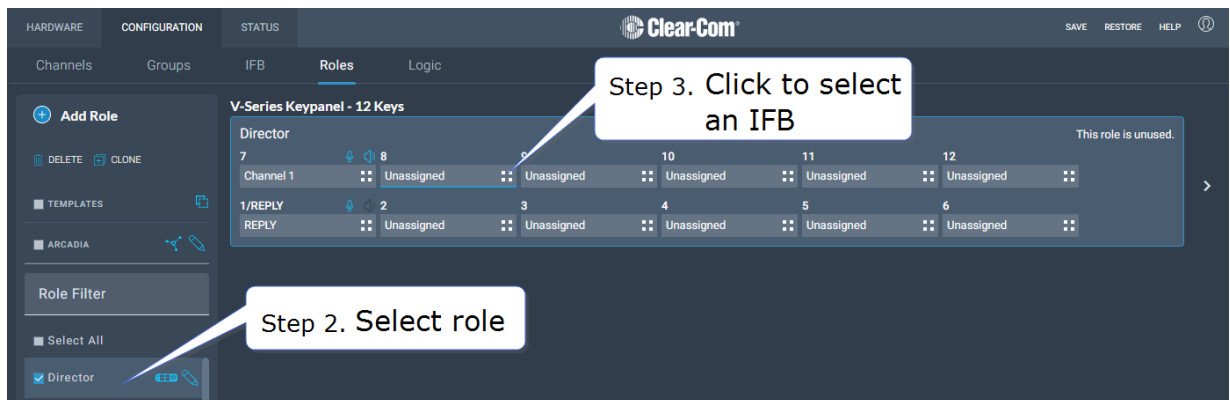

### Note:

*A role keyset assigned to an IFB with any type of listen activation will provide the role with ability to listen to the IFB output.*

4. When you have selected a talk key to the IFB, and the configuration has been actioned by the system, you will see the live IFB configuration in the center panel.

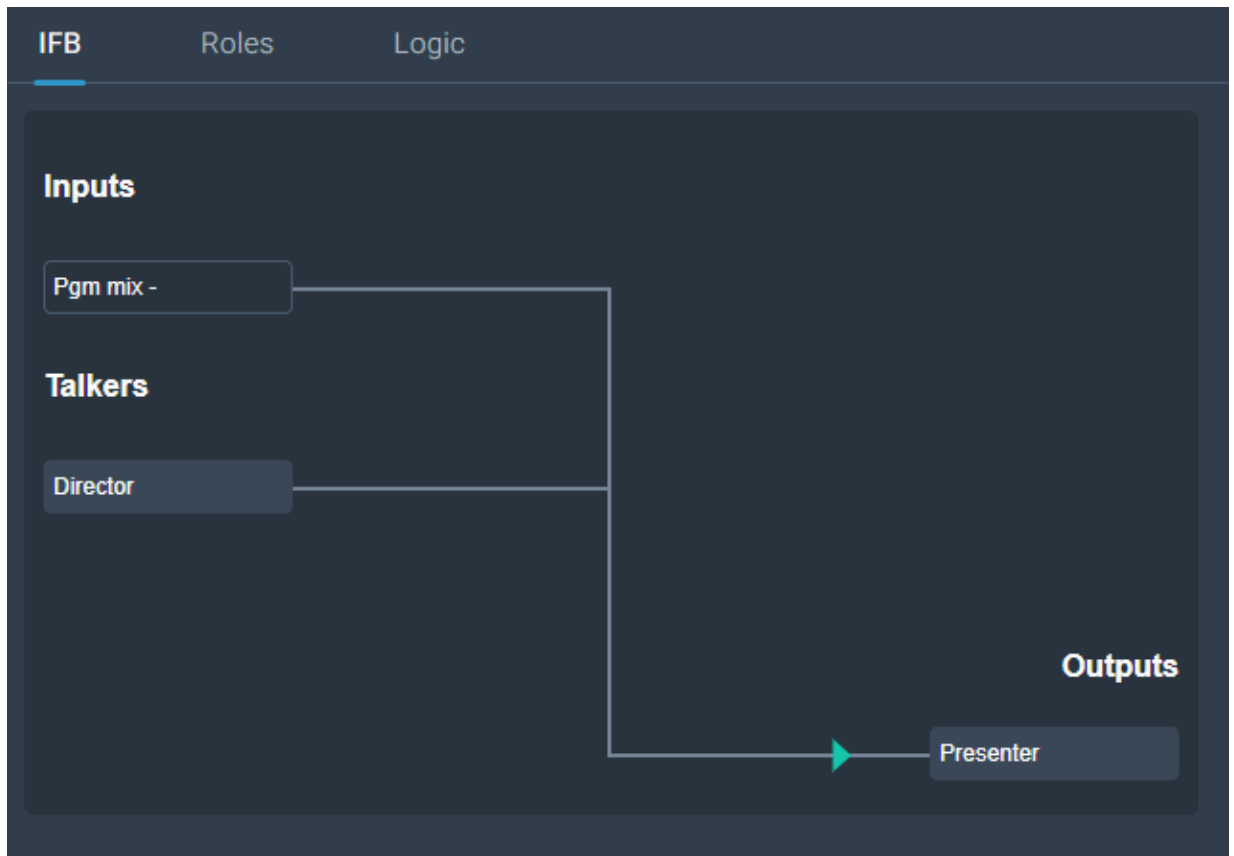

**Note:** The IFB page will only display interfaces and Roles that are online with the system.

**Note:** In this example, **Pgm mix -** is offline. This is indicated by a box that is not colored grey.

**Note:** Green (listen) and red (talk) arrows indicate the routing of audio in the system.

Once this example is configured; when the **Talker** (in this case, Director) presses the IFB key on the panel, a talk is routed to the **Output** (Presenter) and the **Input** volume (Pgm mix -) is lowered while the Director's talk is active.

**Note:** At the time of writing, HelixNet cannot be used with IFBs. This is due in a future release.


## 6.18 Roles

The **Roles** page enables you to create roles for the devices in your intercom system. These roles are used to control the audio configuration and other settings for beltpacks and other devices.

Roles are made for:

- The Arcadia
- FreeSpeak 4 key beltpacks (FreeSpeak II)
- FreeSpeak 8 key beltpacks (FreeSpeak Edge and FreeSpeak Icon)
- V-Series Panels
- HelixNet beltpacks (2 & 4 key)
- HelixNet remote stations
- HelixNet speaker stations

**Note:** *FreeSpeak and V-Series roles work on a 1:1 basis, each beltpack or keypanel must use a single role. HelixNet roles work on a 1: many basis, a HelixNet role can be used by many user stations. Therefore, HelixNet role types cannot be mixed with FreeSpeak and V-Series.*

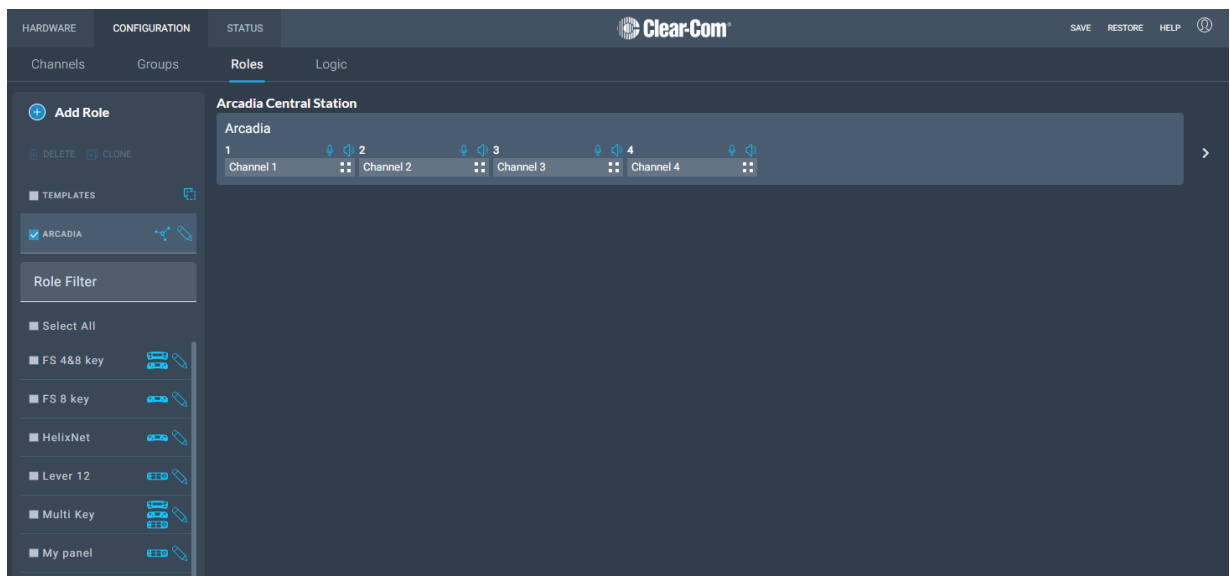

The **Roles** page of the CCM enables you to:

- View, add, clone, edit and delete roles
- To edit role settings, click the arrow at the right side of the role

## 6.18.1 Managing Roles

From the **Roles** page, you can view, add, clone, edit and delete roles.

When creating roles, roles can be:

- Added (role is based on the template role)
- Cloned (role is based on any selected role)
- Edited (change audio assignment and settings)

**Note:** *HelixNet roles do not work in the same way as FreeSpeak and V-Series roles.*

### FreeSpeak and V-Series Roles

When working with FreeSpeak beltpack (4 key or 8 key) and V-Series keypanels, a role must be created for each user station that you use. This relationship is 1:1.

- An 8 key role can be used on either a FreeSpeak Edge or a FreeSpeak Icon beltpack (only one beltpack at a time)
- You can create a role that can be used on any of the following user stations: V-Series keypanel, FreeSpeak 4 key beltpack, FreeSpeak 8 key beltpack. In this case, you will configure separate role configurations, one for each user station type. This role can only be in use on one user station type at a time
- If you wish to use the same configuration on multiple user stations, clone an existing role
- V-Series keypanel roles are created for 12,24 and 32 key panels, but any panel can use any role. If a 12 key panel takes a 32 key role, only the first 12 keys are displayed, serially starting from keyset 1 in the lower left hand corner of the panel
- V-Series desktop panels should use a 12 key role. The keyset layout on a desktop keypanel is as follows:

| CCM Panel Keyset | Desktop Panel (Row 1 = bottom row) |
|------------------|------------------------------------|
| 1-3              | Row 1                              |
| 4 - 6            | Row 2                              |
| 7 - 9            | Row 3                              |
| 10 - 12          | Row 4                              |

**Note:** *You can create a multi-use role that can be used on a beltpack and a keypanel (not at the same time). This could be used, for example, by a director that needs to use a panel in a viewing*

*lounge, and also pick up a beltpack to move around. See Role Based Sessions in the V-Series Iris User Guides, available from the Clear-Com Knowledge Center for information.*

## HelixNet Roles

When working with HelixNet, a role can be used many times. This relationship is 1:many. In HelixNet, roles are available for beltpacks, remote stations, speaker stations. When using HelixNet, role types cannot be mixed. For example, a remote station role cannot be used on a beltpack or speaker station.

- HelixNet beltpacks (2 & 4 key) use the same role, but only two keys need to be configured for a 2 key beltpack
- There is no need to clone a role for individual user stations when using HelixNet

## Viewing Roles

To view roles, navigate to **Configuration > Roles**. The following screen appears.


The screenshot displays the 'Roles' configuration page in the Clear-Com interface. On the left, a 'Role Filter' sidebar lists several roles, with 'FS 4&8 key' selected. A callout box labeled 'Configured roles' points to this list. The main area shows two role configuration panels: 'FreeSpeak Beltpack - 8 Keys' and 'FreeSpeak Beltpack - 4 Keys'. Each panel has a grid of keys (A, B, C, D) and call buttons (CALL A, CALL B, REPLY). Callouts provide details for the roles in the list:

- Freespeak 4 key role - FreeSpeak II**: Points to the 'FS 4 key' role.
- Role that can be used on any FreeSpeak beltpack, 4 key or 8 key (selected)**: Points to the 'FS 4&8 key' role.
- Freespeak 8 key role - Icon or Edge**: Points to the 'FS 8 key' role.
- HelixNet role**: Points to the 'HelixNet' role.
- Keypanel role**: Points to the 'Lever 12' role.
- This multi-role can be used on beltpacks or panels**: Points to the 'Multi Key' role.

A list of roles appears on the left-hand side of the screen.

## Role Templates

When you add roles, a new role is always created from a template role. Template roles are editable. If you edit a template role, any new roles created from it have the edited settings.

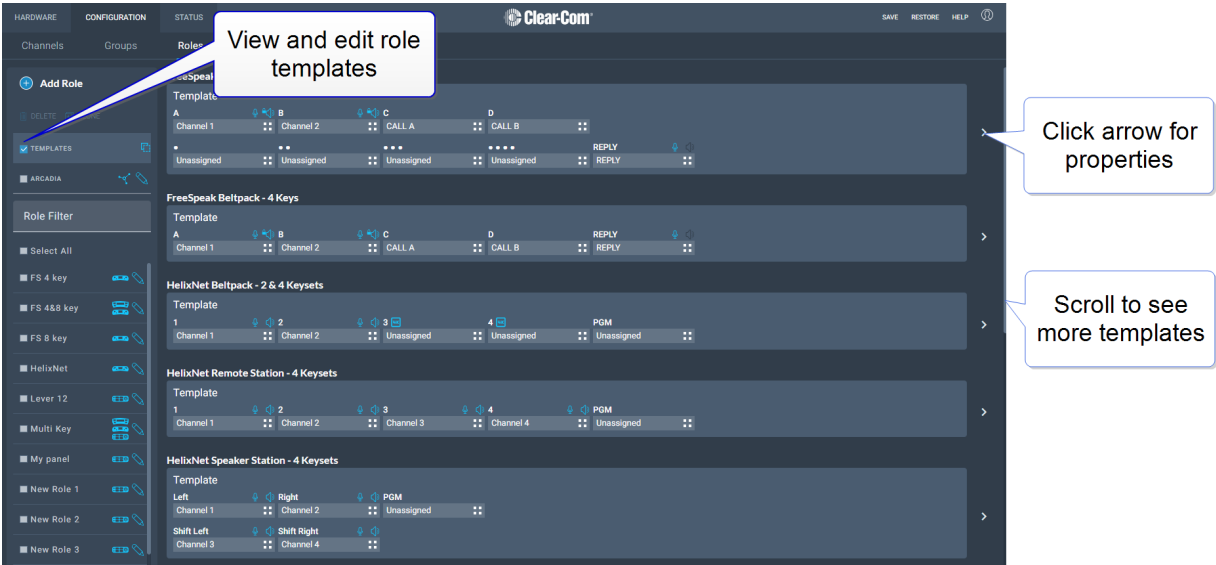


Select a role template to edit the settings.

To reset template roles to default settings, reset the Arcadia to factory defaults.


## Adding Roles

To add roles:

1. Navigate to **Configuration > Roles**.

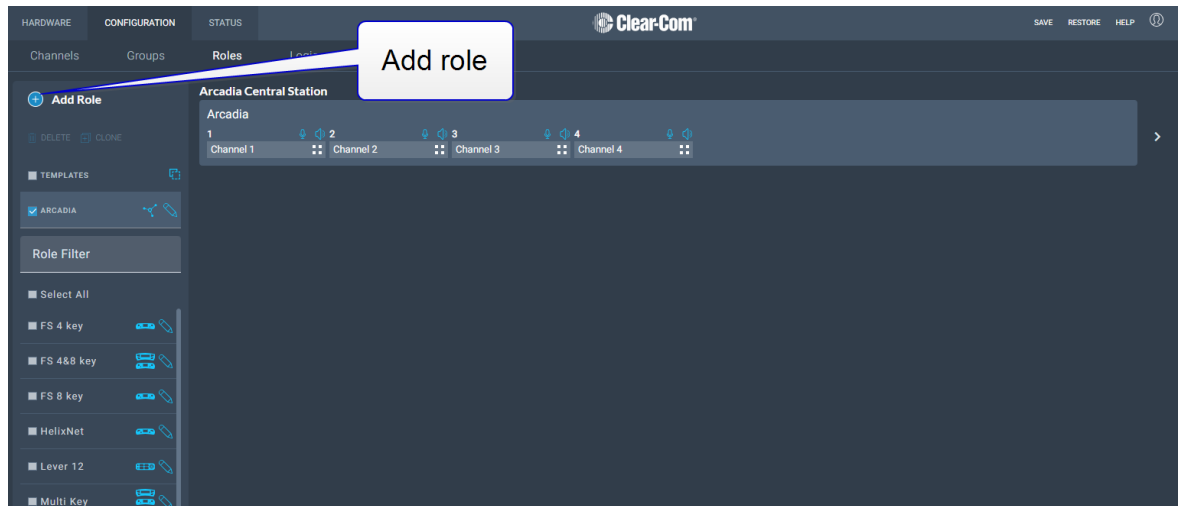


2. Click **Add Roles**. The following screen appears.

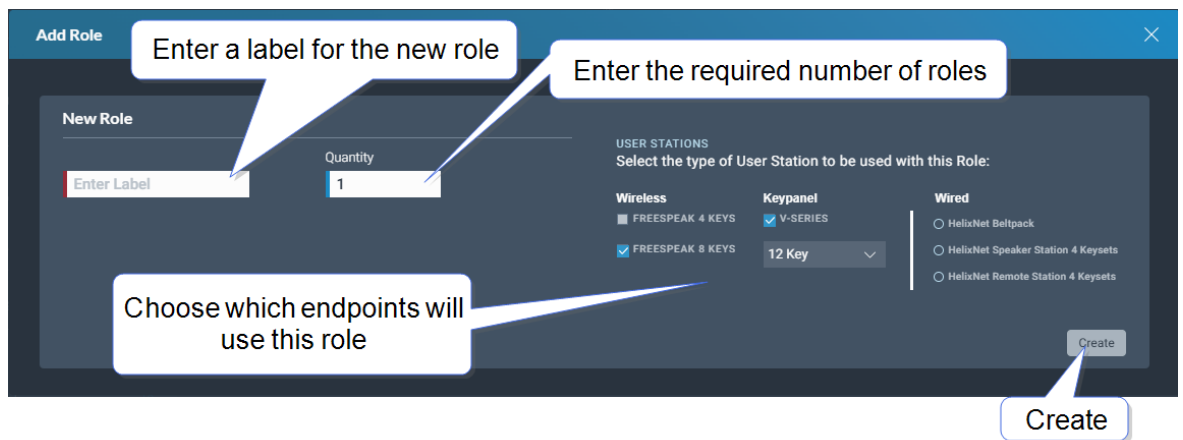


3. Click **Create**. The new role appears in the list of roles in the left-hand side of the **Roles** screen.

**Note:** You can edit the label from the icons that appear beside each role in the left-hand side of the screen.

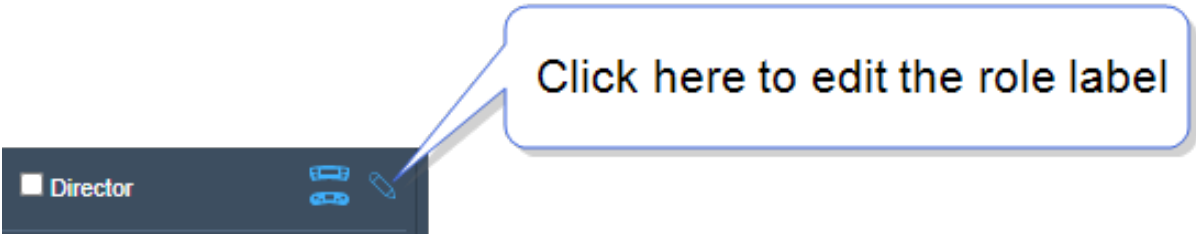


## Editing Role Key Assignment

1. Navigate to **Configuration > Roles** and select required role on the left of the screen.
2. Click on the small white squares.

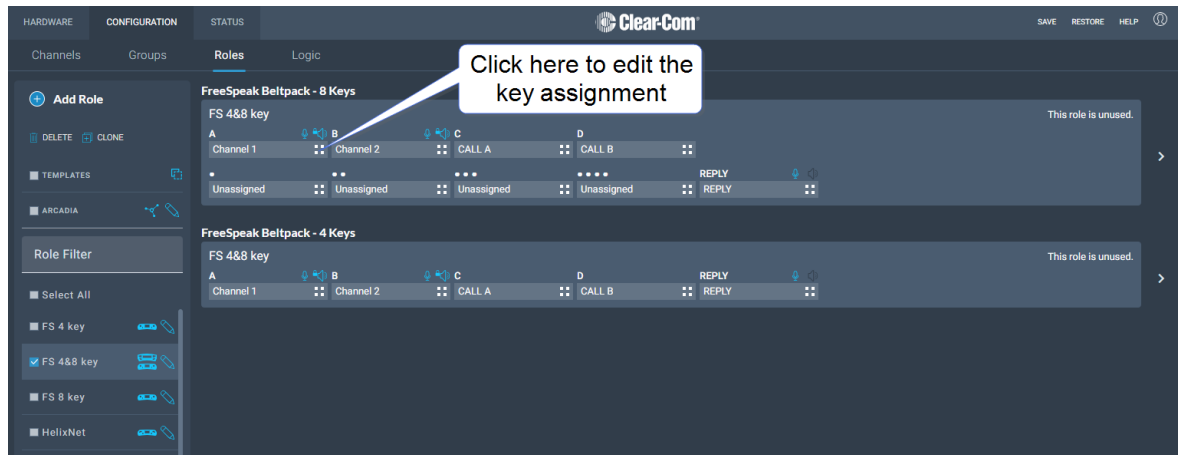

The key assignment screen appears.

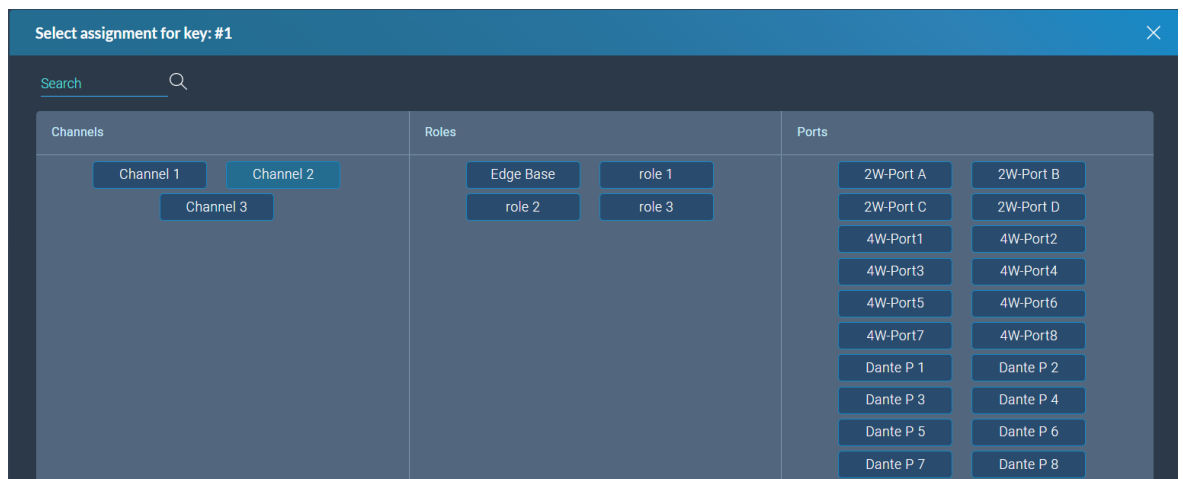

3. Click to select the required audio source.

## Configuring Role Settings


To configure the settings for a role:

1. Navigate to **Configuration > Roles**, and select the required role from the list of roles in the left-hand side of the screen.
2. From the **Settings** panel on the right-hand side of the screen, scroll to the required setting.
3. Edit the setting as required.

## Cloning Roles

To clone roles:

1. Navigate to **Configuration > Roles**, and select the role that you wish to clone from the list of roles in the left-hand side of the screen.
2. Click **CLONE**.

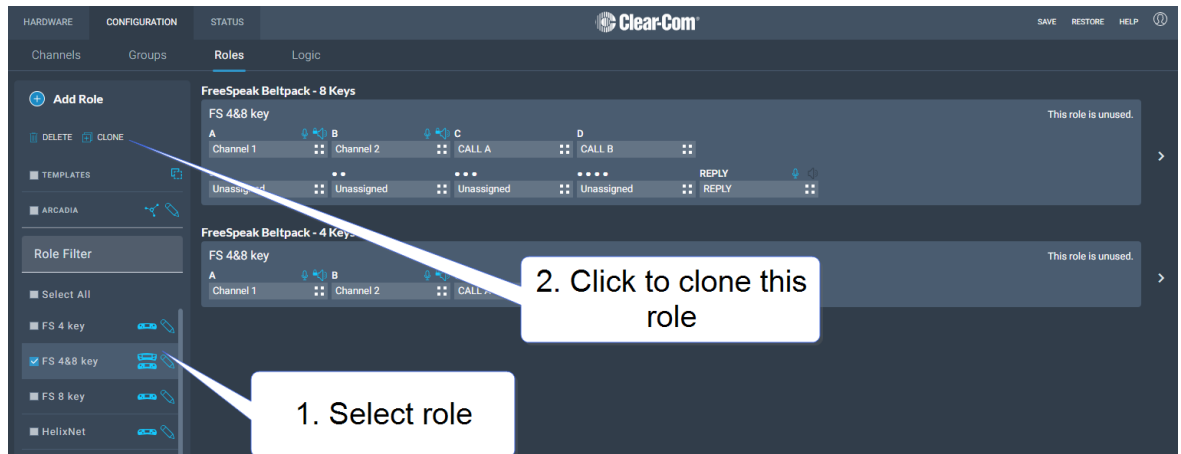


The role is cloned and added to the list of roles in the left-hand side of the screen.

## Deleting Roles

To delete roles:

1. Navigate to **Configuration > Roles**, and select the role that you wish to delete from the list of roles in the left-hand side of the screen.
2. Click **DELETE**.

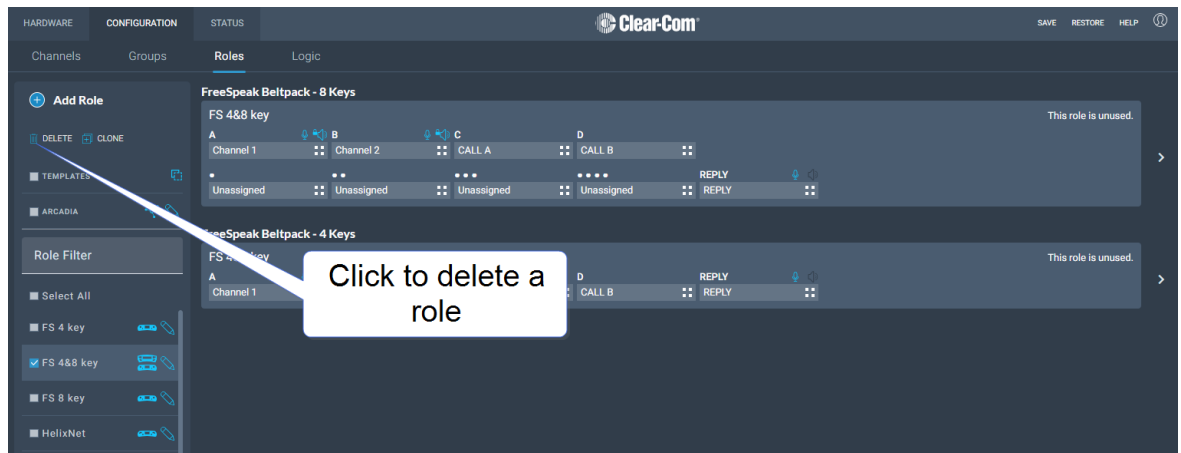

The role is deleted and removed from the list of roles in the left-hand side of the screen.

## 6.18.2 Setting Key Behavior

Audio keys can be set to different Talk and Listen states. These key behavior states apply to the keys on the Arcadia and beltpacks. Key behavior is configured in the **Roles** tab in the CCM.

| Key Behavior Options  | Resulting Audio Behavior   |
|---|--|
| Talk-Only   | Press key to talk. Key only controls talk.   |
| Listen-Only   | Press key to listen. Key only controls listen.   |
| Talk and Listen   | <p><b>Arcadia:</b> Press single key to talk and listen.</p> <p><b>HelixNet:</b> Remote/Speaker Station: Press listen or talk separately.</p> <p><b>V-Series Rotary &amp; Lever:</b> Press listen or talk separately.</p> <p><b>V-Series Pushbutton:</b> Press single key to talk and listen.</p> |
| Dual Talk and Listen<br>( <b>FreeSpeak</b> and <b>V-Series</b> )                          | <p>Press key to talk and listen. Listen latches on or off according to preference (quick tap to latch). The user can push and hold (PTT) to activate talk.</p> <p><i>On V-Series lever and rotary keypanels, Dual Talk and Listen latches the listen when the talk key is pressed.</i></p>       |
| Force Listen  | Permanent listen.  |
| Talk and Forced Listen  | Permanent listen, push key to talk.  |
| Force Talk and Force Listen<br>( <b>FreeSpeak</b> , <b>HelixNet</b> and <b>V-Series</b> ) | Permanent listen and talk.   |
| Talk Latch  | <b>Enabled</b> (default setting)/Disabled  |
| In-Use Tally  | Enabled/ <b>Disabled</b> (default setting)   |


## 6.18.3 Fixed Roles

When a role is fixed to a beltpack, a beltpack user is forced to use that role. If a role is not fixed to a beltpack, the user can chose from any available roles.

When you register beltpacks via USB cable to the Station, an editable fixed role is created and applied to the beltpack.

Roles can be fixed/unfixed in the CCM.

Navigate to: **Hardware > Resources > Endpoints** (select the down arrow to see all connected Endpoints). Select an Endpoint (beltpack) by clicking it. Click to fix/unfix or change the role for this beltpack.

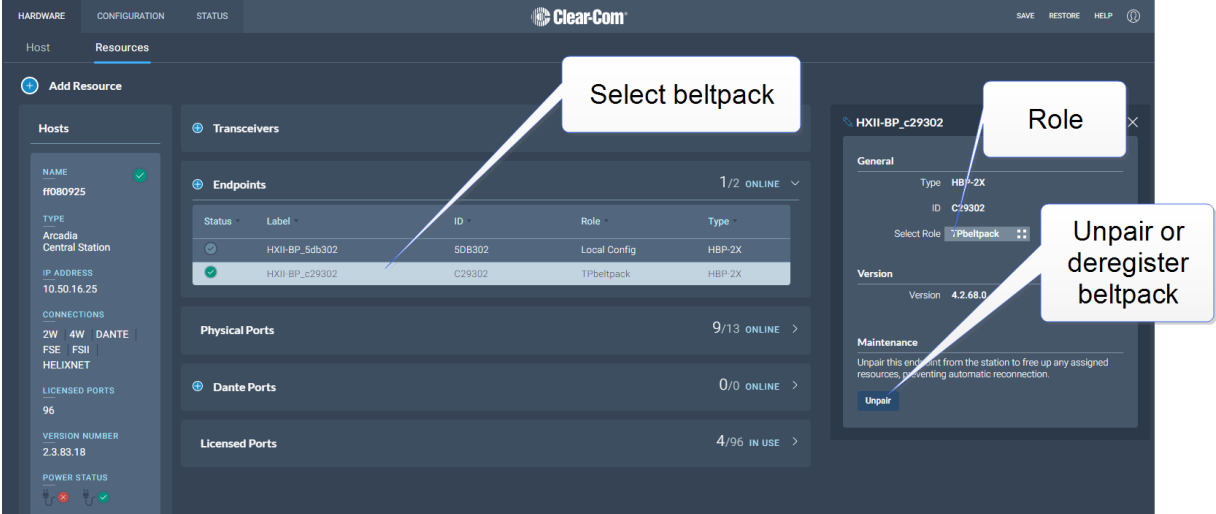

## 6.19 Logic

The Arcadia Logic module facilitates external control and conditional configuration.

GPI: Hardware on Arcadia, V-Series keypanel GPI 1 (in parallel with PTT on X7 variants), and virtual via I.V. Direct can be configured to control up to 10 audio crosspoints / call signals.

These can be used for:

- Footswitches controlling audio
- Automating Program Audio routing
- Call signaling
- 2-Way Radio Input Routing

GPO: Hardware on Arcadia, V-Series keypanel GPO 1 Panel Aux Relay), and virtual via I.V. Direct can be configured to activated from up to 10 audio crosspoints/call signals.

These can be used for:

- Call signaling
- On-Air or warning signals
- 2-Way Radio Transmit Trigger

The **Control Logic** section facilitates conditional (if->then) logic using audio crosspoints, call signals and GPIO.

Hardware GPIO, V-Series keypanel GPIO 1, and I.V. Direct virtual GPIO are configured in the **Configuration > Logic** page of the Core Configuration Manager (CCM) and can be viewed and tested on the **Status > Logic** page.

The screenshot shows the 'Logic' configuration page in the Clear-Com interface. The top navigation bar includes 'HARDWARE', 'CONFIGURATION', and 'STATUS'. The 'CONFIGURATION' tab is active, and the 'Logic' sub-tab is selected. The interface is divided into several sections:

- GPIO:** A table listing GPIO configurations. It has columns for 'Status' and 'Name'.
 

| Status     | Name |
|------------|------|
| <b>GPI</b> |      |
| 1          | GPI1 |
| 2          | GPI2 |
| <b>GPO</b> |      |
| 1          | GPO1 |
| 2          | GPO2 |
| 3          | GPO3 |
| 4          | GPO4 |
- GPI1:** A section for configuring GPI1. It shows 'Crosspoints Events' with a message: 'No crosspoints have been configured for this GPI'. A counter indicates '0/10 USED'.
- Control Logic:** A section for configuring control logic. It shows a message: 'No logic events have been configured'.

The interface also includes a 'SAVE RESTORE HELP' menu in the top right and a help icon in the bottom right corner.

## 6.19.1 Setting up GPIOs and Control Logic Events

- Each GPI/GPO hosts up to 10 different events or actions. These actions can be overridden for testing or to bypass the logic in the **Status > Logic** page of the CCM
- Control Logic Events allow crosspoint conditional activation of crosspoints, GPO, and Call signals
- 2 x DB 9F connectors on the rear of the Arcadia
- For DB 9F pinouts, see [Appendix A: Pinouts on page 210](#)

### Examples of GPI actions

On an input from an external device, an audio route can be established.

- If an on-air light comes on, the program feed (**PGM**) can be routed to a Channel or beltpack
- Use a footswitch to allow the station user to open an audio route to a Channel
- On an input from a two-way radio, an audio route can be established to a channel (the radio talks to the channel)
- Initiate a Call signal.

### Examples of GPO triggers

GPOs are triggered when **Talk, Talk & Listen** user station buttons are pressed or a Call signal is active.

- When someone talks to stage announce, an output relay (GPO) is sent to the external stage announce speaker
- When someone talks to a channel labeled Radio, an output is sent to a 2-way radio
- When a call signal (**Call**) comes into a channel, and output is sent to turn on an on-air light

### Examples of Control Logic Events


- When a crosspoint is active then another crosspoint can be activated as well for the same duration
- When a crosspoint is active then a call signal can be activated as well for the same duration
- When a crosspoint is active then a GPO can be activated as well for the same duration

## Configuring GPIs

This example opens a talk route from the Arcadia to a Channel when an input occurs on GPI1 (for instance, from a footswitch).

Navigate to **Configuration > Logic**.

1. On the left panel, click GPI1 to select it.

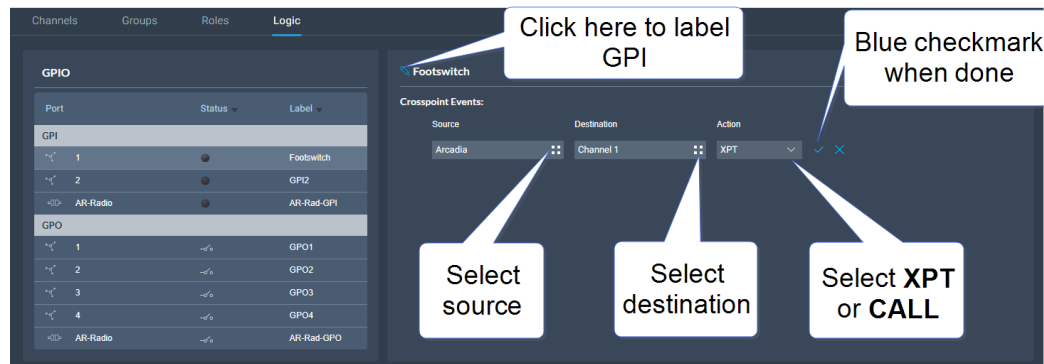

2. Click the Add button  in the center panel.

3. Click the Options button  to select a **Source**. Select **Arcadia**

4. Click the Options button  to select a **Destination**. Select the required Channel.

5. Select **Action** (crosspoint or call signal). In this case choose crosspoint (**XPT**).

6. Click the blue check mark.

7. To label the GPI, click the pencil icon.

8. To test the GPI, or turn it on and off, navigate to **Status > Logic**. See: [Logic on page 105](#).

## Configuring GPOs

In this example you send an output trigger (for example to an external stage announce speaker) on GPO1 when a beltpack **Talk** is activated on the stage announce (**SA**) 4-wire port.

1. Navigate to **Configuration > Logic**.



2. On the left panel, click GPO1 to select it.

3. Click the Add button  in the center panel.

4. Click the Options button  to select a **Key Target**. Select stage announce (SA).

5. In this case, the **On Behavior** field defaults to **Talk Only**.

6. Click the blue check mark.

7. To label the GPO, click the pencil icon.

8. To test the GPO, navigate to **Status > Logic**. See [Logic on page 105](#).

**Note:** *GPO **Talk & Listen** behavior is only for use with FreeSpeak and V-Series (**Talk & Listen** or **Dual Talk & Listen**) key activations on a single button. **Talk-Only** is for use with Arcadia, FreeSpeak and HelixNet keys using all other types of Talk activations.*

## 6.20 Status Overview

From the **Status** page of the CCM, you can view the status of all the resources that are connected to the Arcadia Central Station. These include:

- Transceivers (IP and E1)
- Wireless beltpacks
- Wired Intercom User Stations (Beltpacks, Speaker Stations, Remote Stations)
- Keypanels
- Interface ports
- I.V. Direct connections
- Dante connections

Here you will see error and warning states.

**Note:** *Error states are used exclusively to indicate that audio via this resource is not working.*

You can quickly see if entities are:

- Offline
- Online
- Initializing

## 6.20.1 Monitoring System Status

You can monitor your system using the following features of the CCM:

- Overview
- Event Log
- Logic

### Overview


To see the **Overview** screen, navigate to **Status > Overview**. The following screen appears.

The screenshot displays the Clear-Com CCM Overview screen. The top navigation bar includes 'HARDWARE', 'CONFIGURATION', and 'STATUS' tabs. The 'STATUS' tab is active, and the 'Overview' sub-tab is selected. A status bar at the top shows various system metrics: HOSTDEVICE (1/1), PORTS (9/13), I.V. DIRECT (0/1), DANTE (0/0), TRANSCIVER (0/10), WIRELESS (0/0), WIRED (1/2), and KEYPANEL (0/1). A legend on the right indicates status colors: Offline (grey), Online (green), Initializing (blue), Warning (yellow), and Error (red). Below the status bar, there are tabs for 'Wireless', 'Wired', 'Keypanel', 'I.V. Direct', and 'Host Device'. The 'Host Device' tab is active, showing a table with one entry: Label 'ff080925', Type 'Arcadia Central Station', and Version '3.2.83.47-0'. To the right of the table is a detailed view for device 'ff080925', including sections for 'General' (Name, Status: Good, Uptime: 23 hours 29 minutes, Sync source: PTP), 'Version' (Version: 3.2.83.47-0, Hardware Version: 5.00-B-021422, HelixNet Version: 5.2.19.0), and 'Dante' (Dante is not available).


The **Overview** screen consists to two sections. There is an upper section that displays a list of system icons representing the ports, transceivers and endpoints and a lower section that gives detailed information about each connected device and about the Arcadia.

## System Icons

Each icon is color-coded to give an easily accessible view of the status of each entity.

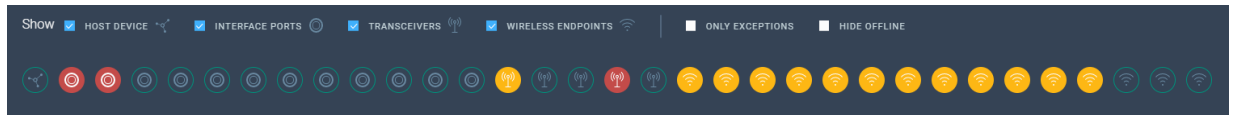

The following legend is used to indicate the status of each entity.

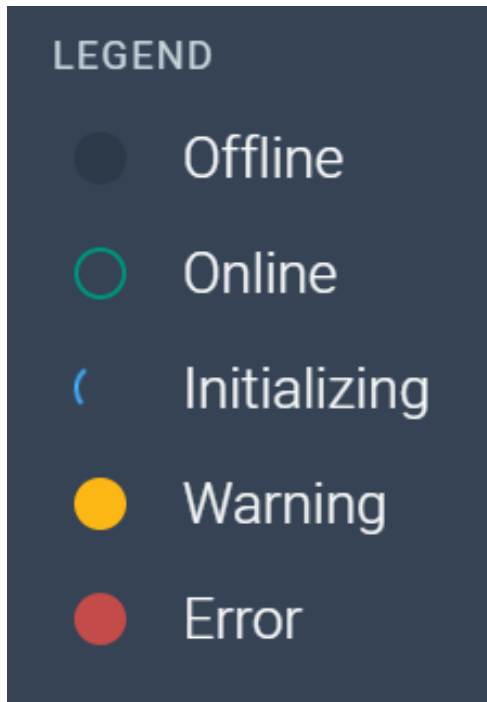

### 6.20.2 Monitoring Wireless Devices

Navigate to **Status > Overview > Wireless**. This section of the **Overview** screen lists all the wireless devices connected to your system, and gives the following information for each device:

- Associated role
- Type of transceiver
- Battery level
- Signal strength
- Volume setting
- Remote Microphone Kill (RMK) button to mute all microphones connected to your system
- Call button to send a text message to all connected beltacks
- Network and PTP status of transceivers

Wireless    Wired    Host Device

text to send

| Device Name *  | Role     | Type     | Battery | Signal | Keys | Vol. | RMK All | Call All | TCVR1 | TCVR2 | TCVR3 | TCVR4 | TCVR5 | TCVR6 | TCVR7 | TCVR8 | TCVR9 | TCVR10 | CC-TCVR-08XYF386 | CC-TCVR-08XYF396 | CC-TCVR-32XY0085 | CC-TCVR-32XY0478 | CC-TCVR-32XY0108 | CC-EDGE-26XYF751 | CC-EDGE-07304803 |
|----------------|----------|----------|---------|--------|------|------|---------|----------|-------|-------|-------|-------|-------|-------|-------|-------|-------|--------|------------------|------------------|------------------|------------------|------------------|------------------|------------------|
| EDGE-BP-524403 | Producer | FSE 5.0  |         |        |      |      | RMK     | Call     | 0/4   | 0/4   | 0/4   | 0/0   | 0/0   | 2/4   | 0/4   | 0/4   | 0/0   | 0/0    | 0/10             | 0/0              | 0/10             | 1/10             | 2/10             | 2/10             | 0/10             |
| EDGE-BP-524481 | Actor    | FSE 5.0  |         |        |      |      | RMK     | Call     |       |       |       |       |       |       |       |       |       |        |                  |                  |                  |                  |                  |                  |                  |
| FSII-BP-16210  | Ademola  | FSII 1.9 |         |        |      |      | RMK     | Call     |       |       |       |       |       |       |       |       |       |        |                  |                  |                  |                  |                  |                  |                  |
| FSII-BP-16226  | Lara     | FSII 1.9 |         |        |      |      | RMK     | Call     |       |       |       |       |       |       |       |       |       |        |                  |                  |                  |                  |                  |                  |                  |
| FSII-BP-28036  | Katly    | FSII 1.9 |         |        |      |      | RMK     | Call     |       |       |       |       |       |       |       |       |       |        |                  |                  |                  |                  |                  |                  |                  |
| FSII-BP-327796 | Dancer   | FSII 2.4 |         |        |      |      | RMK     | Call     |       |       |       |       |       |       |       |       |       |        |                  |                  |                  |                  |                  |                  |                  |
| FSII-BP-327814 | Singer   | FSII 2.4 |         |        |      |      | RMK     | Call     |       |       |       |       |       |       |       |       |       |        |                  |                  |                  |                  |                  |                  |                  |

### Transceiver details

Hardware    Configuration    Status    Clear-Com    Save    Restore    Help

Overview    Event Log    Logic

Show  HOST DEVICE (1/1)  PHYSICAL PORTS (9/12)  DANTE PORTS (0/8)  TRANSCEIVERS (2/12)  WIRELESS ENDPOINTS (4/4)  ONLY EXCEPTIONS  HIDE OFFLINE LEGEND >

Wireless    Wired    Host Device

text to send

| Device Name *  | Role   | Type     | Battery | Signal | Keys | Vol. | RMK All | Call All | TCVR1 | TCVR2 | TCVR3 | TCVR4 | TCVR5 | TCVR6 | TCVR7 | TCVR8 | TCVR9 | TCVR10 | CC-EDGE-3726934 | CC-TCVR-08XYF426 |
|----------------|--------|----------|---------|--------|------|------|---------|----------|-------|-------|-------|-------|-------|-------|-------|-------|-------|--------|-----------------|------------------|
| EDGE-BP-524291 | EDGE 1 | FSE 5.0  |         |        |      |      | RMK     | Call     | 0/0   | 0/0   | 0/0   | 0/0   | 0/0   | 0/0   | 0/0   | 0/0   | 0/0   | 0/0    | 2/10            |                  |
| EDGE-BP-524338 | EDGE 2 | FSE 5.0  |         |        |      |      | RMK     | Call     |       |       |       |       |       |       |       |       |       |        |                 |                  |
| FSII-BP-15901  | FSBP 2 | FSII 1.9 |         |        |      |      | RMK     | Call     |       |       |       |       |       |       |       |       |       |        |                 |                  |
| FSII-BP-16231  | FSBP 1 | FSII 1.9 |         |        |      |      | RMK     | Call     |       |       |       |       |       |       |       |       |       |        |                 |                  |

View details

Select a transceiver to see network, version and PTP details.

PTP details

**CC-TCVR-08XYF426**

**Network**

AES67 Admin IP 169.254.8.123  
Address

AES67 Audio IP 169.254.8.128  
Address

Subnet Mask 255.255.0.0  
Network Mode DHCP

**Version**


Version 4.8.67.0  
Radio Version 0107  
FPGA Version v.0.6.2-846;v2.3.4-b100-c2

**PTP**

Status Locked  
Role Slave  
Master ID 00-0e-98-ff-fe-08-02-3a (Priority 127)  
Local ID 00-0e-98-ff-fe-02-fe-77 (Priority 254)  
Offset from Master 20 ns (max 47 ns)  
Mean Path Delay 6,600 ns +/- 3  
Mean Frequency -1 ppb +/- 27

Maintenance


# Monitoring Beltpack Details

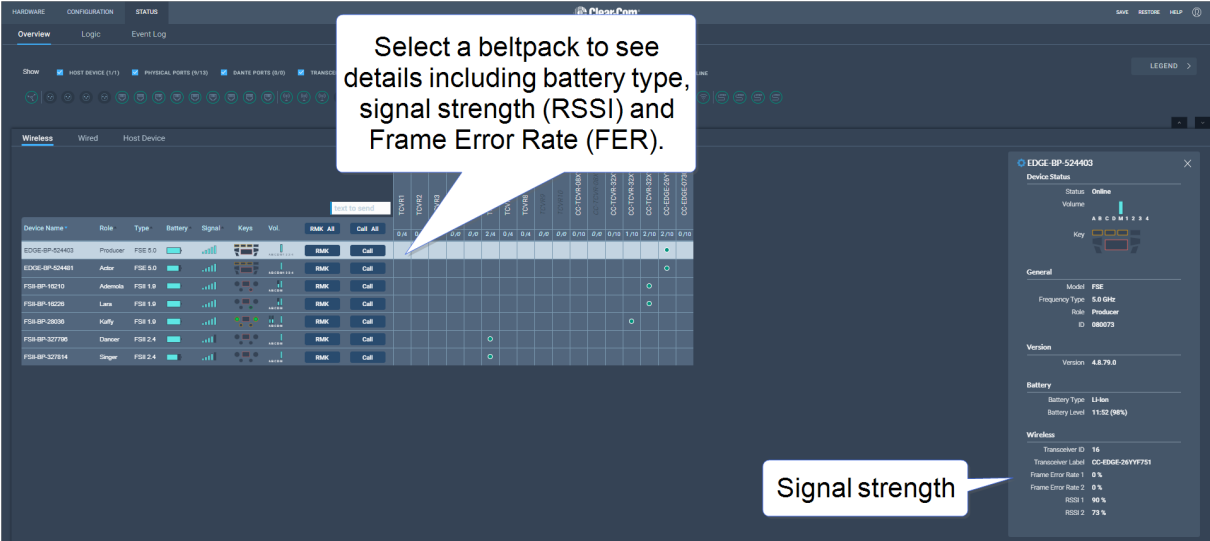

## 6.20.3 Monitoring Wired Devices

Navigate to **Status > Overview > Wired**. This section of the **Overview** screen lists all the wired the HelixNet user stations (beltpacks, remote stations and speaker stations) in your system. It also shows the connection method, Ethernet or Powerline Device. Click on a device for information and network stats.

Click on the cog icon for configuration and procedures: reboot, unpair and reset to default.

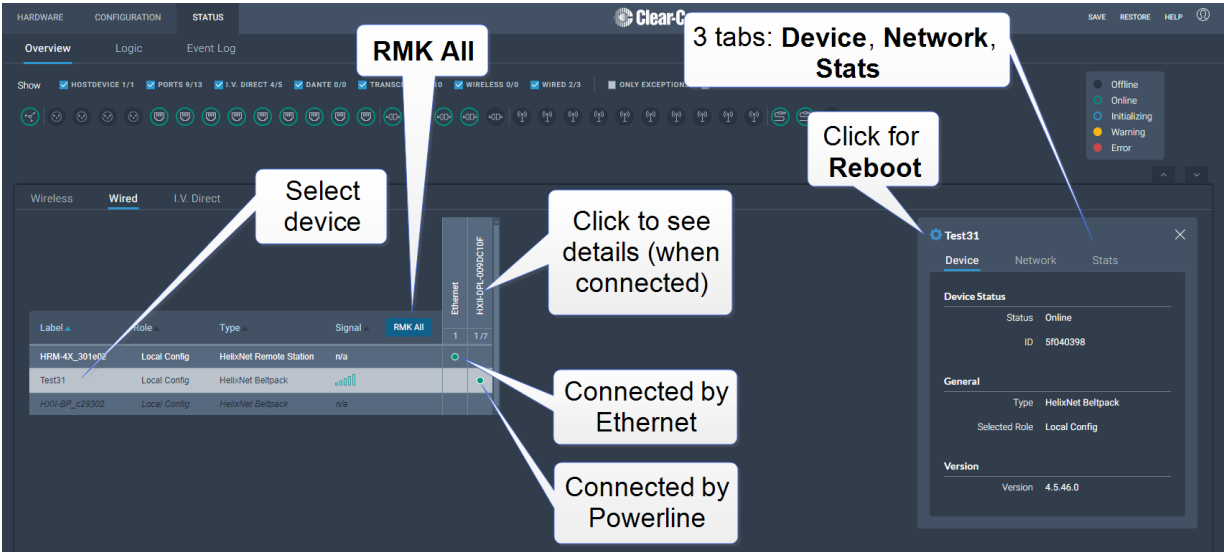

## 6.20.4 Monitoring Keypanels

Navigate to **Status > Overview > Keypanels**. This section of the **Overview** screen lists all the I.V. Direct ports connected to your system, and gives the following information for each device:

**Device**

- Status (online/offline)
- GPI
- GPO

Click the cog  icon to configure GPIOs

- Firmware version


**Network**

- Local IP address
- Network quality (LAN, WAN or Internet)

Click the cog  icon to configure settings and credentials

**Diagnostic information**

- Connection time
- Average jitter
- Max jitter
- Rx packets
- Tx packets
- Rx drops

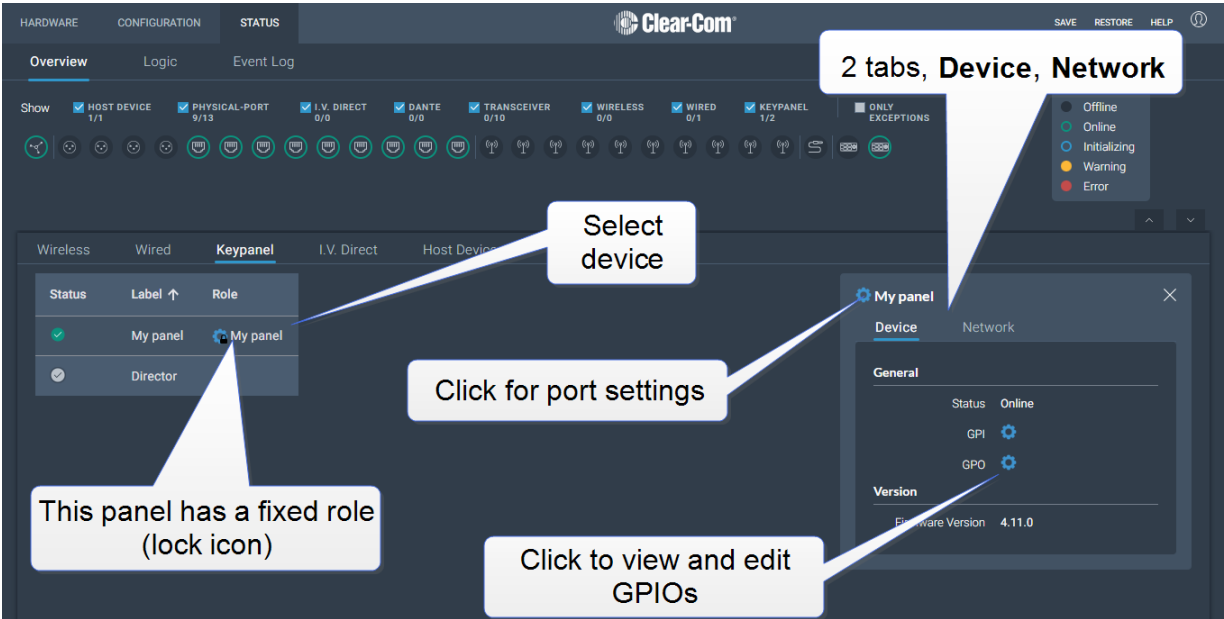

## 6.20.5 Monitoring I.V. Direct

Navigate to **Status > Overview > I.V. Direct**. This section of the **Overview** screen lists all the I.V. Direct ports connected to your system, and gives the following information for each device:

### Interface

- Status (online/offline)
- User ID
- GPI
- GPO

Click the cog  icon to configure GPIOs


### Network

- Local IP address
- Local port
- Remote IP address (if this is the calling device)
- Network quality (LAN, WAN or Internet)

Click the cog  icon to configure settings and credentials

### Diagnostic information


- Connection time
- Average jitter
- Max jitter
- Rx packets
- Tx packets
- Rx drops

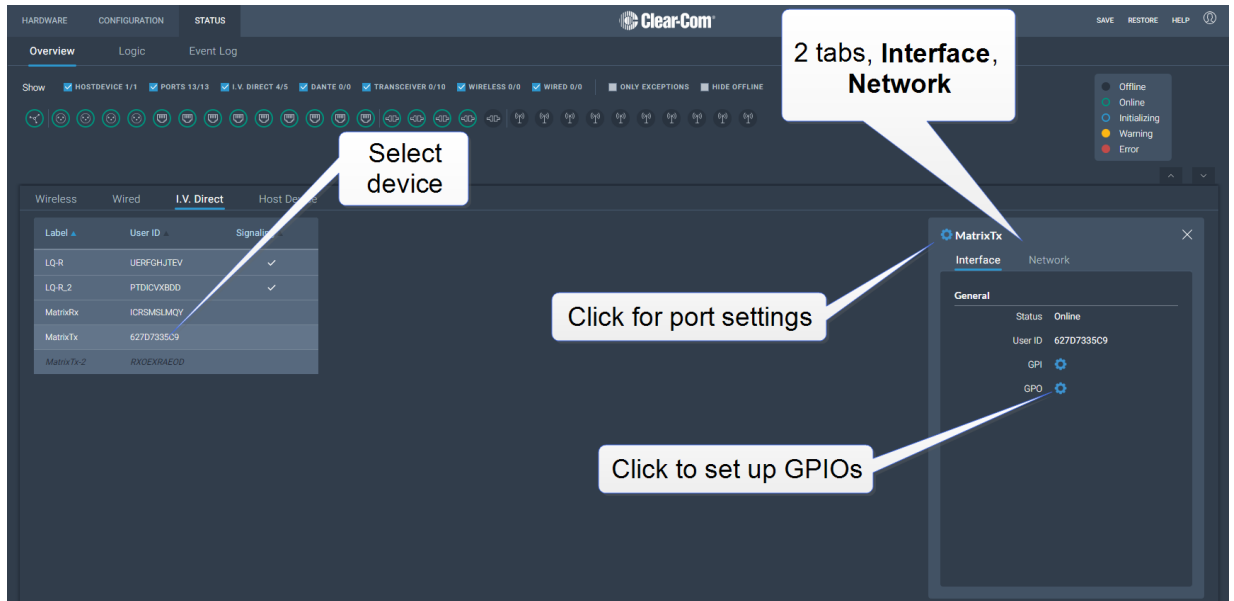

## 6.20.6 Monitoring the Host Device

Navigate to **Status > Overview > Host Device**. A screen appears that gives information about the Arcadia and enables various procedures including:

- **Device**
  - General
  - Version
  - Dante
- **Network**
  - Management
  - AES67
- **Stats**
  - PTP
  - Power
  - Thermal
- **Tools**
  - Reboot/reset/sync clock
  - Support info
  - Ping test

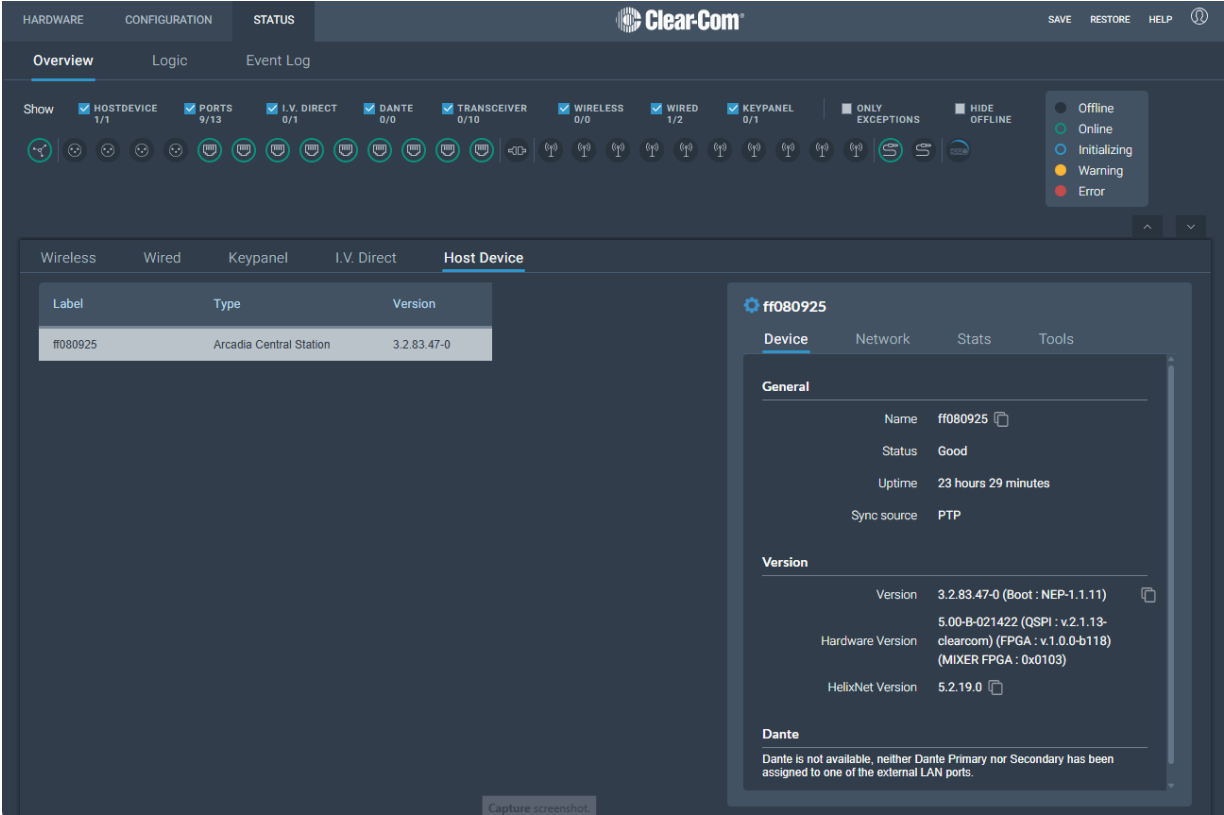

**Caution:** Support Info

In **Tools** there is an option to collect support information. When you collect support information, you are advised to clear the support file after you have downloaded it.


## 6.20.7 Monitoring the Event Log

 The Event Log provides useful information about events that happen in the system.

The Event Log can be filtered on:

- Time: default is 1 month prior to the current date and time
- Exceptions (warnings and errors): default is unchecked.

Events are sorted by data. Clicking the small blue arrow changes date order:



The **Level** column shows the status of data:


- Yellow triangle: warning
- Red circle with white cross: error
- No icon shown: this data is informational.

The following apply to the Event Log:

- The Event Log periodically refreshes but there is a **Refresh** button to pull the latest events
- The Event Log can be exported to a .csv file
- **Clear Event Log** clears current data. The data cannot be retrieved once it has been cleared
- Event logs are not stored permanently, only events since the last power or reboot cycle are available.

### 6.20.8 Monitoring the Logic Page

This page shows the GPIs and GPOs (relay) that you have set up in the **Configuration > Logic** page. You can see if these are currently active in the system under the **Status** column.

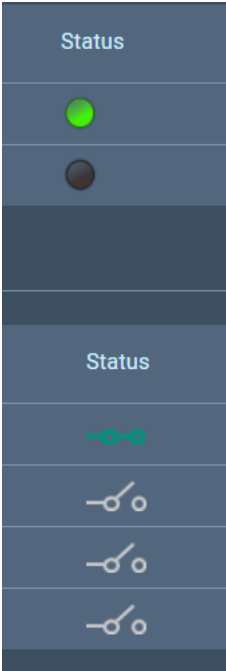

A green icon indicates a currently active input or relay.

#### Forcing ON/OFF

The buttons under the FORCE column are toggle buttons that can be used to test the working of the GPIOs or to turn them permanently off or on. These override the operation of the configured GPIOs.

| Logic Inputs |           |                    |                    |        |  |
|--------------|-----------|--------------------|--------------------|--------|--|
|              | GPI Label | Route Source       | Route Destination  | Status | Force  |
| 1            | GPI1      | No events assigned | No events assigned |        | <input type="button" value="OFF"/> <input type="button" value="ON"/> |
| 2            | GPI2      | No events assigned | No events assigned |        | <input type="button" value="OFF"/> <input type="button" value="ON"/> |

| Logic Outputs |           |                      |                      |        |  |
|---------------|-----------|----------------------|----------------------|--------|--|
|               | GPO Label | Key Target           | On Behavior          | Status | Force  |
| 1             | GPO1      | No triggers assigned | No triggers assigned |        | <input type="button" value="OFF"/> <input type="button" value="ON"/> |
| 2             | GPO2      | No triggers assigned | No triggers assigned |        | <input type="button" value="OFF"/> <input type="button" value="ON"/> |
| 3             | GPO3      | No triggers assigned | No triggers assigned |        | <input type="button" value="OFF"/> <input type="button" value="ON"/> |

In this example, GPI 1 and GPO 2 are forced ON for testing purposes. GPO 2 is permanently OFF (for example, if you want to ensure that a signal light never comes on at this time).

# 7 Using FreeSpeak Wireless Intercom

---

This chapter describes how to connect to E1 and IP transceivers. It contains the following sections:

- 7.1 Overview of Transceivers ..... 121
- 7.2 Connecting Transceivers Over E1 ..... 121
- 7.3 Adding IP Transceivers ..... 126
- 7.4 Network Setup for IP Transceivers ..... 127
- 7.5 Registering FreeSpeak Beltpacks ..... 131
- 7.6 FS Edge Transceivers ..... 134

---

## 7.1 Overview of Transceivers



## 7.2 Connecting Transceivers Over E1

E1 is a telecommunications standard whereby data and power are sent over Cat 5/6 or Fiber cable. E1 connections must have dedicated cabling as it is not possible to use network switches with this technology.

FreeSpeak II systems (1.9 and 2.4 GHz) can be connected to the Arcadia using E1 connectivity.

**Note:** You must **not** place E1 1.9 GHz and IP 1.9 GHz transceivers from the same system in the same RF zone.

Transceivers can be connected directly to the Arcadia (up to two transceivers) or connected using FreeSpeak II splitters (up to 2 splitters, each hosting up to 5 transceivers so up to 10 transceivers in total).

Transceivers/splitters are connected to the Arcadia using connectors G and H. See [Rear Panel Connectors and Indicators on page 32](#)

**Note:** FreeSpeak II splitters can be connected using Fiber or Cat 5/6 cable. Configure the port in: **CCM > Host > Wireless > FreeSpeak II** (default = RJ45).

**Note:** FreeSpeak Icon belt packs require E1 transceiver firmware v.3 or higher. Before registering FreeSpeak Icon belt packs, download and install the latest 1.9 GHz E1 transceiver firmware from the Clear-Com website.

Example connection with a splitter



**Note:** The splitter connections are switched between RJ45 and Fiber routing using DIP switches inside the splitter.

For more examples of connection options and how to set the DIP switches, see the FreeSpeak II Splitter Quick Start Guide available from the [FreeSpeak II Knowledge Center](#).

7.2.1 Cable Distances - E1 Connections

| Arcadia to TCVR/splitter   |  |
|--|--|
| TCVR directly connected to and powered by the Arcadia                  | <ul style="list-style-type: none"> <li>• 328 ft (100 m) using shielded 24 AWG Cat 5/6e cable</li> <li>• 164 ft (50 m) using shielded 26 AWG Cat 5/6e cable</li> </ul>    |
| TCVR directly connected to the Arcadia with local/direct power at TCVR | <ul style="list-style-type: none"> <li>• 2625 ft (800 m) using shielded 24 AWG Cat 5/6e cable</li> <li>• 1312 ft (400 m) using shielded 26 AWG Cat 5/6e cable</li> </ul> |
| Arcadia to splitter (splitter is locally powered)                      | <ul style="list-style-type: none"> <li>• 2625 ft (800 m) using shielded 24 AWG Cat 5/6e cable</li> <li>• 1312 ft (400 m) using shielded 26 AWG Cat 5/6e cable</li> </ul> |

| Splitter to TCVRs             |  |
|-------------------------------|--|
| TCVRs powered by splitter     | <ul style="list-style-type: none"> <li>• 328 ft (100 m) using shielded 24 AWG Cat 5/6e cable</li> <li>• 164 ft (50 m) using shielded 26 AWG Cat 5/6e cable</li> </ul>    |
| TCVRs have local/direct power | <ul style="list-style-type: none"> <li>• 2625 ft (800 m) using shielded 24 AWG Cat 5/6e cable</li> <li>• 1312 ft (400 m) using shielded 26 AWG Cat 5/6e cable</li> </ul> |

**Note:** *Fiber connections: connection distances will depend on existing cable infrastructure.*

## 7.2.2 Using a Transceiver With a Fiber Connection

To connect a Arcadia to a splitter (FSII-SPL) using Fiber, you must install Fiber modules to the Arcadia and the splitter.

- Modules are available for single mode Fiber cable (SFP-SMFO-100M-LX or HLI-SMFO) and multi-mode Fiber cable (SFP-MMFO-100M-FX or HLI-MMFO).
- Modules must be ordered from Clear-Com as a pair, one for the Arcadia and one for the splitter.
- Modules can be hot patched. There is no need to power off devices.
- To install the modules, simply remove the dust cap from the connector port and slide the module into the connector.

**Note:** *When using a Fiber connection, the splitter(s) must have local power supplied.*


## 7.2.3 E1 Transceiver/Splitter Port Connection Type (RJ45 or Fiber)

Transceivers/splitters can be connected to the Arcadia using either RJ45 cable or fiber cable. You can have two RJ45 connections, two Fiber connections or one RJ45 and one Fiber.

The connection type for the ports is determined by a software setting in the Core Configuration Manager (CCM). Default setting is **RJ45**.

### Setting FSII Transceiver/Splitter Connection Type

1. In the CCM, navigate to **Hardware > Hosts > Wireless**.
2. Select **FreeSpeak II > Transceiver Port** type as required.

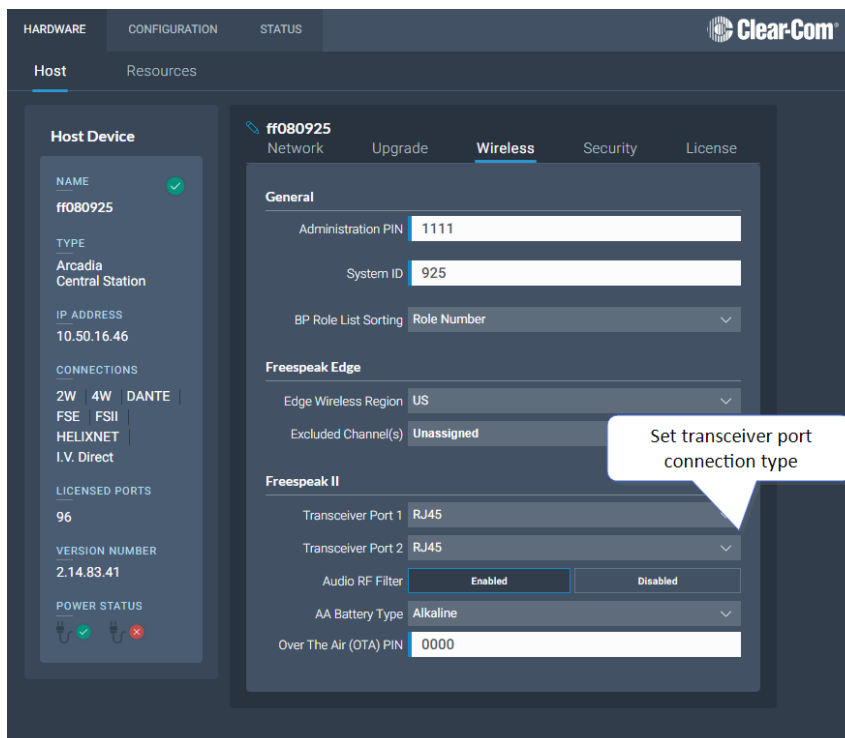

## 7.2.4 Audio RF Filter E1 Transceivers

An audio filter can be enabled or disabled for E1 1.9 GHz transceivers. This audio filter is designed to compensate for corrupted data in the wireless transmission. Default is **Disabled**.

To enable this setting, in the CCM go to: **Hardware > Host > Wireless > FreeSpeak II > Audio RF Filter**.

## 7.2.5 Setting Cable Length Offset (E1)

Cable length offset is used to optionally align the DECT or radio signals between transceivers. If transceivers are not synchronized, beltpack handover will not happen effectively. This is particularly important if you have overlapping transceiver coverage zones (RF cells) or the beltpacks need to move between coverage zones.

Cable length offset or transceiver sync compensation needs to be set when:

- The difference in total cable length between transceivers is  $\geq 1640\text{ft} / 500\text{m}$  (this includes both fiber and copper cable runs).

### Example

TCVR #1: total cable length = 328ft / 100m

TCVR #2: total cable length = 2788ft / 850m

The difference in cable length between transceivers = 2460ft / 750m. Therefore, in this case you must set transceiver cable length on both transceivers. This allows any latency to be calculated and offset by the system.

The screenshot shows the Clear-Com configuration interface. On the left, the 'Resources' panel is open, displaying a list of transceivers. A callout box labeled '1. View transceivers' points to the list. A second callout box labeled '2. Select transceiver' points to the 'TCVR1' entry in the list. On the right, the 'TCVR1 Details' dialog is open, showing the 'General' tab. A callout box labeled '3. Set cable compensation' points to the 'Cable Length' field, which is set to '6-69m'.

| Name             | Type       | Usage |
|------------------|------------|-------|
| CC-EDGE-37256734 | FSH-IP-5.0 | 0:10  |
| CC-TCVR-08XYF426 | FSH-E1.9   | 0:10  |
| TCVR1            | FSH-E1     |       |
| TCVR2            | FSH-E1     |       |
| TCVR3            | FSH-E1     |       |
| TCVR4            | FSH-E1     |       |
| TCVR5            | FSH-E1     |       |
| TCVR6            | FSH-E1     |       |
| TCVR7            | FSH-E1     |       |
| TCVR8            | FSH-E1     |       |
| TCVR9            | FSH-E1     |       |
| TCVR10           | FSH-E1     |       |

TCVR1 Details

General

Model: FSH

Transport: E1

Frequency Type: Unknown

Cable Length: 6-69m

Version: Unknown


In the configuration tool, navigate to: **Resources > Transceivers > Details > General > Cable Length**

## 7.3 Adding IP Transceivers


**Note:** To add E1 transceivers, see [Connecting Transceivers Over E1 on page 121](#).

To add IP transceivers:


1. Navigate to **Hardware > Resources** and select **Add Resource**. The following screen appears.

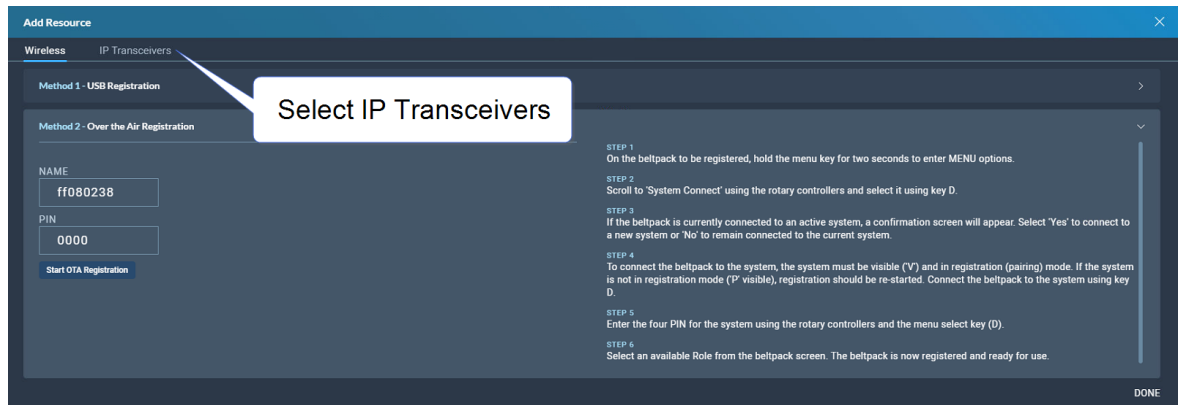

2. Select **IP Transceivers**. The following screen appears:

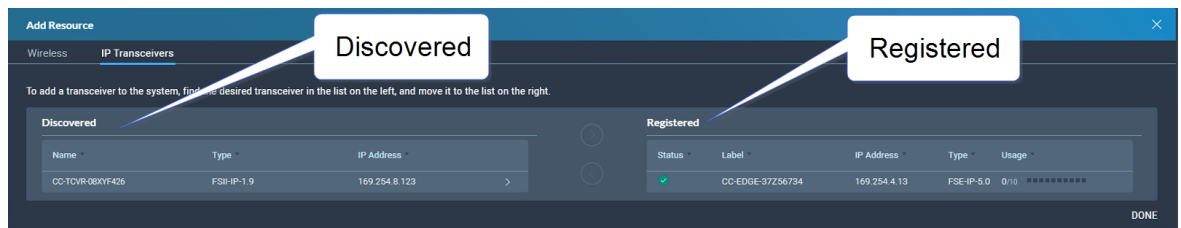

3. Select the transceiver that you want to register from the left-hand area of the screen, and click the right-hand arrow.

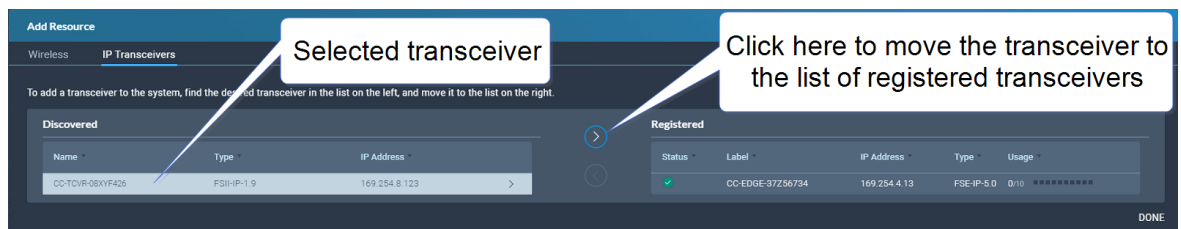

The selected transceiver appears in the right-hand list of registered transceivers.


# 7.4 Network Setup for IP Transceivers

The Arcadia Central Station has LAN connections assignable to different network traffic such as Management, AES67, Dante and so on.


The LAN ports are fully user configurable but you can work with the following default settings:

- LAN 1: Management (HelixNet/I.V. Direct)
- LAN 2: AES67 for FreeSpeak IP Transceivers
- LAN 3: Not configured (SFP)
- LAN 4: Not configured (SFP)


## 7.4.1 Connection to IP Transceivers, Example 1

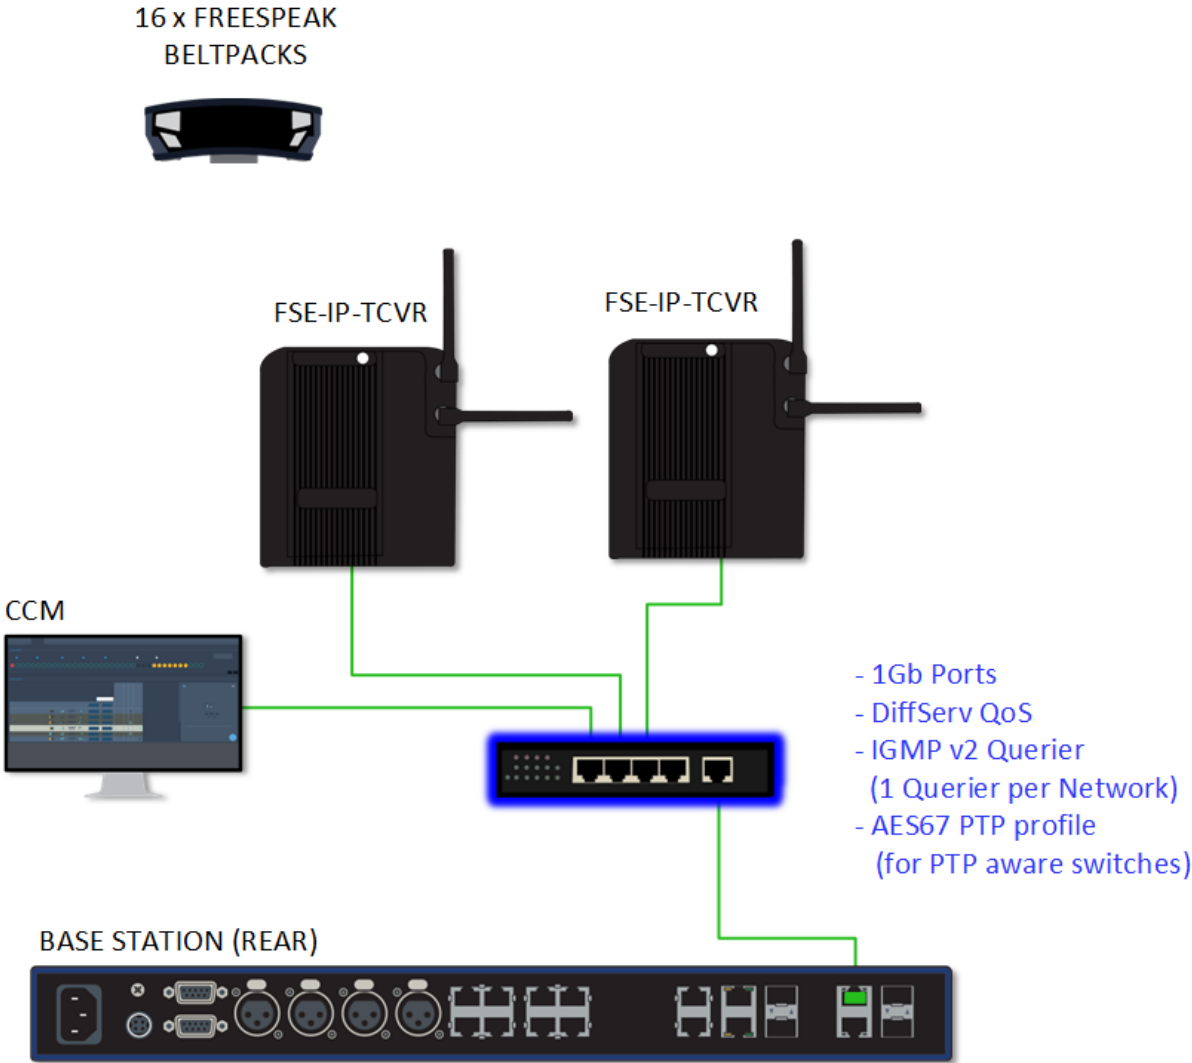

### 7.4.2 Connection to IP Transceivers and Dante, Example 2

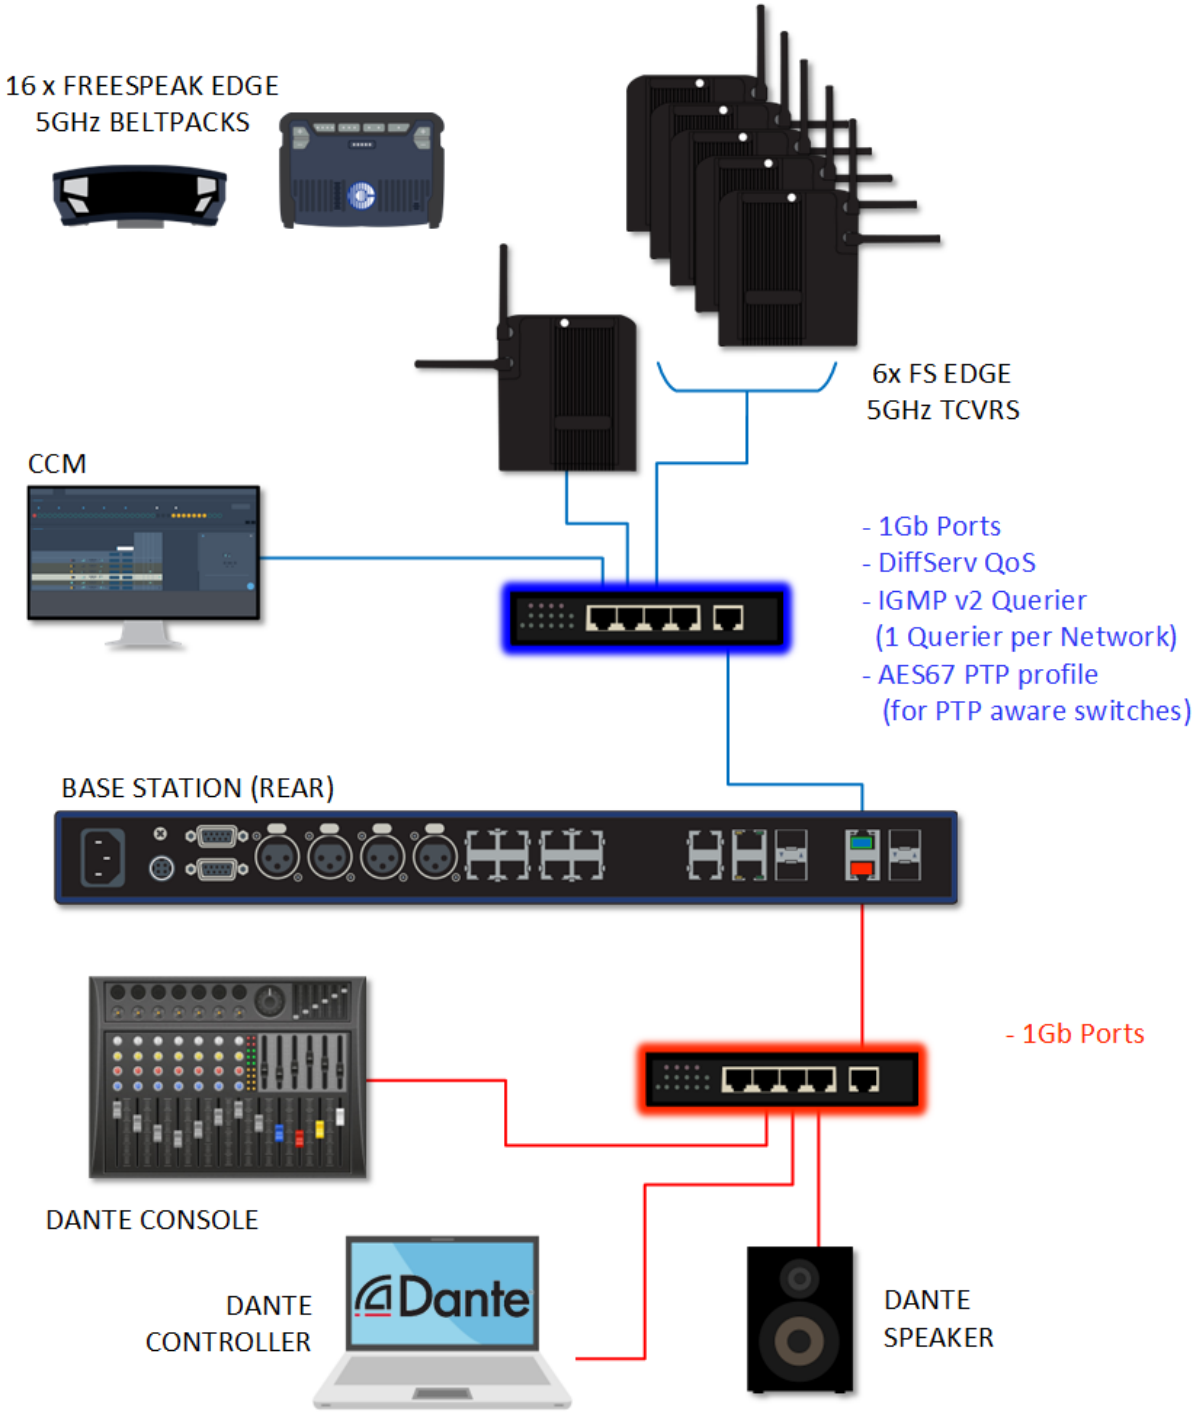


### 7.4.3 Connection to IP Transceivers and Dante, Example 3

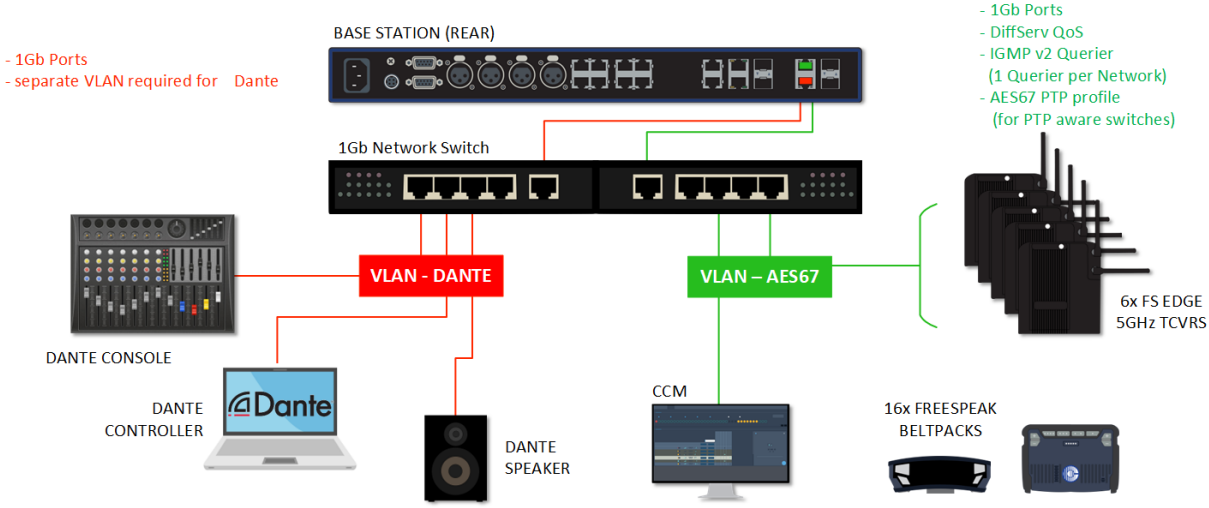

### 7.4.4 Connection to IP Transceivers, Example 4

If you are connecting to a network set up with heavy traffic, Clear-Com recommends that you split AES67 traffic into its own segment.

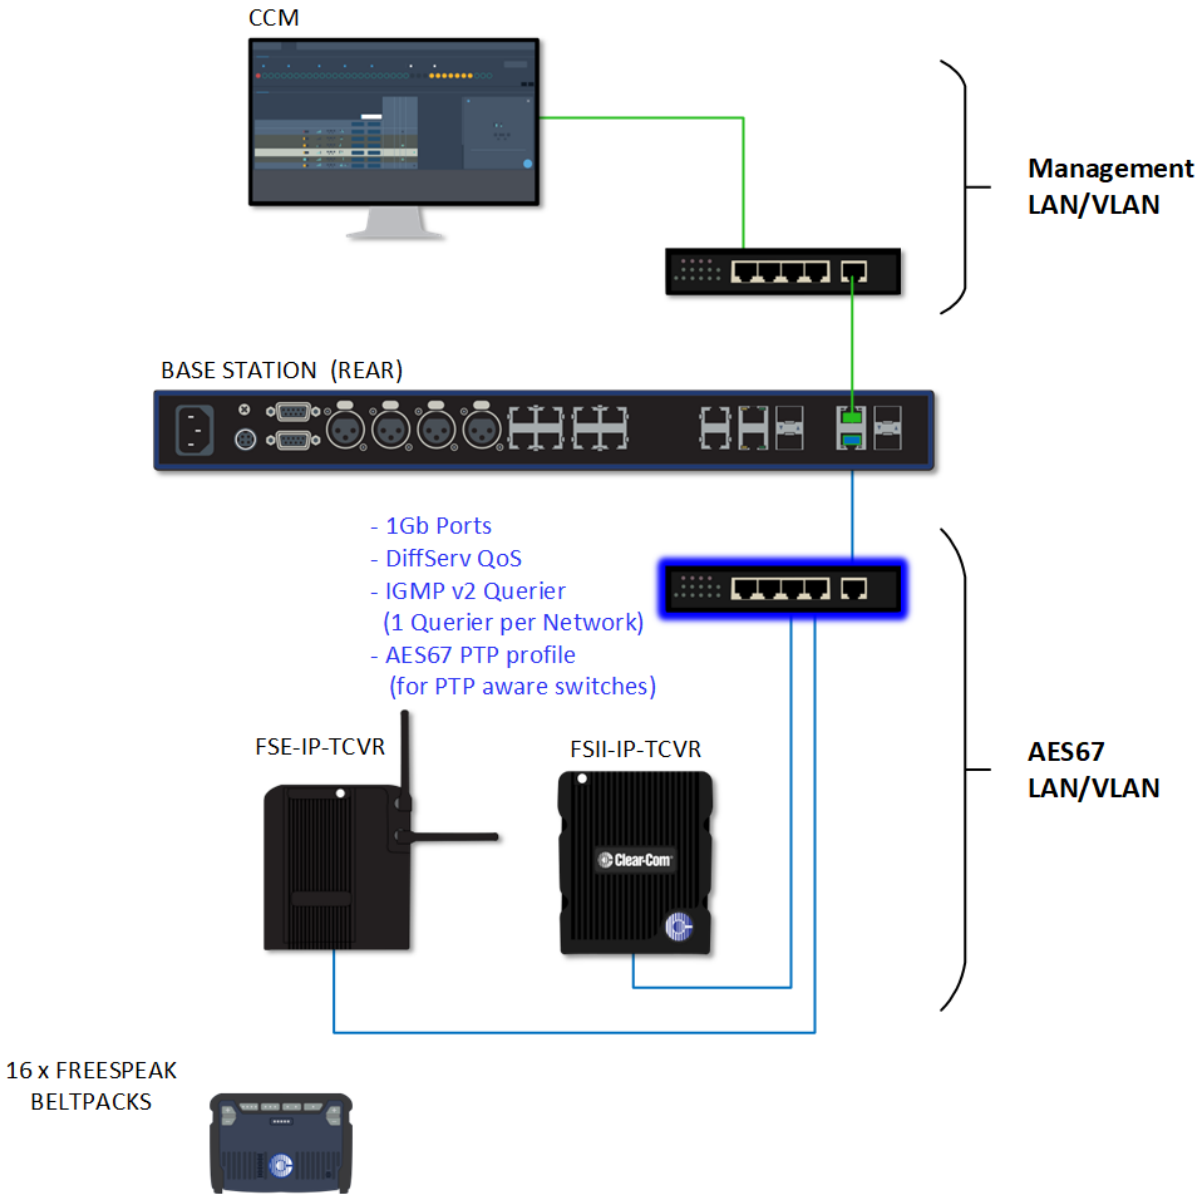

## 7.4.5 Setup Rules

- The default setup, Management on LAN 1 and AES67 on LAN 2, allows your computer to be connected directly to the Arcadia Central Station for configuration and a dedicated switch to LAN 2 for FreeSpeak IP transceivers. This is in order to accommodate the IP transceivers' need for high clocking accuracy. Heavy traffic on your network will degrade the performance of your IP transceivers.
- For the AoIP network, try to keep the number of layer 2 hops between PTP leader and follower as low as possible (no more than 3). If more are required, consider using a Boundary Clock or a Transparent Clock.
- For more information on achieving a well-regulated PTP network and recommendations for suitable switches, see *Clear-Com AoIP Network Recommendations* available from the [FreeSpeak II Knowledge Center](#).
- Use DHCP (the default setting) for fast and easy setup of the devices. If the device does not encounter a DHCP server on the network it will automatically allocate an address in the link-local range (169.254.xx.xx).
- IP addresses can be configured statically under **Hardware > Resources > Network** in the CCM.
- For information on the 5 GHz transceiver (status and connection indicators) see the *Edge Transceiver Quick Start Guide* available from the [FreeSpeak Edge Knowledge Center](#).
- Connection status indicators on the FreeSpeak II IP transceiver are the same as the Edge transceiver (no channel scan).
- For PoE to the transceivers you will need a PoE capable network switch or PoE injector.

## 7.5 Registering FreeSpeak Beltpacks

Before you can use a beltpack, you must register it. This enables the Arcadia Central Station to associate the beltpack with roles and assigned keys.

You can register a beltpack in two ways:

- By USB cable. When registering a beltpack in this way, a role that assigns keys to the beltpack is automatically created for the beltpack. The role can be edited as required in the **Configuration > Roles** page of the CCM.
- Over The Air (OTA). When you register a beltpack in this way you must create a role for it manually in **Configuration > Roles** before the beltpack can connect.

## 7.5.1 Registering a beltpack by USB cable

This method of registering beltpacks is recommended for fast and easy set up.


To register a beltpack using a USB cable, connect a beltpack to Arcadia using a USB A to micro USB B (FSII) / USB C (FSE, FSIC) cable. The beltpack can be powered on either before or after connection. The Arcadia will show 'Beltpack [ID] is now registered' in the front menu screens.

**Note:** *When beltpacks are registered in this way, a role with two channels (1 and 2) is automatically generated and applied to the beltpack. Roles can be edited at any time in the **Configuration** page of the CCM.*

## 7.5.2 Registering a beltpack OTA

To register a beltpack using OTA:

1. Navigate to **Hardware > Resources** and click **Add Resource**. The following screen appears:

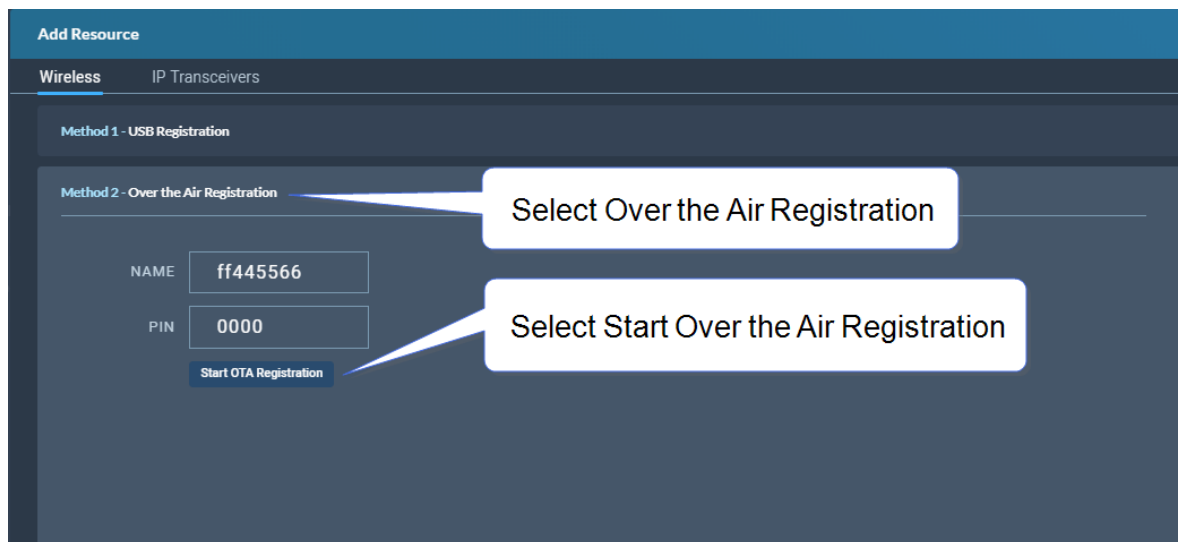

2. Click **Start OTA Registration**.

**Note:** *A timer is started indicating how long the system is open for registration. You can close OTA registration on the system at any point.*

### 7.5.3 Unregistering a beltpack

To unregister a beltpack, navigate to **Hardware > Resources > Endpoints** (click the down arrow to see all connected Endpoints (beltpacks)). Select an Endpoint by clicking on it. Select **Unregister**.



**EDGE-BP-524403**

**General**

|                |          |
|----------------|----------|
| Model          | FSE      |
| Frequency Type | 5.0 GHz  |
| ID             | 524403   |
| Fixed Role     | Producer |

**Version**

|         |          |
|---------|----------|
| Version | 4.6.79.0 |
|---------|----------|

**Unregister**

Free up any assigned resources and deauthorize endpoint from future connections to this system.

**Unregister**

## 7.6 FS Edge Transceivers

Wireless region and channel setup are important when using FS Edge transceivers.

### 7.6.1 Wireless Region

Your Edge transceiver has a wireless region pre-configured, in order to comply with regional regulations. The wireless region setting in the CCM MUST match that of your transceiver, or the system will not work. You will see an error message in the **Status** page if the regions do not match.

To set the wireless region in the CCM, navigate to: **Hardware > Host > Wireless > Wireless Region**.

The screenshot displays the configuration page for a host device (ff080925) in the Clear-Com system. The interface is divided into several sections:

- Host Device Summary:**
  - NAME: ff080925 (with a green checkmark)
  - TYPE: Arcadia Central Station
  - IP ADDRESS: 10.50.17.165
  - CONNECTIONS: 2W, 4W, DANTE, FSE, FSII, HELIXNET, I.V. Direct
  - LICENSED PORTS: 96
  - VERSION NUMBER: 2.14.83.52
  - POWER STATUS: Indicated by a red 'X' and a green checkmark.
- Configuration Tabs:** Network, Upgrade, **Wireless**, Security, License.
- General Settings:**
  - Administration PIN: 1111
  - System ID: 925
  - BP Role List Sorting: Role Number
- Freespeak Edge Settings:**
  - Edge Wireless Region: US (highlighted by a callout bubble labeled "Edge wireless region")
  - Excluded Channel(s): Unassigned
  - Scan All EDGE Transceivers button
- Freespeak II Settings:**
  - Splitter/Transceiver 1: RJ45
  - Splitter/Transceiver 2: RJ45
  - Audio RF Filter: Enabled
  - AA Battery Type: Alkaline
  - Over The Air (OTA) PIN: 0000

### 7.6.2 Channel Scanning

**Note:** Channel Scanning and auto channel selection are only available when at least one 5 GHz transceiver is registered to the system.

The FreeSpeak Edge transceiver system automatically selects channel 1, 2 and a backup channel (if using DFS channels) on each transceiver when you set it up. For best performance, you must ensure that selected channels are clear of interference from other devices. You can use the channel scanning feature and auto select the best channels for each transceiver. Channel scanning will scan all the 5 GHz channels in your local RF space.

To conduct a channel scan, navigate to: **Hardware > Resources > Transceivers [select transceiver] > Wireless Channels** and select **Refresh Scan**.

After channel scanning, to auto select the optimum channels for each transceiver use **Auto Select**.

**Refresh scan**

**Auto select best channels**

**Click on a channel to go to details for that channel in list view**

**In this case you can see that the selected channels have low availability. It will be helpful to use auto select to find the optimum channels for this transceiver**

**You can see all available channels here. Scroll down to view**

| Channel | Score | RSSI | Use | Ap | SSID   |
|---------|-------|------|-----|----|--|
| 36      | 22%   | 22%  | 0%  | 3  | Cambridge_Guest, Cambridge_Users, Unknown System |
| 40      | 28%   | 21%  | 0%  | 2  | Cambridge_Guest, Cambridge_Users                 |
| 44      | 22%   | 21%  | 13% | 3  | Edge System, Cambridge_Guest, Cambridge_Users    |
| 48      | 28%   | 21%  | 0%  | 2  | Cambridge_Guest, Cambridge_Users                 |
| 52      | 16%   | 28%  | 13% | 3  | Edge System, Cambridge_Guest, Cambridge_Users    |
| 56      | 36%   | 16%  | 4%  | 2  | Cambridge_Guest, Cambridge_Users                 |
| 60      | 15%   | 29%  | 14% | 3  | Edge System, Cambridge_Guest, Cambridge_Users    |

### 7.6.3 Channel Score

Channel **Score** is calculated using a weighted combination of:

- **RSSI** (Received Signal Strength Indicator)
- Channel activity (**Use**)
- Access points (**Ap**)

To scan all the transceivers in your network simultaneously, go to **Hardware > Host > Wireless > FS Edge > Scan All Edge Transceivers**.

For more detail on using FreeSpeak Edge transceivers, see the FreeSpeak Edge User Guide available online from the Clear-Com FreeSpeak Edge [Knowledge Center](#).

# 8 Using HelixNet Wired Partyline Intercom

---

This chapter describes how to connect to HelixNet Wired Partyline Intercom. It contains the following sections:

- 8.1 Introduction ..... 138
- 8.2 HelixNet Connections - General Outline ..... 139
- 8.3 Connecting HelixNet User Stations to the network ..... 140
- 8.4 Connecting User Stations via Digital Powerline Device ..... 140
- 8.5 Pairing HelixNet User Stations to Arcadia ..... 141
- 8.6 Digital Powerline Device Statistics and Messages ..... 144


---

## 8.1 Introduction

Arcadia supports HelixNet wired partyline intercom, including the remote station, the speaker station and the beltacks. HelixNet user stations connect to Arcadia via an ethernet network and HelixNet keysets can be assigned to any HelixNet enabled channel in the Arcadia system. Each HelixNet enabled channel requires an Arcadia licensed port.

HelixNet beltacks, remote stations and speaker stations are connected to the Arcadia on the LAN port that is configured for the HelixNet network (default LAN 1) via an Ethernet network.

HelixNet user stations can also be connected to the Arcadia via the HelixNet Powerline Device. HXII-DPL acts as a bridge between Ethernet and Powerline, enabling connection and powering of devices on the Powerline using standard XLR microphone cable and passive splits.

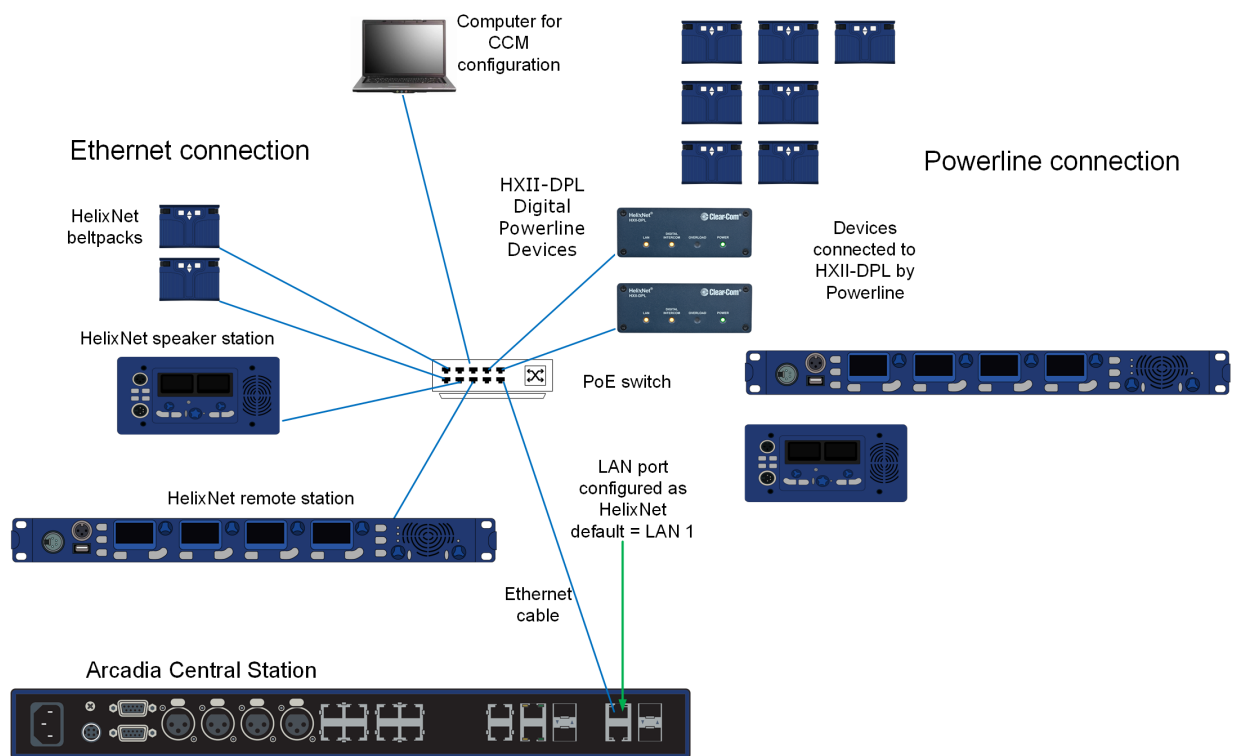


**Note:** Arcadia's HelixNet network is combined with the Management network.

**Note:** When using an IEEE-802.3af compliant PoE switch, be sure to note the switch's power budget. Each HXII-BP requires 4 Watts of power. The HelixNet remote and speaker station each require 15.4 Watts of power from the switch. Do not exceed the power budget of the switch when attaching devices. For devices connected via Powerline see the HelixNet Powerline Calculator available from the HelixNet Knowledge Center.

**Note:** You can enable up to 24 channels for HelixNet. How many channels you use is limited by how many port licenses you have. One HelixNet enabled channel consumes one port license.

**Note:** User station keysets can be assigned to any HelixNet enabled channel.

**Note:** *HelixNet should be listed in the CCM under **Hardware>Host**. If it is not listed and your device is manufactured before June 1st 2022 it may require a HelixNet activation license. Please contact Clear-Com Sales for further information.*

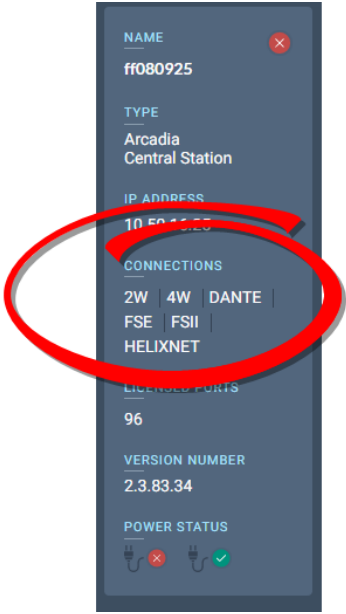


See the *HelixNet for Arcadia User Guide*, available from the [HelixNet Knowledge Center](#) or more information on the HelixNet system and components.

## 8.2 HelixNet Connections - General Outline

Before connecting HelixNet beltpacks you must have:

- At least 1 channel enabled for HelixNet (by default, channels 1 - 4 are enabled). See [Enabling Channels for HelixNet on page 83](#)
- Sufficient number of licensed ports for the HelixNet enabled channels (max 24)
- **Port Type** on at least 1 licensed port set to type **Any** (default) or **HelixNet**. If this is not done, HelixNet keysets cannot be assigned

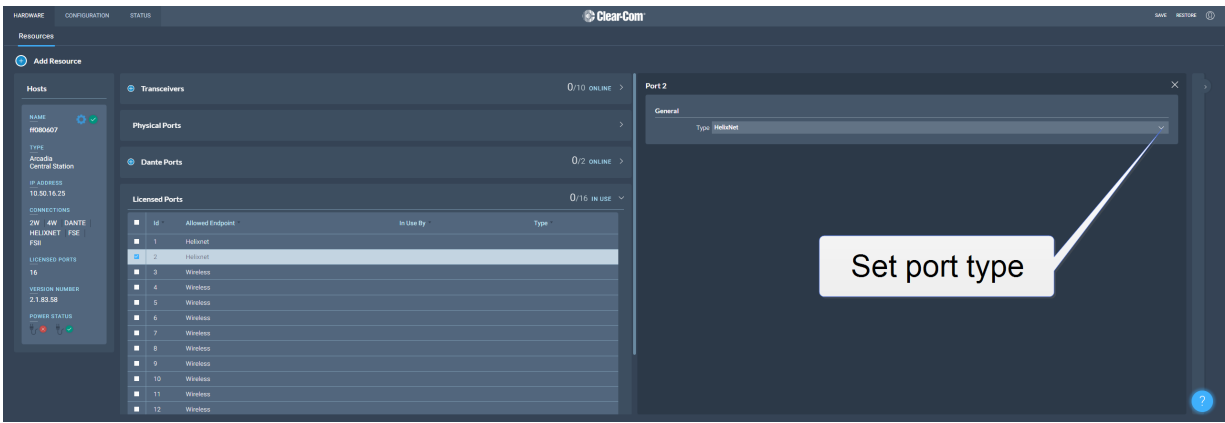

For a quick test setup, you can work with the default settings which allow licensed ports to be used for any function and have 4 channels HelixNet enabled. For a full installation, you can enable channels and create roles for HelixNet beltpacks, remote stations and speaker stations.

## 8.3 Connecting HelixNet User Stations to the network

HelixNet wired devices are connected to Arcadia's HelixNet network using the RJ45 ethernet connector on the back of each device.

HelixNet beltpack base connectors



Connect RJ45 Ethernet cable here

HelixNet remote station rear connectors



Connect power supply unit (PSU) here

Connect RJ45 Ethernet cable here

HelixNet speaker station enclosure (rear connectors) housing A speaker station




Connect RJ45 Ethernet cable here

Connect power supply unit (PSU) here

## 8.4 Connecting User Stations via Digital Powerline Device

HXII-DPL Powerline device connects to your Arcadia via network and must be powered using the supplied power supply (PSU-EXT-005). Multiple HXII-DPL Powerline devices (24 max) can be added to a system either at a central location, or, for best performance, locally where connections to HelixNet user stations are needed.

**Note:** *HelixNet user stations must run HelixNet firmware v.4.5 (included with Arcadia 2.11+) before use with the HXII-DPL Powerline device.*

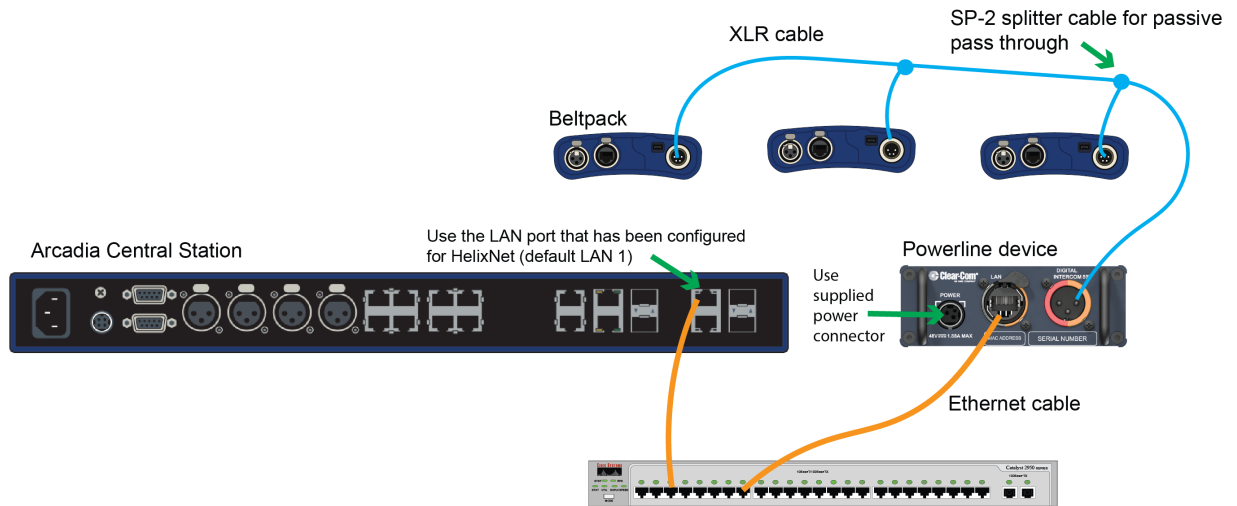

Connect the HXII-DPL Powerline device to HelixNet user stations using 3-pin XLR cabling, via passive splits or daisy chaining as appropriate.

Once physically connected and powered, the HelixNet user stations can be paired to the system.

HXII-DPL Powerline device does not need to be paired to the system. It is not visible in the CCM (**Status > Overview > Wired**) on first connection until a HelixNet endpoint is paired and connected via the device.

## 8.5 Pairing HelixNet User Stations to Arcadia

Once connected to Arcadia's HelixNet network and appropriately powered, HelixNet beltpacks, remote stations and speaker stations can be paired to the Arcadia system:


- from the CCM
- from the HelixNet user station, using the front panel menu


**Note:** *Troubleshooting: you may need to make sure that the connecting device is in the same IP range as the host system. To view and edit the device IP address, navigate to **Networking>Preferences>IP address** in the device menu system.*

**Note:** *Pairing from the CCM is available for endpoints that were last used on a HelixNet HMS-4X based system version 4.4 and higher. Endpoints migrating from HMS-4X version 4.2 or earlier to an Arcadia system must initially be paired from the front panel menu of the HelixNet user station.*

### 8.5.1 Pairing/unpairing HelixNet User Stations in the CCM

When the user stations are connected to the Arcadia HelixNet network and appropriately powered, they will appear as **Discovered** in the CCM.

1. In the CCM, navigate to **Hardware>Resources>Add Resource**  **>Wired** .
2. Select the device under **Discovered** and click the arrow to move it to **Paired**.
3. The device will work through its connection sequence.
4. The device is ready for use.

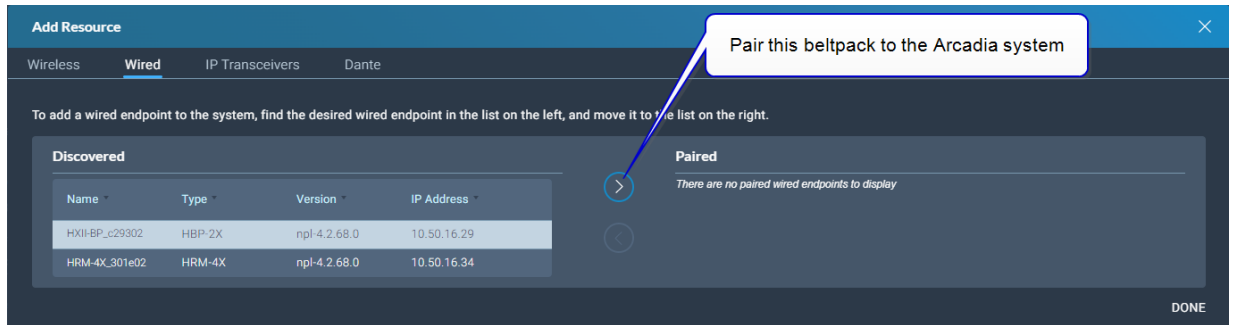


Repeat this step for each device.

**Note:** *The device will automatically update on connection if a difference in firmware versions is detected between the Arcadia and the HelixNet Endpoint.*


**Note:** *HelixNet Endpoints manufactured in January 2023 (serial number ends with C00 or higher letter/number) or later can only be used with Arcadia version 2.8 or HMS-4X version 4.4. These endpoints cannot be used with older versions due to the difference in hardware components.*

Once paired to a system, the device will automatically connect to that system whenever it is connected to the network. The devices can be unpaired from the system to prevent this from happening. To unpair a device from the system, navigate to **Hardware>Resources>Endpoints** [select device]>**Unpair**.

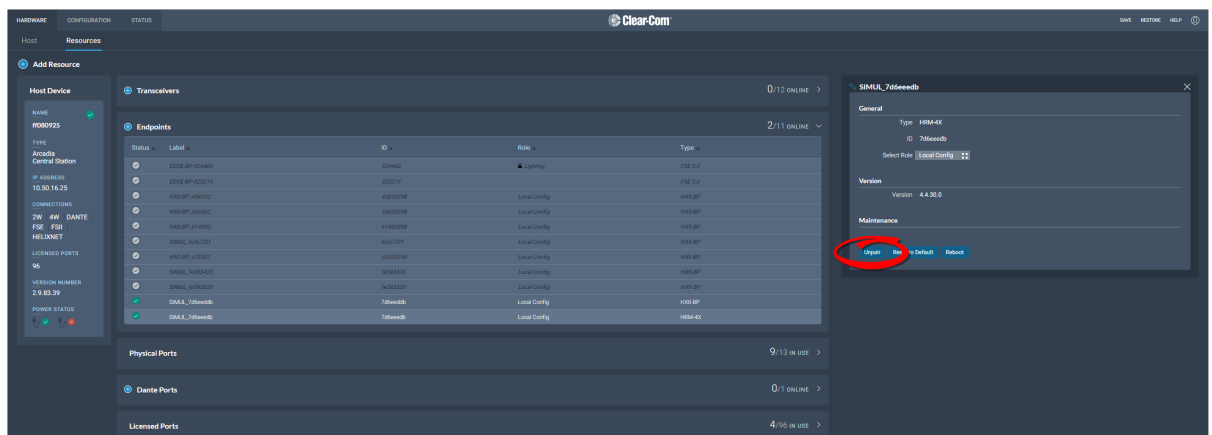

## 8.5.2 Pairing HelixNet user stations from the front panel menu

### Beltpacks

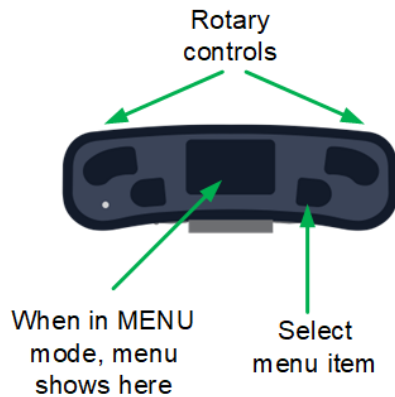

1. Press the **Menu** button on the front of the beltpack (short press) to enter menu mode.
2. Press the left call button on the beltpack (**back**). You will see the beltpack menu system.
3. Using the rotary controls and the right call button (**select/enter**), navigate to **Networking>Pair to Station**.
4. Select either;
  - **Pair by Name** and select the name of Arcadia
  - **Pair by IP** and enter the IP address of Arcadia's HelixNet LAN connector

**Note:** You need to **Save** the IP address (right call button).

### Remote stations and speaker stations

1. Press the **Menu** button to enter menu mode.
2. Using the rotary controls, navigate to **Networking>Pair to Station**.
3. Select either;
  - **Pair by Name** and select the name of Arcadia
  - **Pair by IP** and enter the IP address of Arcadia's HelixNet Network using the rotary controllers

**Note:** All devices will automatically update on connection if a difference in firmware versions is detected.

## 8.5.3 Using HelixNet user stations on Arcadia

Once the HelixNet user station is connected to the Arcadia and the firmware updated if necessary, the HelixNet user station can be configured.

Arcadia's default configuration assigns the first channels of the system to the HelixNet user stations on connection.

HelixNet user stations can be operated in **Local Config**. In this case, the user station is fully configured from its front panel menu. Any of the connected Arcadia's HelixNet enabled channels can be assigned to the keysets of the user station.

Where central management is required, **Roles** can be created in the Arcadia's CCM and then assigned to the HelixNet user station, either from the CCM's **Hardware>[Endpoint]>Properties** or in the front panel menu of the user station. A role is a configuration of the keysets and settings of the user station. Multiple HelixNet devices can share a role and any role changes will be updated in real time.

- Create roles for your devices. See [Roles on page 94](#) in this User Guide.

For HelixNet manuals and other resources see:

[The HelixNet Knowledge Center](#) on the Clear-Com website.

## 8.6 Digital Powerline Device Statistics and Messages

You may see the following statistics and messages in the Arcadia Central Station CCM:

| Powerline statistics |   |
|----------------------|---|
| Collision rate       | 25-35% - high<br>≥ 35% - very high  |
| Error rate           | 0-0.1% error - low data quality<br>≥ 0-0.1 % error - very low data quality                                      |
| Bandwidth            | 40 - 130 Mbps - working range<br>15 - 40 Mbps - low data rate<br>≤ 15 Mbps - very low data rate                 |
| Voltage              | < 18 V DC - very low power<br>< 24 V DC - low power<br>> 24 < 31 V DC - working range<br>> 31 V DC - high power |

| Condition   | Steps to take   |
|---|---|
| The Powerline data collisions are high or very high   | <ol style="list-style-type: none"> <li>1. Check if Powerline is overloaded</li> <li>2. Check cable shielding</li> <li>3. Check HelixNet user stations</li> </ol>  |
| The Powerline data quality is low or very low<br><br>Note: can be caused by external interference or too many devices trying to use the same carriers | <ol style="list-style-type: none"> <li>1. Check if Powerline is overloaded</li> <li>2. Check for cross-connected Powerlines</li> <li>3. Check cable shielding</li> <li>4. Check HelixNet user stations</li> </ol>   |
| The Powerline voltage is low/very low   | <ol style="list-style-type: none"> <li>1. Check if the Powerline is overloaded</li> </ol>   |
| The Powerline voltage is high   | <ol style="list-style-type: none"> <li>1. Check the HelixNet user station and the cable that connects it</li> </ol>   |
| <i>The Powerline voltage at [name] endpoint is unbalanced.</i>  | <ol style="list-style-type: none"> <li>1. Check cabling for continuity and resistance between pin 2 and 3</li> <li>2. Check the HelixNet user station</li> </ol>  |
| <i>HXII-DPL Powerline device is not reachable.</i>  | <ol style="list-style-type: none"> <li>1. Power cycle the Powerline device and the connected user stations</li> <li>2. Contact Clear-Com if the problem persists</li> </ol>   |
| <i>HXII-DPL Powerline device has a connection &gt;7.</i>  | <ol style="list-style-type: none"> <li>1. Check the number of connected HelixNet user stations</li> <li>2. If the problem persists when the number of connected units is <math>\leq 7</math>, check the integrity of the Powerline cable shields</li> </ol> |

**Note:** *To ensure good audio quality, consider adding more HXII-DPL Powerline devices to your system.*

# 9 Using V-Series Keypanels

---

This chapter describes how to connect to V-Series Panels. It contains the following sections:

- 9.1 Introduction ..... 147
- 9.2 Panel connection methods ..... 147
- 9.3 Connecting Panels to the Network ..... 148
- 9.4 Panel roles ..... 149
- 9.5 Panel menu controls ..... 152
- 9.6 Connecting Keypanels via I.V. Ports ..... 154
- 9.7 Connecting Keypanels via AES67 Ports ..... 157
- 9.8 Using the Panel ..... 159

---

## 9.1 Introduction

V-Series panels connected via I.V. port: Arcadia 4.0 and higher.

V-Series panels connected via AES67 port: Arcadia 4.1 or higher.

V-Series keypanels provide intercom users on an Arcadia system with high capacity user stations. V-Series keypanels provide a single page of 12, 24 or 32 keysets with lever, rotary, or push button keysets. The keysets can be assigned to a single Channel, Group, IFB, Role, and interface per keyset with the desired key activation.

**Note:** *V-Series Iris and IrisX keypanels support all Arcadia features. Non-Iris panels are partially supported in Arcadia with I.V. Port connectivity only. Non-Iris panels cannot be upgraded from the Arcadia.*

**Note:** *V-Series expansion panels are not supported on Arcadia.*

**Note:** *V-Series panel GPI inputs 1-4 can be configured for local control in the **Role** settings. GPI 1 and GPO 1 are additionally available for system action and trigger assignments in the **Logic** configuration.*

**Note:** *V-Series panel auxiliary audio inputs and outputs have the following functions when used with Arcadia:*

- **Aux Output** provides a line level output of the panel's headset/speaker mix, controlled by the panel's Main level controller.
- **External Input 1 & 2** are routed to Headset 1 with level controlled by the panel's Aux level control.
- **Headset 2** is listen only and outputs the Main mix of the panel in addition to Gooseneck/Headset 1 input at -12dB relative level.
- **Hot Mic** provides a line-level output of the Gooseneck/Headset 1 microphone Input.

## 9.2 Panel connection methods

- I.V. port type - connect to the management LAN (default LAN 1)
- AES67 port type - connect to the AES67 LAN (default LAN 2)
  - Use device discovery
  - Use the mDNS name of the panel

**Note:** *An I.V. panel connection requires an I.V. port license.*

**Note:** *An AES67 panel connection requires an AES67 port license.*


## 9.3 Connecting Panels to the Network

**Note:** Use Cat 5/6e cable.

**Note:** Connect to the port labeled 'Ethernet' or 'LAN' on the panel.

**Note:** The panels can use DHCP for fast and easy set up.

### 9.3.1 I.V. port type

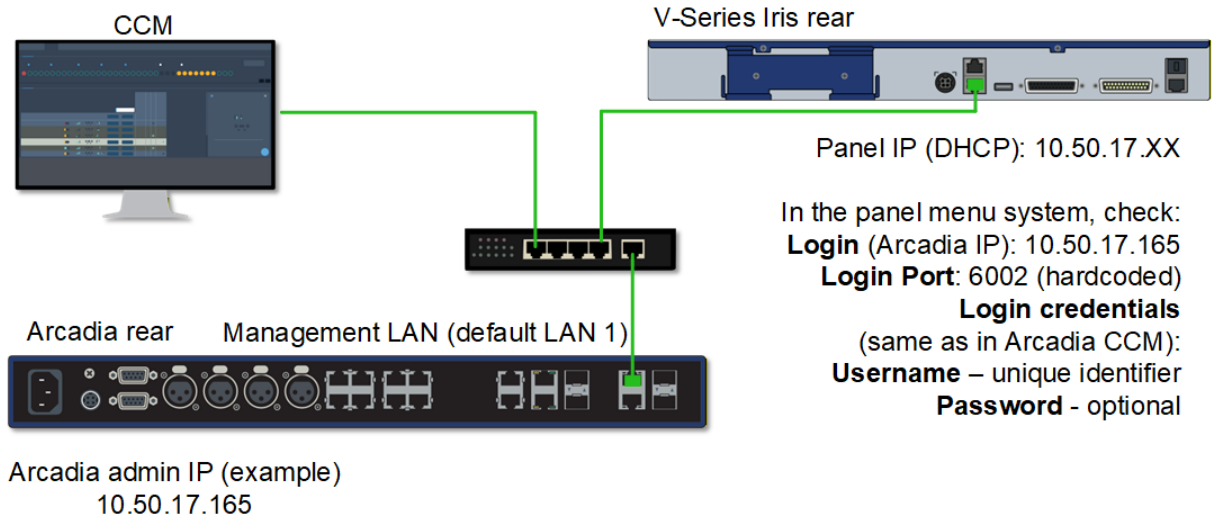


For the panel to connect to Arcadia:

- The devices must be able to reach each other over the network
- The panel must have:
  - The Arcadia IP address (Management LAN, default = LAN 1)
  - Login Port: 6002
  - Username and password, exactly as configured in the CCM

These details are viewed and edited in the panel menu system.

### 9.3.2 AES67 port type

The panel must be connected to a correctly configured AES67 network.

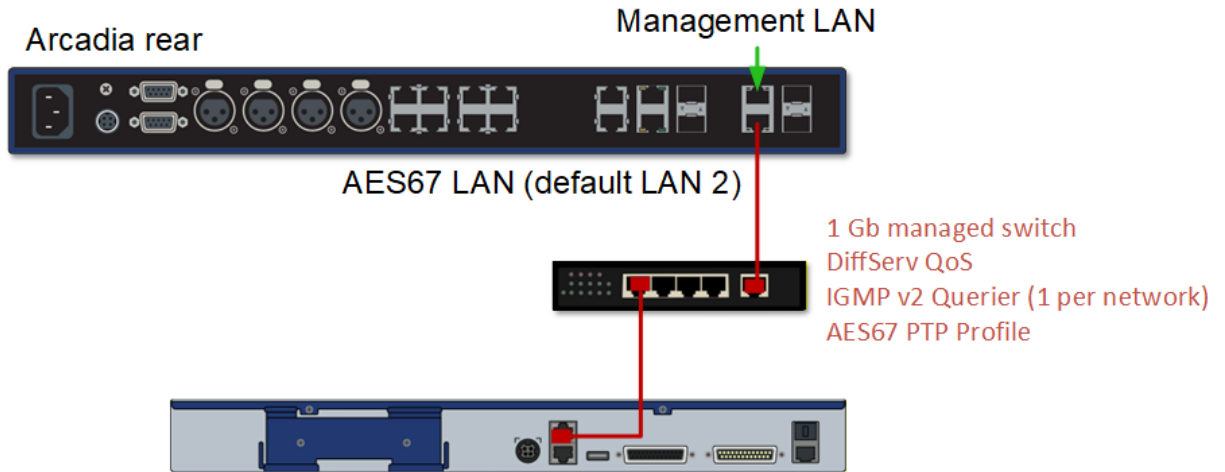

**Note:** *If the panel does not have a static IP address and does not find a DHCP server on the network, it will connect in Link-Local. This is not recommended for ongoing use.*


For the panel to connect to Arcadia:

- The host and panels must be on the same VLAN
- The panel must have:
  - Login Port: 6001 (hardcoded)


View and edit panel network details in the panel menu system.

## 9.4 Panel roles

Before using the panel you must configure a role for it in **CCM > Configuration > Roles**. Create a role type that matches your panel (12, 24 or 32 keys).

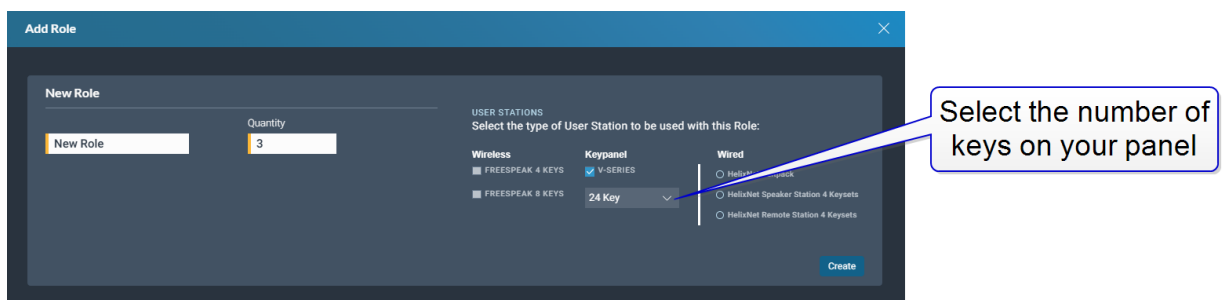


It is possible to select a role for a panel that does not match the number of keys on the panel. For example, you can select a 12 key role on a 32 key panel. If the role layout does not match the physical panel, the panel keys are populated serially, starting from key 1 (Reply) in the lower left-hand corner of the panel.

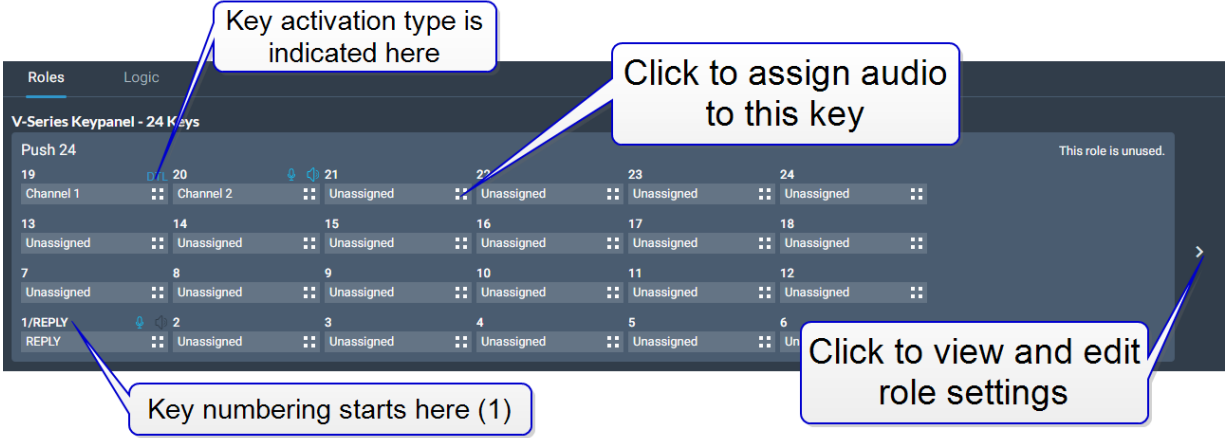


**Note:** Desktop panels can be configured using the 12 key 1RU Role layout. Keyset layout on a desktop keypanel is as follows:

| CCM Panel Keyset | Desktop Panel (Row 1 = bottom row) |
|------------------|------------------------------------|
| 1-3              | Row 1                              |
| 4 - 6            | Row 2                              |
| 7 - 9            | Row 3                              |
| 10 - 12          | Row 4                              |

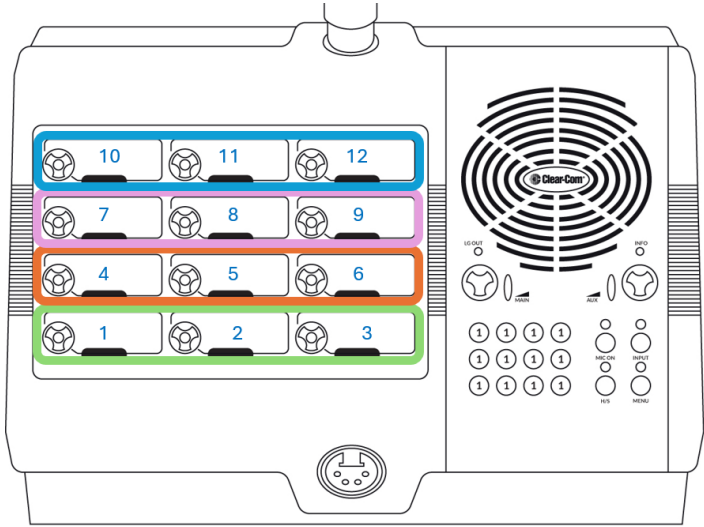

### 9.4.1 Fixed Role

If you do not want your panel user to select a role for themselves, you must fix the role to the panel. Do this in **Hardware > Resources > Endpoints** [select panel].

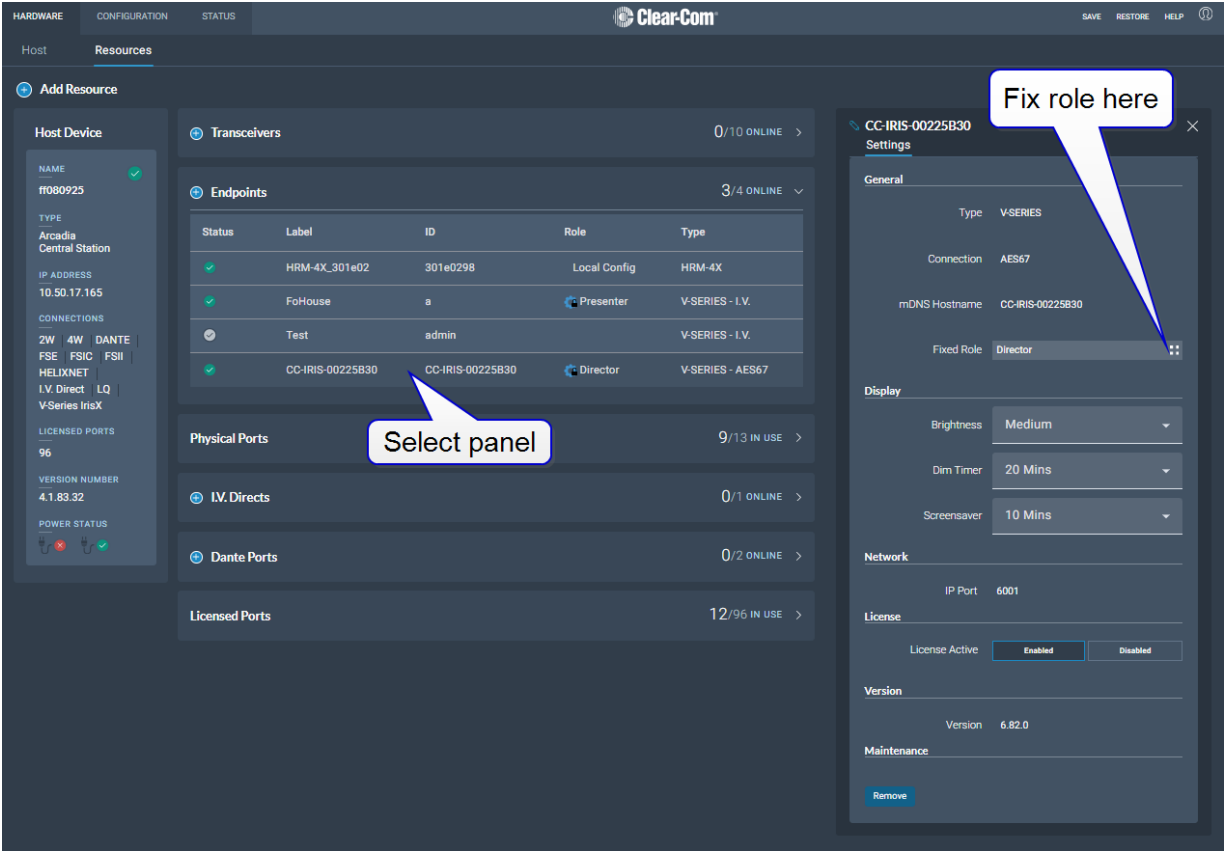

**Note:** The fixed role toggles on and off.

For more information on using roles with your keypanel see [Managing Roles on page 95](#).

# 9.5 Panel menu controls

## 9.5.1 Panel controls for menu navigation - quick guide

### Lever Panel

#### Menu Navigation

Editing fields are used for manually entering or editing items such as IP, usernames, passwords. Existing entries can be navigated for editing.




Press lever down to select or exit and save

#### Editing Fields

Front panel menus are navigated, saved, and exited using the keysets



Move back      Move forward

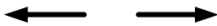

#### Keypad for data entry

Numbers




Select 1      Select 2

Numbers and alphabet



Press lever down to scroll through letters and numbers. Example: to select 'a' press lever 3 times.

Rotary Panel

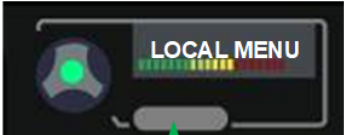

Press to select or exit and save



Press to move back      Move forward



Press to select 1      Press to select 2




Press to scroll through letters and numbers

Push Panel



Press to select or exit and save

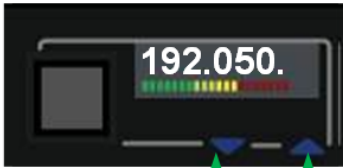

Press to move back      Move forward



Press to select 1      Press to select 2



Press to scroll through letters and numbers


## 9.6 Connecting Keypanels via I.V. Ports

Overview:

- Cable the devices as shown [Connecting Panels to the Network on page 148](#)
- Add an I.V. type **Keypanel** in **Hardware > Resources** (CCM)
- In the panel menu system, set connection details (Arcadia management IP address, port, and credentials). Once you have done this the panel will begin its connection sequence
- Check successful connection in **Hardware > Resources** or **Status > Keypanels**

**Note:** *To complete the connection process, the panel must have a role and an active license.*


### 9.6.1 Adding an I.V. Keypanel in the CCM

1. In the CCM, navigate to: **Hardware > Resources > Add Resource**  > **Keypanel**.
2. Select **Method 1 - Manual**.
3. Fill in the label, select port type and enter a username and password.

**Note:** *The password is optional, it can be left blank.*

**Note:** *If you do not enter a username the system will create a random, editable username for you. **Username** is essential as it provides a unique identifier for this port.*

4. Click **Create**.
5. This creates a keypanel endpoint that you can view and edit. Select the endpoint in the CCM:

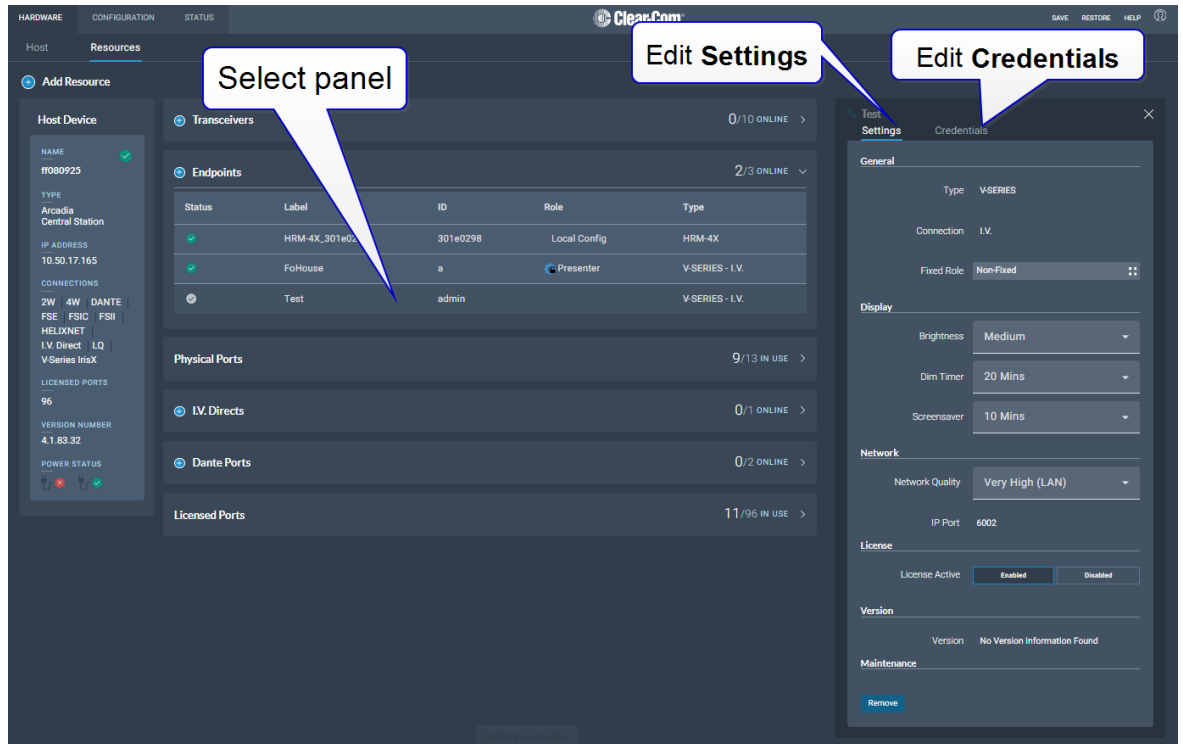

6. A green checkmark indicates successful connection.

**Note:**

*If the panel does not have a fixed role, you must select a role on the panel using the panel controllers before the panel will complete its connection sequence. If the panel has a fixed role (and an active license) it will connect immediately.*

## 9.6.2 Setting IP Connection Details in the Panel Menu (I.V. Connections)

On the panel, press the **Menu** button and use the panel controls to:

1. Go into the **LOCAL MENU**
2. Select **IP SETUP**
3. Select **NET SETUP**

**Note:**

*To save your changes, exit the menu item (move back up the menu system)*

- a. Select **DHCP** and check that this is enabled. Press **DHCP** again to exit and save
  - b. Select **LOGIN IP** and input the IP address of the Arcadia (Management). Press **LOGIN IP** to exit and save
  - c. Select **LOGIN PORT** and input 6002. Press **LOGIN PORT** to exit and save
4. Press to exit **NET SETUP**
  5. Select **USER ID** and input the User ID, exactly as set in the Arcadia CCM. Press **USER ID** to exit and save

6. Select **PASSWORD** (if used) and enter it exactly as set in the Arcadia CCM. Press **PASSWORD** to exit and save

**Note:** *Password is hidden until you press any key on the panel.*

7. Once you have done this, the panel will automatically connect to the Arcadia. When connected, the panel displays 'Press any key to start' and is ready to be assigned a Role from the panel or from **CCM Hardware > Endpoints**.
8. Successful connection is indicated by a green check mark in the CCM in **Hardware > Endpoint** and **Status > Keypanel** .

## 9.7 Connecting Keypanels via AES67 Ports

Overview:

- Cable the devices as shown [Connecting Panels to the Network on page 148](#)
- In the panel menu system, set connection details (panel and Arcadia AES67 LAN port are in the same VLAN, DHCP status and port number)
- Add an AES67 type **Keypanel** in **Hardware > Resources** (CCM)
  - Use the discovery feature (recommended for fast setup)
  - Use panel mDNS name
- Check successful connection in **Hardware > Resources** or **Status > Keypanels**

**Note:** *To complete the connection process, the panel must have a role and an active license.*

### 9.7.1 Setting IP Connection Details in the Panel Menu (AES67 Connections)

On the panel press the **Menu** button and use the panel controls to:

1. Go into the **LOCAL MENU**
2. Select **IP SETUP**
3. Select **NET SETUP**


**Note:** *To save your changes, exit the menu item (move back up the menu system)*

- a. Select **DHCP** and check that this is enabled. Press DHCP again to exit and save
  - b. Select **LOGIN PORT** and input 6001. Press LOGIN PORT to exit and save
4. Press to exit **NET SETUP**
  5. Exit the menu system.


### 9.7.2 Adding an AES67 Keypanel in the CCM

When the panel is cabled to the Arcadia AES67 network, it will become visible in the Discovery screen.

Discovery Method (recommended)

1. In the CCM, navigate to: **Hardware > Resources > Add Resource**  **> Keypanel**.
2. Select **Method 2 - Discovery**.

3. Select the discovered panel and move it to **Registered** using the arrow.

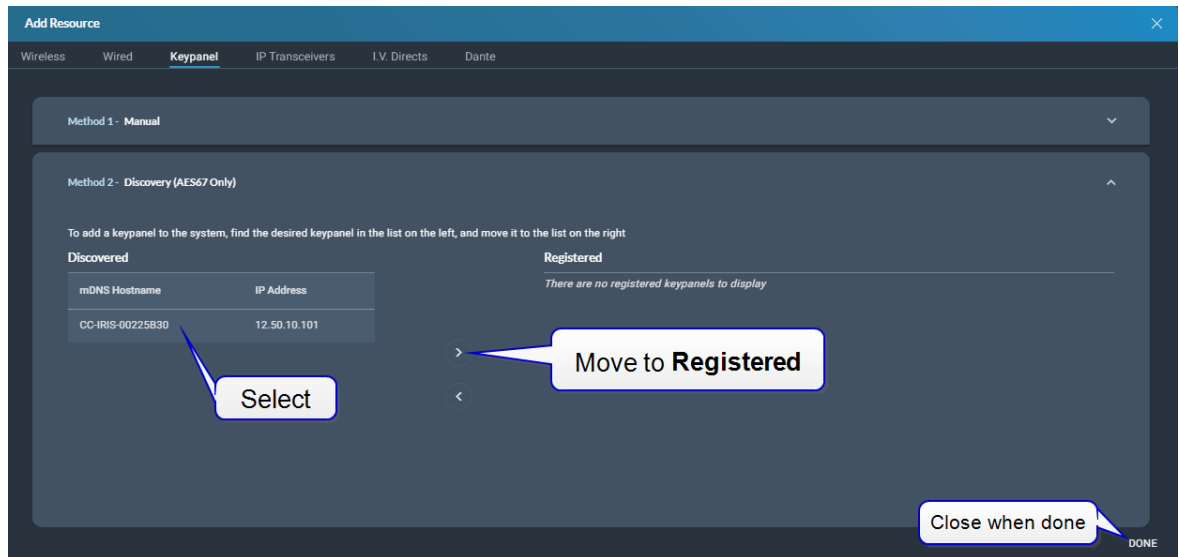

4. The panel will start to work through its connection sequence.
5. A green checkmark indicates successful connection.

**Note:** *If the panel does not have a fixed role, you must select a role on the panel using the rotary controllers before the panel will complete its connection sequence. If the panel has a fixed role (and an active license) it will connect immediately.*

**Note:** *The devices will discover across subnets but to connect they must be in the same subnet.*


**Note:** *To unregister the panel, use the back arrow.*

### Manual Method (mDNS)

Find the mDNS name of your panel in the menu screens of the unconnected panel in the form CC-IRIS-XXXXXXXX where XXXXXXXX is the serial number of the panel. The serial number of the panel is printed on the rear of the panel.

1. In the CCM, navigate to: **Hardware > Resources > Add Resource**  **> Keypanel**.
2. Select **Method 1 - Manual**.

- Fill in the label, select port type and enter the mDNS hostname.

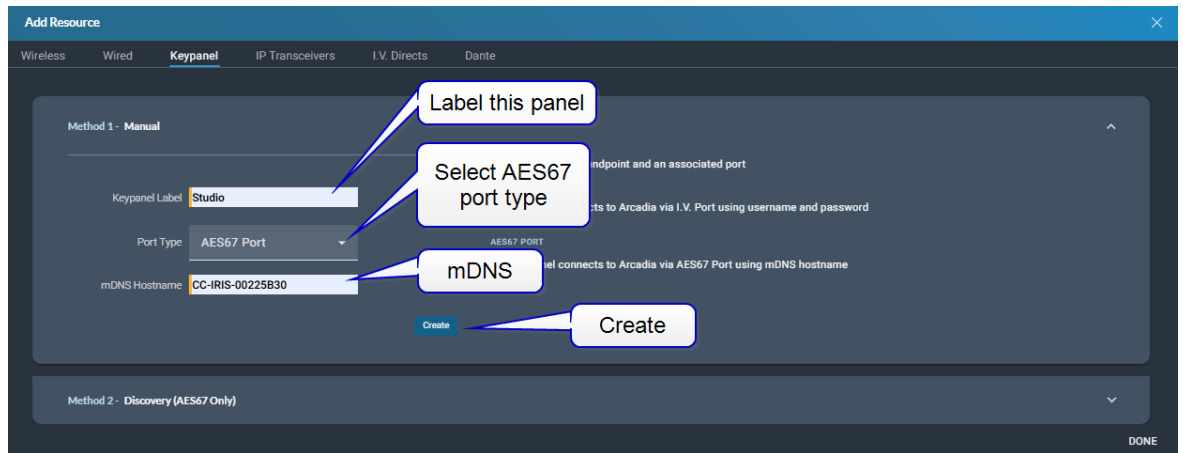

- Create.
- The panel will start its connection sequence.
- If the panel does not have a fixed role, you must select a role on the panel using the panel controllers before the panel will complete its connection sequence. If the panel has a fixed role (and an active license) it will connect immediately.
- A green check mark indicates successful connection.

## 9.8 Using the Panel

### Start Using the Keypanel

If a role is fixed to the panel, the panel will start, using that role and keysets assigned in the CCM. If the role is not fixed to the panel, select the role you need using the panel controls and press **Start**.

**Note:** Find the admin pin code for the keypanel menu system access in **Hardware > Host > Wireless > General > Administration Pin**.

#### 9.8.1 Panel Licensed Ports

Your panel licensed port capacity can be managed by:

- Disabling a port license (the port will remain in your configuration but will be inactivated)
  - Hardware > Resources > Endpoints [select panel] > License Active:** Enabled/Disabled (default: Enabled)
- Setting licensed port type

- **Hardware > Resources > Licensed Ports > Type**
  - Any (default)
  - I.V. Port (for an I.V. connected panel)
  - AES67 Keypanel port

For more information on keypanels, see the *V-Series Iris X Panel User Guide*, available from the Clear-Com website.

# 10 Using I.V. Direct


---

This chapter describes how to use and configure I.V. Direct connections. It contains the following sections:

- 10.1 What is I.V. Direct? ..... 162
- 10.2 I.V. Direct Configuration Overview ..... 163
- 10.3 Connecting I.V. Direct on your Network ..... 167
- 10.4 Configure I.V. Direct in the Arcadia CCM ..... 168
- 10.5 Using GPIO with I.V. Direct ..... 172

---

## 10.1 What is I.V. Direct?

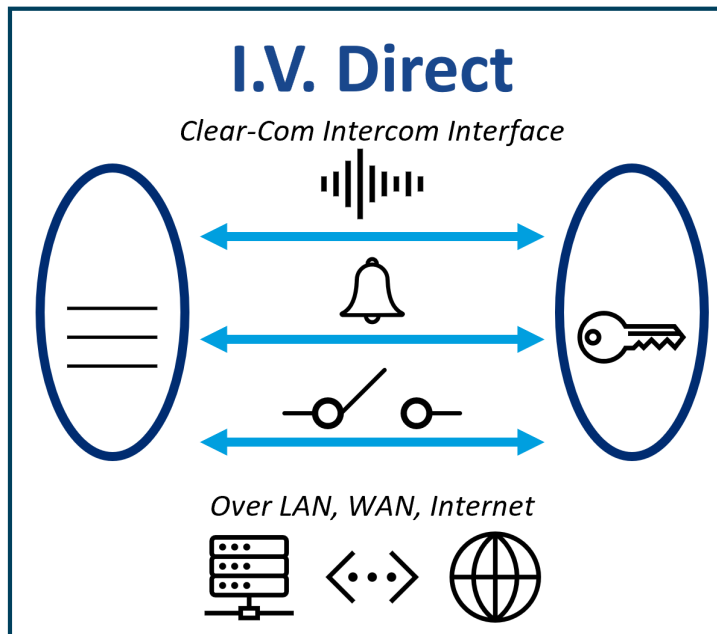

I.V. Direct/IVC Direct ports enable a variety of IP connections to Clear-Com products, and maybe be used, for example, for:

- Intercom expansion via LQ
- Intercom system bridging

Clear-Com Instant Voice I.V. Direct uses proprietary technology providing LAN, WAN and Internet with optional external IP connectivity.

I.V. Direct ports connect to:

- LQ units - max. 8 ports per LQ
- E-IPA-HX card (and IVC-32 card) - max. 64\* ports per E-IPA card
- Arcadia - max. 0-32\* \*\* ports per Arcadia

\* Subject to licensed port capacity

\*\* Subject to Device Allocation

Features include:

- Audio
- Call and Virtual GPIO (LQ only)
- Routable and robust on a network
- Security with user ID and password on each connection

## 10.2 I.V. Direct Configuration Overview

Below are some concepts to understand before undertaking I.V. Direct configuration.

### 10.2.1 Signaling or No Signaling?

I.V. Direct connections to LQ units carry call-signaling and data (GPIO). When creating a port to connect with an LQ, you will select function : **LQ Signaling**.


I.V. Direct connections to another Arcadia or to an Eclipse matrix do not carry call-signaling and data. When creating a port of this type, you will select function : **Non-Signaling**.

### 10.2.2 VOIP Caller/Receiver

I.V. Direct is a port containing audio and optionally call and virtual GPIO signals. I.V. Direct includes a security layer where credentials must be setup to establish the connection between a caller that initiates the connection and a receiver that has the credentials of the connection.

#### I.V. Direct Example A - LQ to Arcadia


When configuring I.V. Direct connections to LQ units, the LQ unit always calls the Arcadia (or Eclipse matrix). The LQ is never the VOIP receiver and no specific VOIP caller/receiver configuration is required.

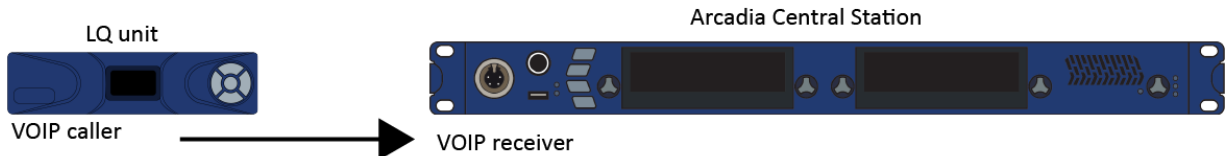

For information on creating and configuring I.V. Direct ports in LQ , see the LQ User Guide available from the [Clear-Com LQ Knowledge Center](#).


#### I.V. Direct Example B - Arcadia to Arcadia

When configuring I.V. Direct connections from an Arcadia to another Arcadia, one device must be the VOIP caller while the other one is the receiver.

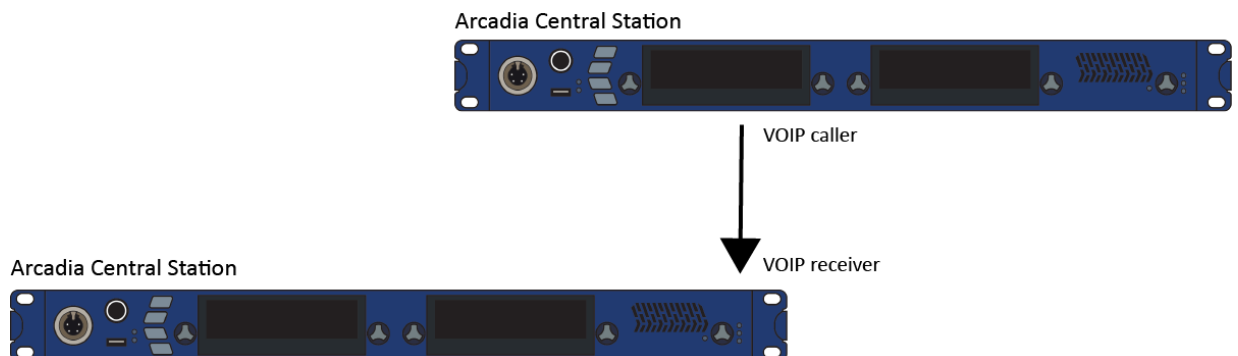


## I.V. Direct Example C - Arcadia to Eclipse Matrix

When configuring I.V. Direct connections from an Arcadia to an Eclipse matrix, one device must be the VOIP caller while the other device is the receiver.

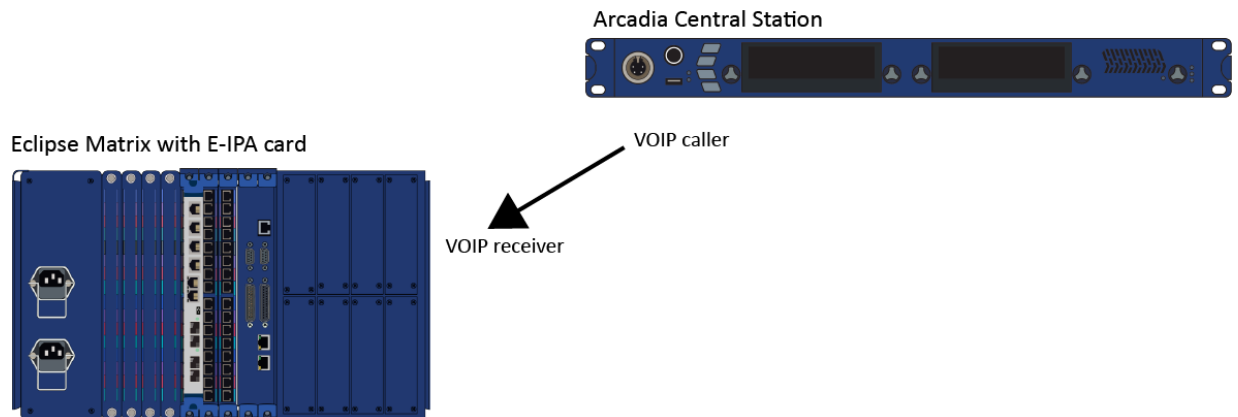

When configuring an I.V. Direct connection to Arcadia or Eclipse, you will determine which device is the caller by enabling the VOIP checkbox in the port credentials tab. (**Hardware > Resources > I.V. Direct** [select port] > **Credentials**).

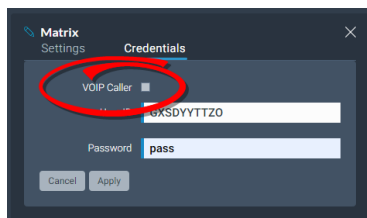

For information on creating and configuring I.V. Direct ports in Eclipse HX Matrix, see the EHX User Guide available from the [Clear-Com Knowledge Center](#).

### 10.2.3 Credentials

Each I.V. Direct connection must have a **User ID** (unique) and **Password** (recommended). These are the credentials that are used for identifying a connection target on the network, and for security. The User ID and Password are created on the VOIP receiving device, also known as the remote device. The VOIP calling device must have the IP address of the remote device as well as the User ID and Password. The credentials (user ID and password) must be copied exactly between the VOIP receiving (remote) device and the VOIP calling device to establish a successful connection.

**Note:** *Devices that are calling in to an Arcadia must use TCP/IP port 6002. This is hard-coded and cannot be changed.*

## 10.2.4 I.V. Direct Ports Enabled/Disabled

I.V. Direct ports can be created and configured in the Arcadia CCM up to a maximum of 0-32 I.V. Direct ports per Arcadia. However, the active use of these ports is reliant on licensed port capacity. When the ports are enabled in port settings (default is enabled), they will connect according to licensed port capacity on a first come, first served basis. If there is no available licensed port (of type **Any** or **I.V. Direct**), the connection will be refused until such time as a licensed port becomes available. If a license on an I.V. Direct port that is in use is reassigned or changed, the connection will be ended and you will lose audio connection on that port.

## 10.2.5 Configuration Overview

### Arcadia CCM

1. Create an I.V. Direct port
  - a. LQ Signaling - For LQ connection
  - b. No Signaling - For Eclipse & Arcadia connection
2. Configure settings
3. Configure credentials
  - a. User ID
  - b. Password
  - c. VOIP caller
    - i. If VOIP caller, input the IP address of the target device
4. Apply

### Target Device (LQ, Arcadia or Eclipse matrix)

1. Create I.V. Direct port
2. Configure settings
3. Configure credentials
  - a. User ID
  - b. Password
  - c. VOIP caller: IP address of the Arcadia or Eclipse IP card is required if this is the calling device
4. Connect/Apply/Apply map to matrix

**Configuration for connecting devices:**

LQ : in the CCM, navigate to **Accounts > IVC Direct** to add ports.

Eclipse matrix: in the EHX software, navigate to **Hardware > Cards and Ports** [select E-IPA or IVC-32 card] > Add port type **IVC Direct**.

### 10.3 Connecting I.V. Direct on your Network

Arcadia v. 3.0 or later

LQ v. 4.0 or later


Eclipse HX v. 7.5 or later with E-IPA or IVC-32 card

All devices must be using the minimum firmware version before I.V. Direct connections are set up.

Arcadia Central Station and the target systems for I.V. Direct connection(s) (LQ, Eclipse matrix , Arcadia) are connected to your network via device LAN connectors using Cat5/6e Ethernet cable. The devices must be able to reach each other across the network.

I.V. direct traffic uses the Arcadia Management LAN (default LAN 1).

#### 10.3.1 Example I.V. Direct Network Connections

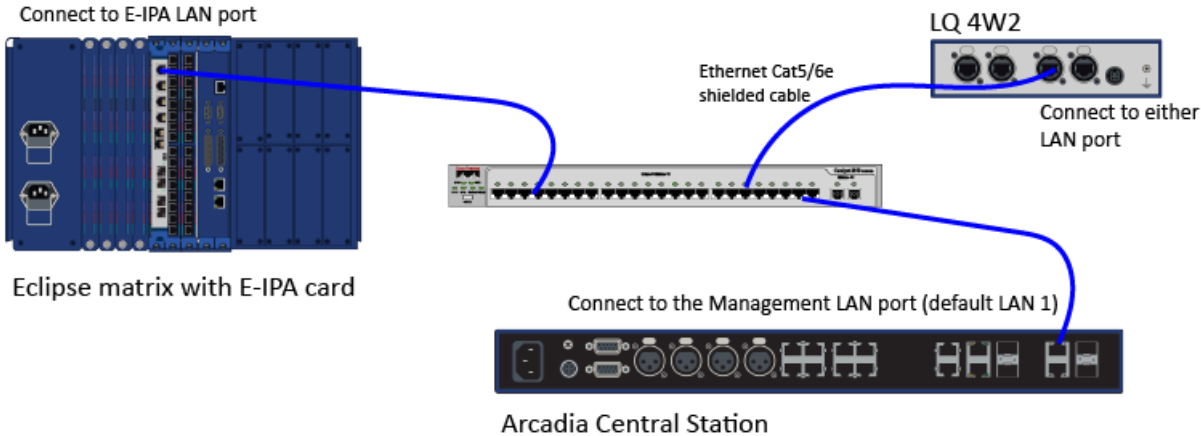


## 10.4 Configure I.V. Direct in the Arcadia CCM

Create ports and user credentials (user ID, password, and IP address as needed).


1. Open the Arcadia CCM (find the device IP address in the front panel menu system).  
Navigate to **Hardware > Resources**.



2. Click the **Add Resource** button.
3. Make sure the **I.V. Direct** tab is selected.
4. Give the port a label.
5. Select **Function**, LQ signaling for LQ connections, non-signaling for anything else.
6. Click **Create**.

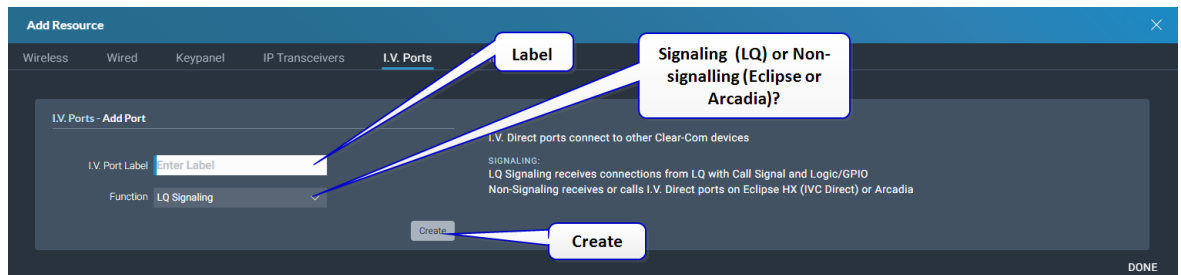


7. The **Add Resource** window stays open so you can create more than one port. Close the window or click **Done** when you have finished creating new ports.
8. Select the newly created I.V. port for **Settings** and **Credentials**.
9. Configure settings:

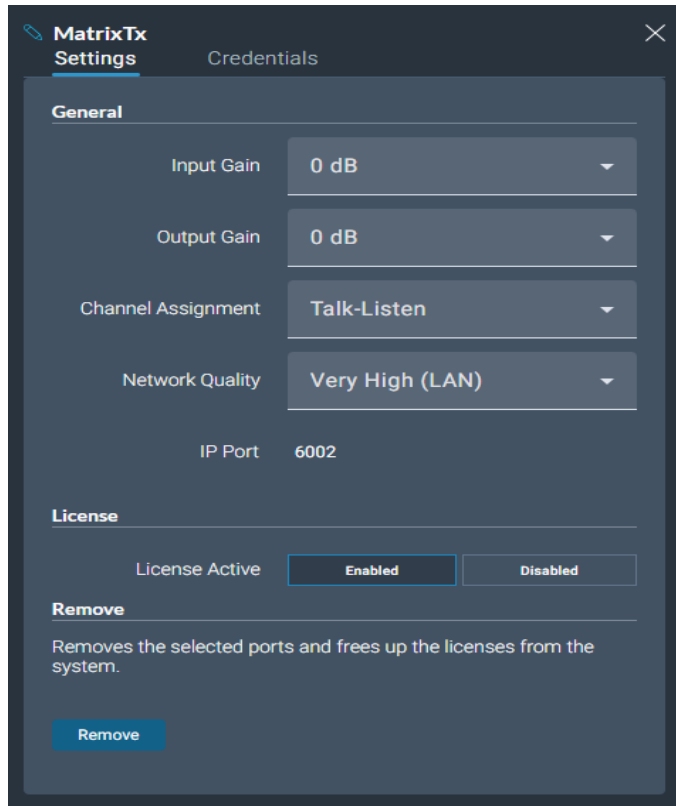

An I.V. port needs a license. If you disable the **License Active** checkbox (default is **Enabled**), the port will remain in your configuration but will not consume a license. You will not be able to transmit audio on this port if it is disabled.

10. Configure credentials. Configuration of credentials varies according to the device you are connecting to:

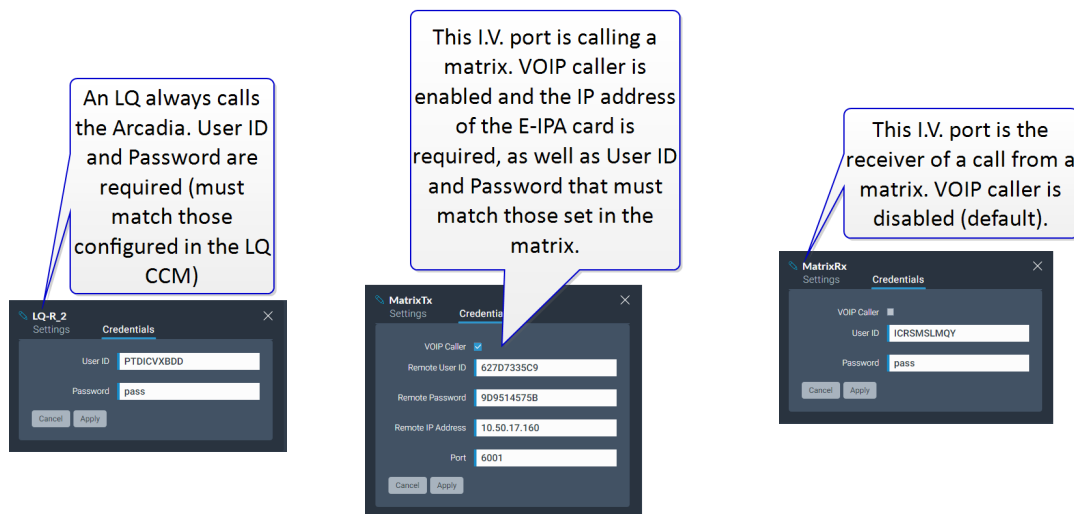

For more information see: [I.V. Direct Configuration Overview on page 163](#)

**Note:** Calls to an Arcadia must use TCP/IP port 6002. This is pre-configured and cannot be changed.

11. Click **Apply**.



Connected IV ports

| Status | Label      | User ID    | Password   | Signaling | Channel Assignment |
|--------|------------|------------|------------|-----------|--------------------|
| ✓      | MatrixTx   | 627D7335C9 | 9D9514575B |           | Talk-Listen        |
| ✓      | MatrixRx   | ICRSMSLMQY | pass       |           | Talk-Listen        |
| ✓      | LQ-R_2     | PTDICVXBDD | pass       | ✓         | Talk-Listen        |
| ✓      | LQ-R       | UERFGHJTEV | pass       | ✓         | Talk-Listen        |
| ⊙      | MatrixTx-2 | RXOEXRAEOD |            |           | Talk-Listen        |

I.V. Direct ports will connect when both connecting devices have been networked and configured. For status and connection information, and to configure GPIOs, go to **Status > Overview > I.V. Direct** [select port].

Example connection statistics for and I.V. Direct with signaling (LQ)

Example network statistics for and I.V. Direct with signaling (LQ)

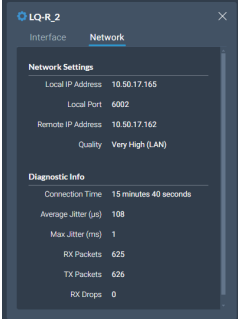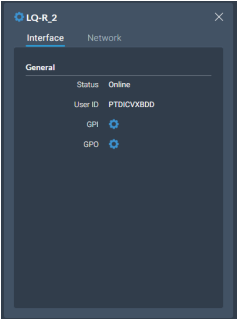

**Error messages - I.V. Ports**

Click or hover on the red cross to see error messages

| Status | Label      | User ID  | Password | Signaling | Channel Assignment |
|--------|------------|----------|----------|-----------|--------------------|
| ✗      | ARlistener | listener | here     |           | Talk-Listen        |
| ✗      |            |          |          |           | Talk-Listen        |
| ✗      | TestPort0  | Test0    |          | ✓         | Talk-Listen        |

In the event of a connection failure you will see the following error messages:

| Message   | Reasons for closing the connection  |
|---|---|
| <p><i>Local endpoint application cleared call</i></p> <p>The local device has closed a connection</p>     | <p>The License was removed on the local side (Arcadia) for an active I.V. Direct connection</p> <p>The username and password were changed on the local side (Arcadia) for an active I.V. Direct connection</p> <p>There are no free licenses for I.V. Direct ports on the local side</p>  |
| <p><i>Remote endpoint application cleared call</i></p> <p>The remote device has closed the connection</p> | <p>The username and password were changed on the remote side (LQ/Arcadia/EHX) for an active connection</p> <p>The License was removed on the remote side (LQ/Arcadia/EHX) for an active connection</p> <p>The I.V. Direct port was disabled on the remote side (LQ/Arcadia/EHX) for an active connection</p> <p>There are no free licenses for I.V. Direct ports on the remote side</p> |
| <p><i>Call failed a security check and was ended</i></p>  | <p>The username or password is wrong</p>  |

### Configuration for connecting devices:



LQ : in the CCM, navigate to **Accounts > IVC Direct** to add ports.

Eclipse matrix: in the EHX software, navigate to **Hardware > Cards and Ports** [select E-IPA card] > Add port type **IVC Direct**.

For information on creating and configuring I.V. Direct ports in LQ or Eclipse HX Matrix, see the User Guide for those products, available from the [Clear-Com Knowledge Centers](#).

# 10.5 Using GPIO with I.V. Direct


Below is an example of using a radio connection with an I.V. Direct with GPIO. An I.V. Direct has been configured between the Arcadia (AR-Radio) and the LQ (VR-Radio). GPIOs exchanged between AR-Radio and VR-Radio are virtual via the I.V. Direct. The GPO to the radio is a physical connection from LQ with GPIO.

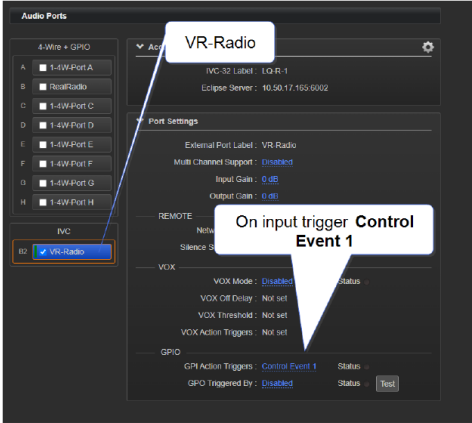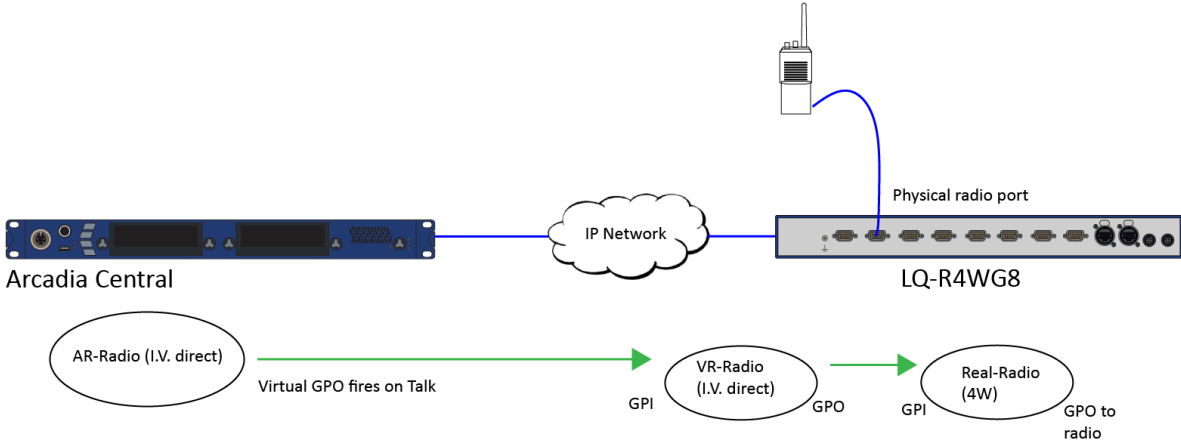

Arcadia and I.V. direct port AR-Radio are put in a channel together  
 Key assignment to the channel is set to Talk & Force Listen

When in a channel, the radio is accessible to other endpoints on the Arcadia system, for example, FreeSpeak and HelixNet.

IV direct port VR-Radio and 4W port Real-Radio are put in a channel together

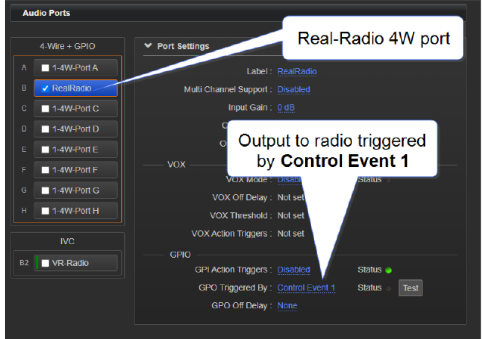


## 10.5.1 Step-by-step configuration of GPIOs with I.V. Direct


Assume an I.V. Direct port is already configured and connected.

Arcadia: Assign the I.V. Direct port to a channel and configure GPO for this port.

1. Navigate to **Configuration > Channels** and put AR-Radio in a channel with the Arcadia.

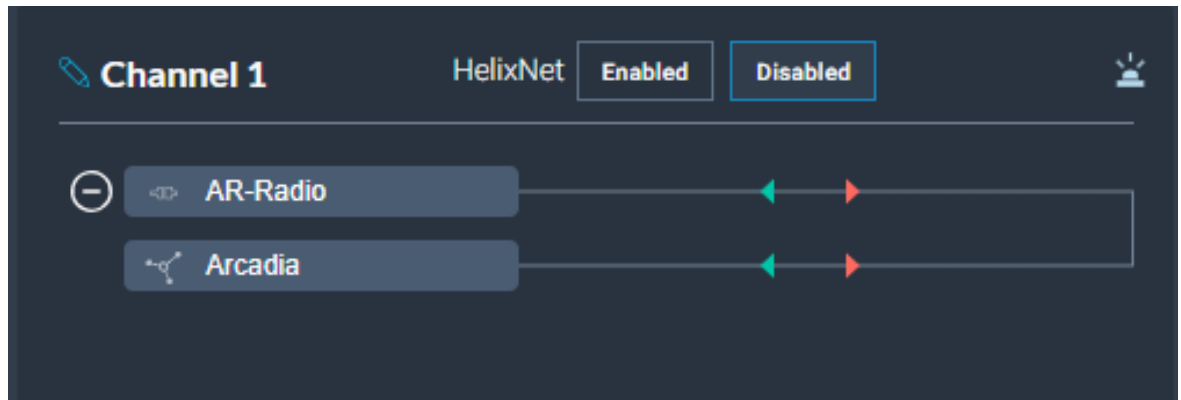


2. Navigate to **Configuration > Roles** [select Arcadia] and set the key activation type as **Talk and Forced Listen** (**Talk** or **Talk and Listen** can also be used)

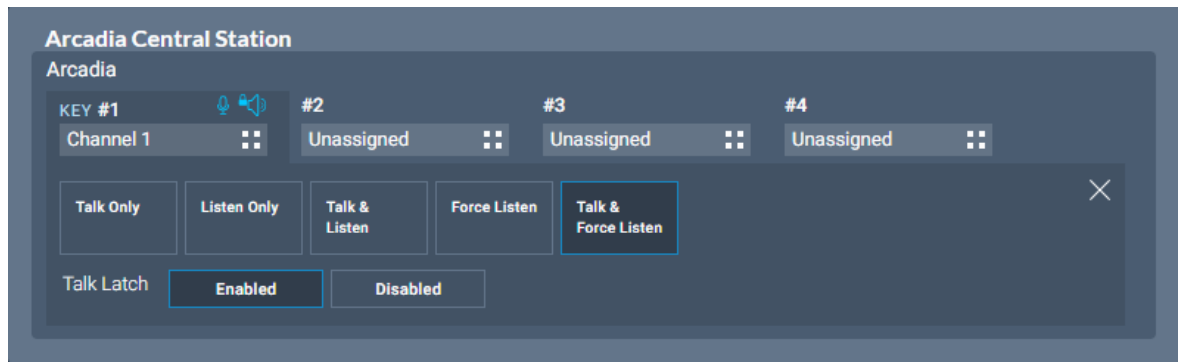

3. Navigate to **Configuration > Logic** and select the GPO for AR-Radio.
4. Click the blue + sign to create a new logic trigger.
5. Select the channel that contains the I.V. Direct as the **Key Target**.
6. Select the behavior that will trigger the GPO, in this case, **Talk-Only**. Click the blue

checkmark to complete the configuration.

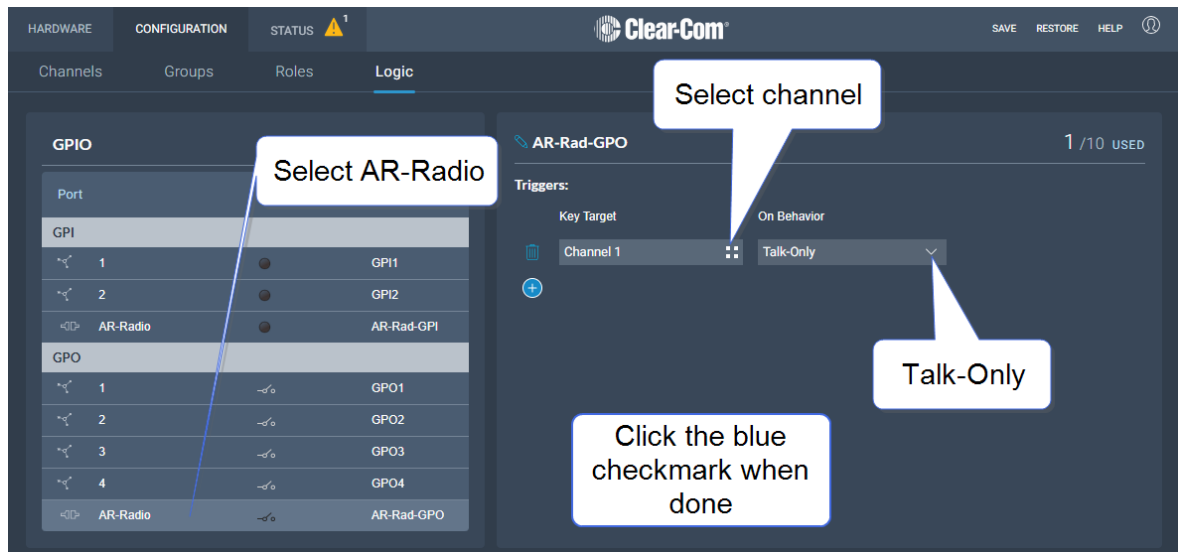

**Note:**


*GPO Talk & Listen behavior is only for use with FreeSpeak Talk & Listen or Dual Talk & Listen key activations on a single button. Talk-Only is for use with Arcadia, FreeSpeak and HelixNet keys using all other types of Talk activations.*

LQ: Assign I.V. Direct port and the 4W port that the radio is connected to in a channel and set GPIO (control events) on each port.


1. In the LQ CCM, navigate to Assignments and associate VR-Radio and Real Radio to a common channel.




2. Navigate to **Device > Ports** and select the 4W port that the radio is connected to (RealRadio).
3. Set the GPO trigger to Channel Event 1.

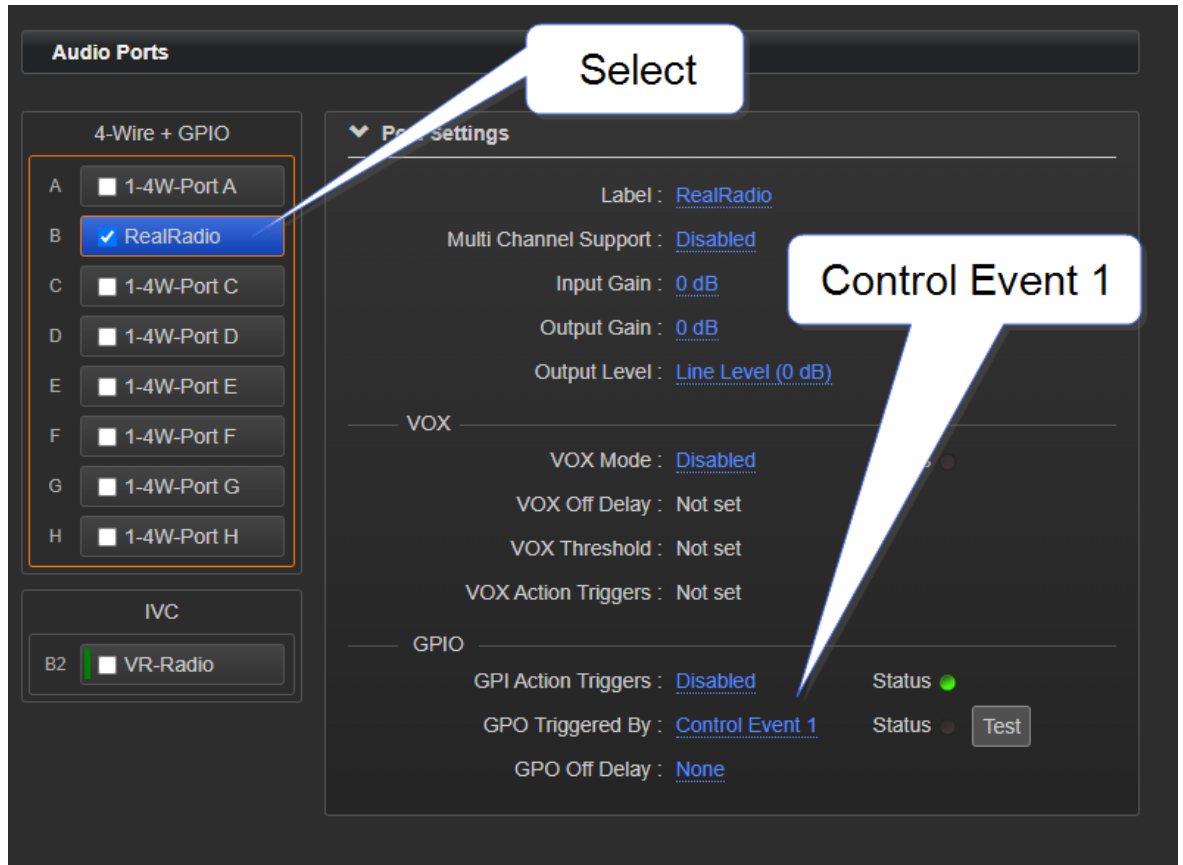

4. Select the I.V. Direct port (VR-Radio).
5. Set the GPI trigger to Control Event 1.

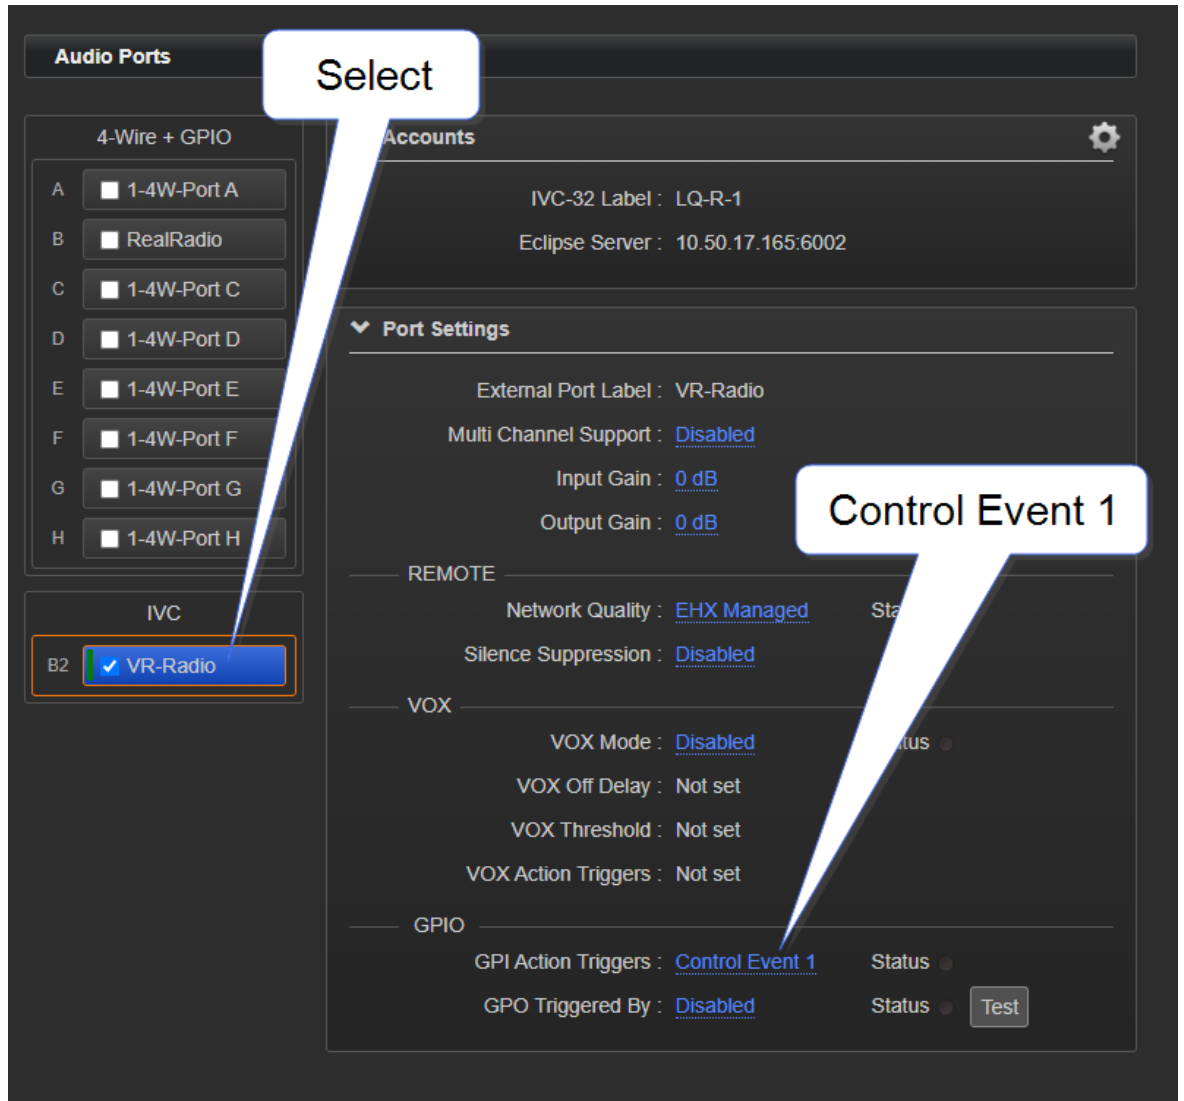

- Once the GPIO has been set up, you can see the Channel Event 1 signal in the Assignments page in the LQ CCM when a Talk comes into Channel 1 and activates the GPO to the radio.

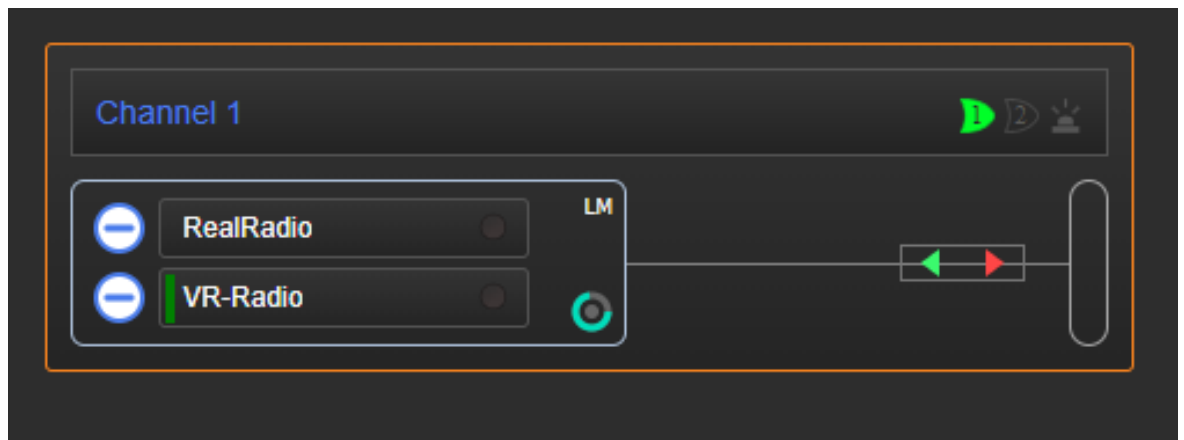

# 11 Using Dante Systems

To configure Dante you must be familiar with the Audinate Dante Controller, available from the Audinate website.

Before configuring the connection in the Dante Controller, you must determine which of the 4 LAN connectors on the Arcadia you wish to use for Dante network traffic.

**Note:** *The PC running the Audinate Dante Controller must be connected to the Dante network.*

**Note:** *The Dante connection on the Station supports Dante and Dante AES67 audio interfacing.*

Determining which LAN connector you wish to use for Dante must be done in the CCM.

Navigate to **Hardware > Host**. Under the **Network** tab, select the port for Dante. This port will default to a DHCP setting. If you wish to configure a static IP address you must do this in the Dante controller.

The screenshot displays the Clear-Com CCM interface for configuring a host device. The 'Host Device' section on the left shows the device name 'ff080571', type 'FreeSpeak Edge Base Station', IP address '11.11.11.30', and connections '2W', '4W', 'DANTE', 'FSE', and 'FSII'. The 'Network' tab is selected, showing LAN 1 (Management), LAN 2 (AES67), LAN 3 (Dante), and LAN 4. The 'Traffic Type' section has 'Dante' selected. The 'Dante' section shows 'Redundancy Mode' set to 'Secondary'. A callout box points to the 'Dante' option in the LAN 3 dropdown with the text 'Select Dante'. Another callout box points to the 'Apply' button with the text 'Apply'.


**Note:** *LAN 3 and 4 are for use with an SFP module (either fiber or RJ45).*

**Note:** *You must have sufficient licensed ports; each Dante channel consumes one licensed port.*


LAN connectors can be configured in any way you wish, but the CCM enforces that you can not configure IP transceivers (AES67) and Dante traffic on the same network. This is because AES67 network traffic has different timing requirements than Dante network traffic for FreeSpeak IP transceivers.

Dante IP configuration is configured in the Dante Controller.


1. In the CCM, navigate to **Hardware > Host > Network** and configure Dante on the LAN connector you wish to use for Dante connections.
2. Connect a cable (Cat5/6e or fiber) to the LAN connector that is designated for Dante. Connect the other end to a switch on your Dante network.
3. Open the Dante Controller and check that the network interface details are correct.

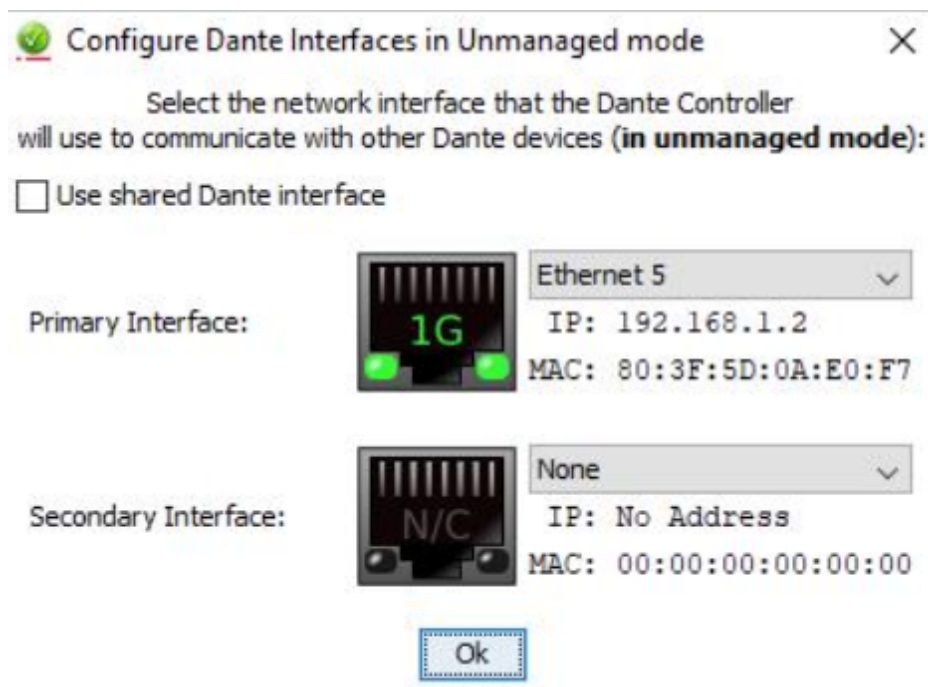


4. Check network and connection details under the **Status > Host Device** tab in the CCM.

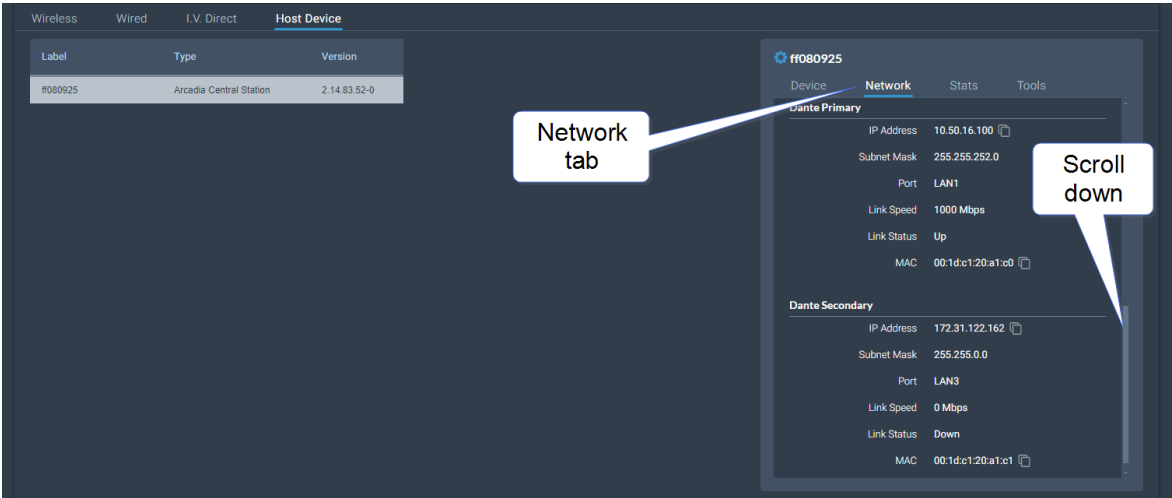

5. Details can also be viewed in the Dante Controller.

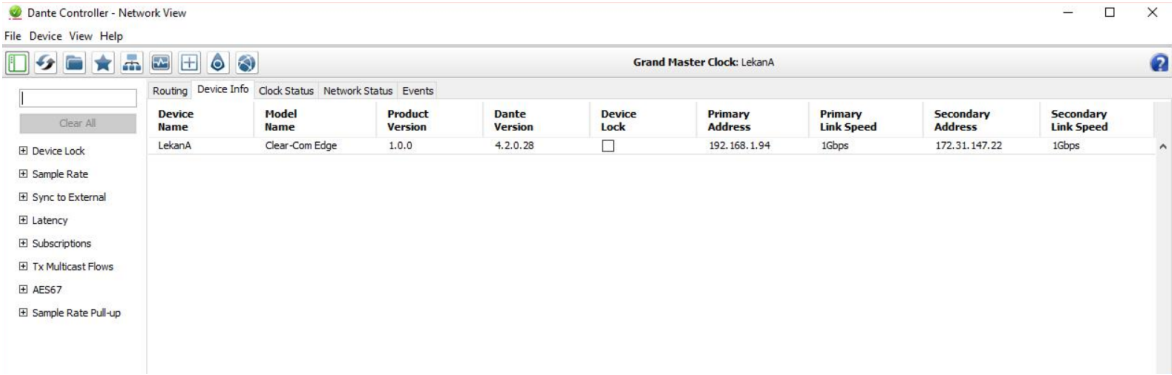

6. In the CCM navigate to **Hardware>Resources>Dante Ports** and add Dante ports. Give the new ports a suitable label.

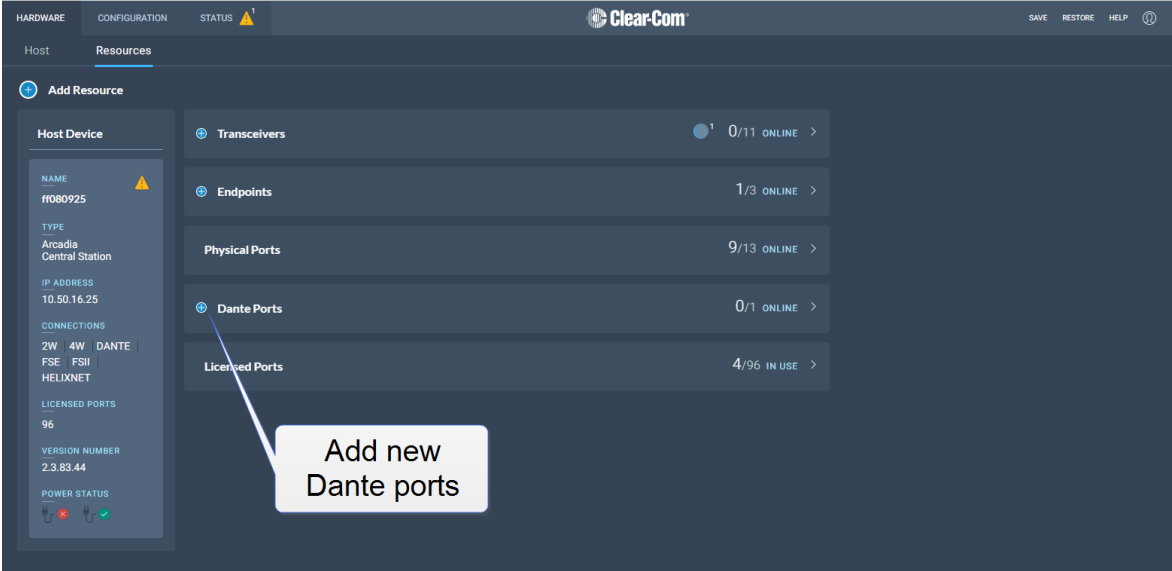

7. Route the channels as required in the Dante Controller.

- You will see available Dante ports in the **Configuration** page of the CCM. These ports can be assigned to channels on the Arcadia in the usual way.
- Select the required channel click the **+** icon next to the port.

The screenshot displays the Clear-Com CCM Configuration page. The interface is divided into several sections:

- Channels:** A table showing 2/100 used channels. The table has columns for Status, Id, Name, Online, and Talkers. Channel 1 is highlighted.
- Channel 1:** A diagram showing Dante P 1 connected to an Edge Base.
- Ports:** A list of 1/20 assigned ports. The list is categorized into 2W, 4W, and Dante ports. A callout box points to the first Dante port (Dante P 1) with the text "Click here".

| Status | Id | Name      | Online | Talkers |
|--------|----|-----------|--------|---------|
| ✓      | 1  | Channel 1 | 2/2    | 1       |
| ✓      | 2  | Channel 2 | 1/1    | 0       |

| Port      | Port         | Assigned To |
|-----------|--------------|-------------|
| 2W-Port A | 2W-Port A    | None        |
| 2W-Port B | 2W-Port B    | None        |
| 2W-Port C | 2W-Port C    | None        |
| 2W-Port D | 2W-Port D    | None        |
| 4W        |              |             |
| 4W-Port1  | 4W-Port 1    | None        |
| 4W-Port2  | 4W-Port 2    | None        |
| 4W-Port3  | 4W-Port 3    | None        |
| 4W-Port4  | 4W-Port 4    | None        |
| 4W-Port5  | 4W-Port 5    | None        |
| 4W-Port6  | 4W-Port 6    | None        |
| 4W-Port7  | 4W-Port 7    | None        |
| 4W-Port8  | 4W-Port 8    | None        |
| Dante     |              |             |
| Dante P 1 | Dante-Port 1 | Channel 1   |
| Dante P 2 | Dante-Port 2 | None        |
| Dante P 3 | Dante-Port 3 | None        |
| Dante P 4 | Dante-Port 4 | None        |
| Dante P 5 | Dante-Port 5 | None        |
| Dante P 6 | Dante-Port 6 | None        |
| Dante P 7 | Dante-Port 7 | None        |
| Dante P 8 | Dante-Port 8 | None        |

# 12 Using 2-Wire Systems

---

This chapter describes how to use the Arcadia Central Station with 2-Wire intercom devices. It contains the following sections:


|   |     |
|---|-----|
| 12.1 Introduction to 2-Wire Systems ..... | 182 |
| 12.2 2-Wire Port Compatibility .....      | 185 |

---

## 12.1 Introduction to 2-Wire Systems



- Power: Enabled/**disabled**
- Mode: **Clear-Com**/RTS
- Termination: Enabled/**disabled**
- Nulling: Start Nulling

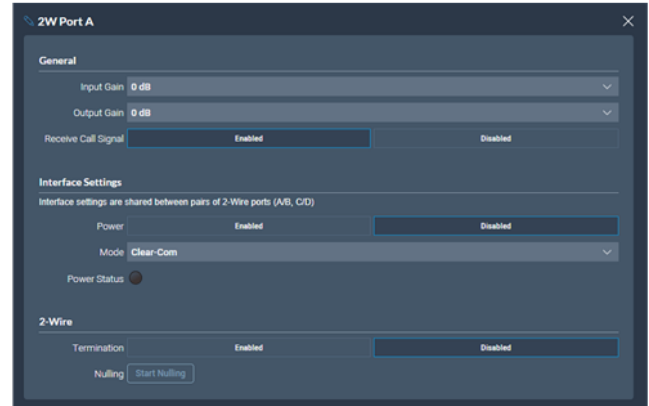

When connecting 2-wire equipment the following applies:

- **Terminate**
  - 2-wire partyline circuits must be terminated once on the line
  - Do not terminate on more than one device in the system
    - Enable/disable the termination. Default setting: **Disabled**
    - The Station default setting assumes the 2-wire partyline is nulled elsewhere in the system (i.e. at a partyline main station or power supply)

Line termination is set in the CCM only. To do this, in the CCM navigate to: **Hardware > Resources > Physical Ports**. See below

- **Power**
  - 2-wire partyline beltpacks can be powered by the Station 2-wire ports. Quantity of beltpacks and length of cable are variables, dependent on the type of devices and existing cabling
  - To calculate what will work best in your circumstances, see the *Encore Partyline Power Calculator*, available from the [Encore Knowledge Center](#)

- Enable/disable the partyline power. Default setting: **Disabled**
- The Station default setting assumes the 2-wire partyline is powered elsewhere in the system (i.e. using a partyline main station or power supply)

**Note:** *Enabled power indication in the CCM is green. Enabled power indication on the Station backpane is red.*

- These functions can be set either in the 2-wire port settings page of the CCM or from the front panel menu on the Station
- **Null**
  - 2-wire null serves the purpose of isolating audio that goes to the 2-wire partyline from the Station from the audio that comes from the 2-wire partyline to eliminate undesirable echo. The null is trained to the properties of the partyline cabling and equipment connected to the Station and varies depending on the setup
  - Keep the following in mind for nulling:
    - Microphones on the 2-wire partylines should be unlatched
    - RMK before initiating the Null process
    - Ensure the 2-wire partyline is not in use
    - Null again if equipment or cabling is changed on the 2-wire partyline
- **Assign**
  - 2-wire port may need to be assigned to channels or role keys as appropriate

To configure 2-wire port settings in the CCM navigate to: **Hardware > Resources > Physical Ports > (select port)** :

**2W Port A**

**General**

Input Gain **0 dB**

Output Gain **0 dB**

Receive Call Signal **Enabled** Disabled

**Interface Settings**

Interface settings are shared between pairs of 2-Wire ports (A/B, C/D)

Power **Enabled** Disabled

Mode **Clear-Com**

Power Status

**2-Wire**

Termination **Enabled** Disabled

Nulling **Start Nulling**

## 12.2 2-Wire Port Compatibility

When connecting Clear-Com Stations to other Clear-Com equipment and third-party systems (2-wire) use the following guidelines.

| Device Type                           | Supports call signaling?                                      |
|---------------------------------------|---|
| HelixNet HLI-2W2*                     | Yes   |
| Encore MS-702/4                       | Yes   |
| Encore RS Beltpack RS-701 / 702 / 703 | Yes   |
| RTS 2-wire equipment                  | Yes, but does not pass call signaling to 4-wire audio routes. |
| FreeSpeak/FreeSpeak II Base II*       | Yes   |
| 2-way radio                           | Yes, via a TW-47 interface                                    |

\*Where there is a choice between a 2-wire and a 4-wire connection, 4-wire provides the best audio quality and is preferred.

# 13 Using 4-Wire Systems

---

This chapter describes how to use the Arcadia Central Station with 4-Wire intercom devices. It contains the following sections:

- 13.1 Connecting 4-Wire .....187
- 13.2 Port Function (4-Wire Pinout) ..... 191
- 13.3 Connecting 4-Wire Clear-Com to Clear-Com ..... 192
- 13.4 Setting Port Function (Pinout) on a 4-Wire Connection ..... 193

---

## 13.1 Connecting 4-Wire

When referring to intercoms, a four-wire circuit describes an intercom connection (I/O) where there are four wires (two paths) and the paths are different for talk and listen.

Analog or four-wire circuits use two pairs for balanced line-level audio signals, one for input and the other for output, using four wires in total.

**Note:** *A four-wire audio circuit is further defined by the attribute that the two paths can be used for unassociated signals. This means that the source input is not always associated with or routed to the destination output. This is commonly known as a four-wire split or split port. At the time of writing, a split port is only available on Eclipse-HX Digital Matrix products.*

**Note:** *To minimize noise and meet regulatory requirements, use screened (shielded) cable when connecting 4-wire ports.*

### 13.1.1 Connecting Audio - Non-Clear-Com to Clear-Com (4-Wire)

All Clear-Com four-wire audio ports are analog format line level (0 dBu nominal / 18 dBu max).

When connecting non-Clear-Com equipment to a Clear-Com device, the following is the correct default pinout of the four-wire port (RJ45) for input and output.


**Note:** *Except the Eclipse MVX-A16 interface card (input 3 & 6, output 4 & 5).*

| Pin | Use         |  |
|-----|-------------|--|
| 1   | n/a         | <p><b>RJ45 Pinout T-568B</b></p> <p>1. White Orange    5. White Blue<br/>                 2. Orange            6. Green<br/>                 3. White Green    7. White Brown<br/>                 4. Blue                8. Brown</p> <p>Audio Out +<br/>                 Audio In +<br/>                 Audio In -<br/>                 Audio Out -</p> |
| 2   | n/a         |  |
| 3   | Audio Out + |  |
| 4   | Audio In +  |  |
| 5   | Audio In -  |  |
| 6   | Audio Out - |  |
| 7   | n/a         |  |
| 8   | n/a         |  |

**Note:** Always read your 3rd party device manual before connecting to Clear-Com.

**Note:** The above diagram illustrates the default pinout mode for Clear-Com RJ45 : 4-wire-X. See **Port Function** for details.


### XLR Breakout Cable Termination to RJ45 4-Wire

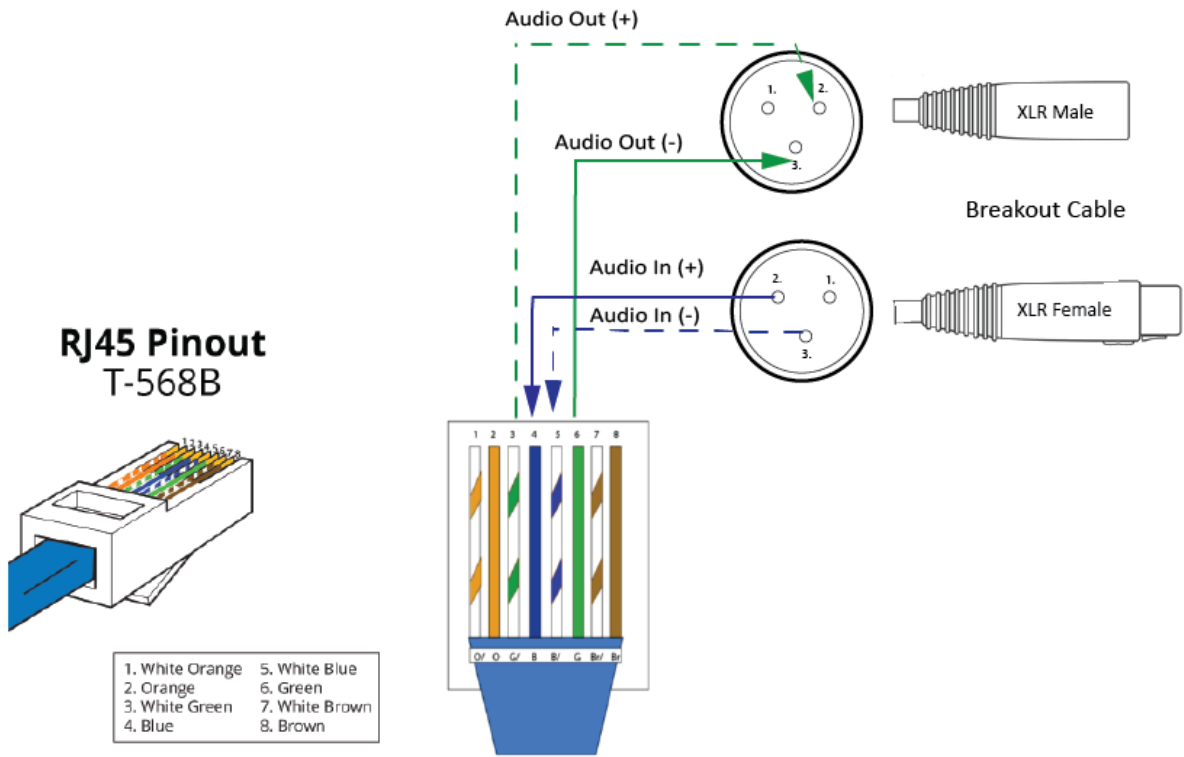

A breakout cable is supplied with the Arcadia and Edge stations. For other connections you need to make your own cable.

**CAB-RJ45-PGM-SA** - Four-Wire Analog Audio Splitter Cable - PGM/SA with RJ45 to 3-pin XLR-F & 3-pin XLR-M.

### XLR Panel Termination to RJ45 4-Wire

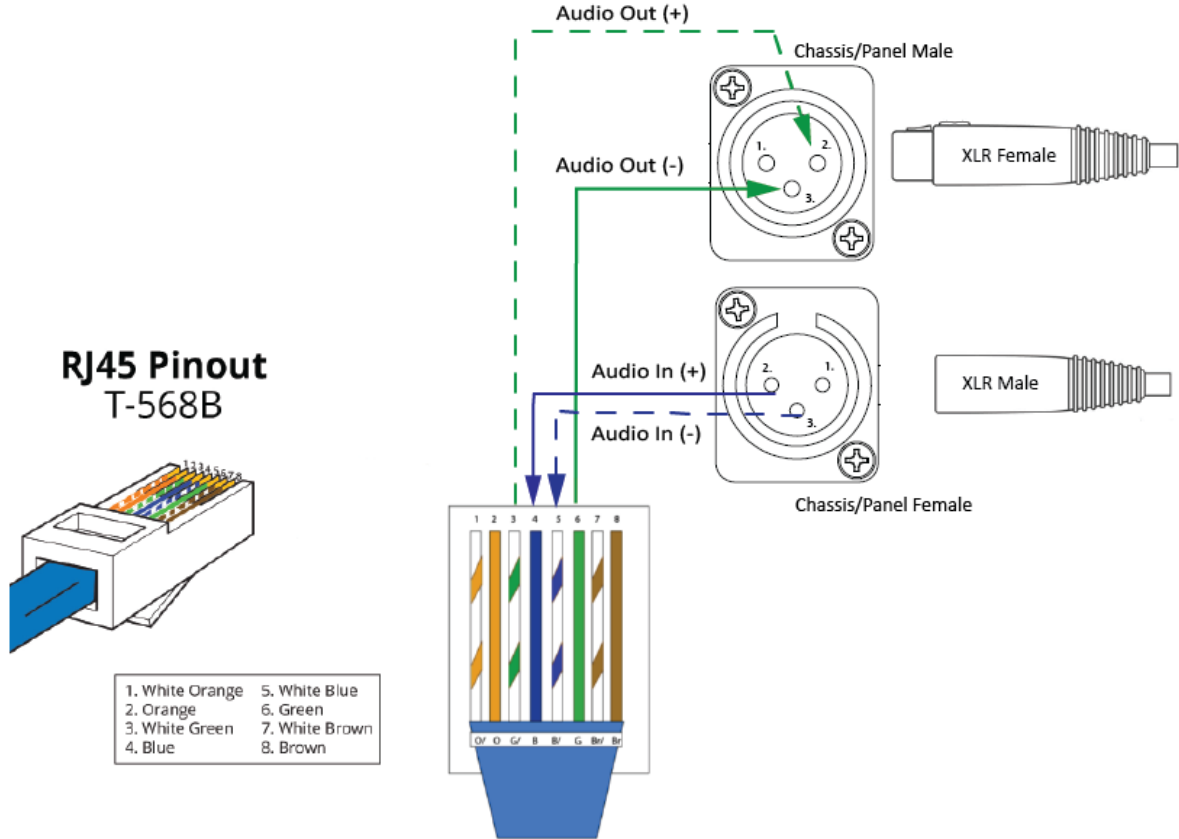

## 13.2 Port Function (4-Wire Pinout)

Some 4-wire RJ45 connectors on Clear-Com products include a software configuration that switches audio I/O pin configuration according to the device you are connecting to. This means that when connecting to Clear-Com devices, a cross-over cable is not necessary.

Clear-Com devices can have the following RJ45 4-wire pinouts:

- Clear-Com **4-Wire (To Panel)** on older systems)
- Clear-Com **4-Wire -X(To Matrix)** on older systems)
- Configurable, (either pinout is possible, according to the **Port Function** toggle switch).

To set the **Port Function** toggle, go to **Port Options** in the CCM or the device front panel menu system.

### 13.2.1 RJ45 Pinouts (Port Function Toggle)

| Pin No | 4-wire<br>(To Panel) | 4-wire-X (default)<br>(To Matrix) |
|--------|----------------------|-----------------------------------|
| 1      | Data in +            | Data out +                        |
| 2      | Data in -            | Data out -                        |
| 3      | Audio in +           | Audio out +                       |
| 4      | Audio out +          | Audio in +                        |
| 5      | Audio out -          | Audio in -                        |
| 6      | Audio in -           | Audio out -                       |
| 7      | Data out +           | Data in +                         |
| 8      | Data out -           | Data in -                         |


### 13.2.2 Clear-Com RJ45 4-Wire Pinout type by Device

| Device                  | Clear-Com RJ45 pinout type on this device (Port Function) |
|-------------------------|---|
| FreeSpeak II            | <b>4-wire-X</b> (fixed)                                   |
| HelixNet HLI-4W2        | <b>4-wire-X</b> (fixed)                                   |
| HME DX200/DX210/DX410   | <b>4-wire-X</b> (fixed)                                   |
| Eclipse MVX-A16         | <b>4-wire</b> (fixed)                                     |
| FreeSpeak II Base II    | Configurable. Default setting is <b>4-wire-X</b>          |
| Arcadia Central Station | Configurable. Default setting is <b>4-wire-X</b> .        |
| LQ Series               | Configurable. Default setting is <b>4-wire-X</b>          |


### 13.3 Connecting 4-Wire Clear-Com to Clear-Com

When connecting Clear-Com to Clear-Com, one device must be in **4-wire** mode and one device must be in **4-wire-X** mode if you wish to use a straight-through cable.

#### 13.3.1 Example: Arcadia Central Station to HelixNet Main Station

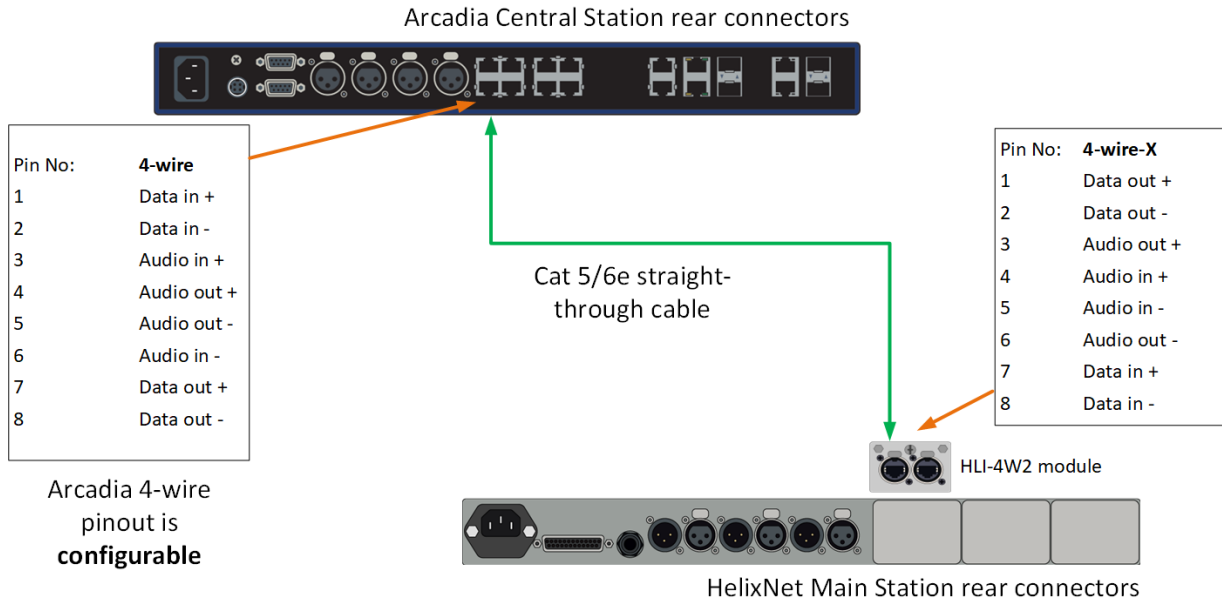


### 13.3.2 Example: 4-Wire RJ45 port 8 on Edge and Arcadia Stations - PGM and SA

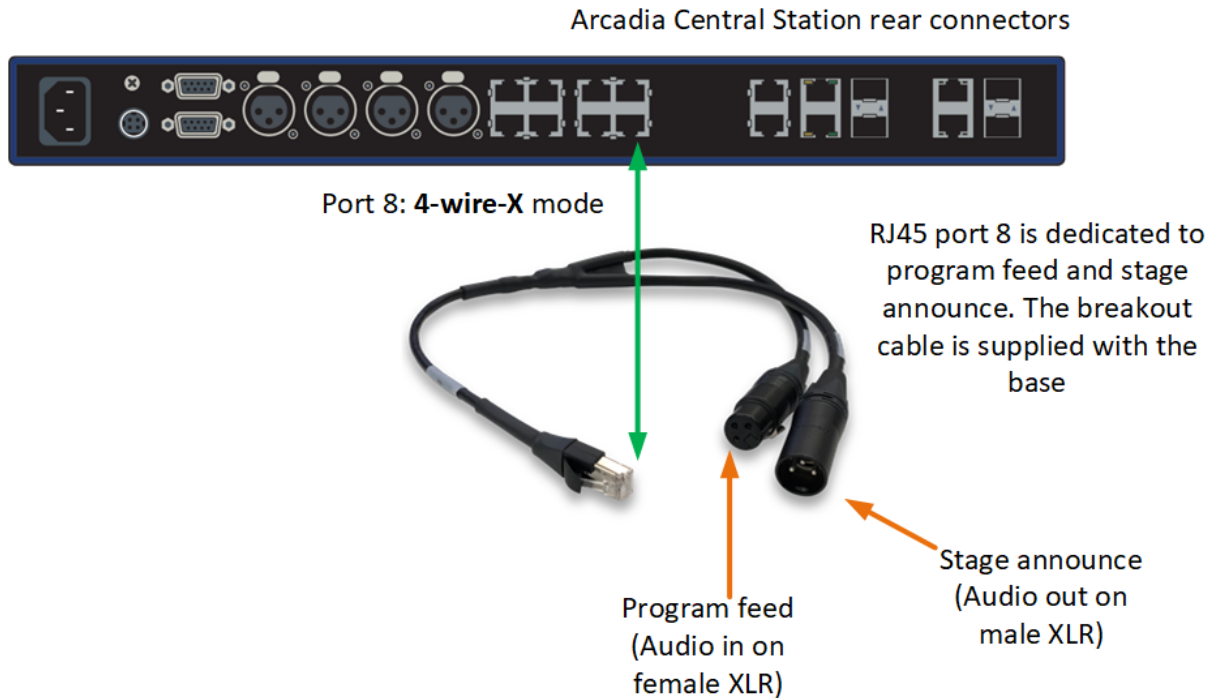

## 13.4 Setting Port Function (Pinout) on a 4-Wire Connection

1. Connect the devices using 1:1 Cat5/6/6e cable.
2. In the CCM, navigate to **Hardware > Resources > Physical Ports**.
3. Select the 4-wire port.
4. Select **Port Function**.

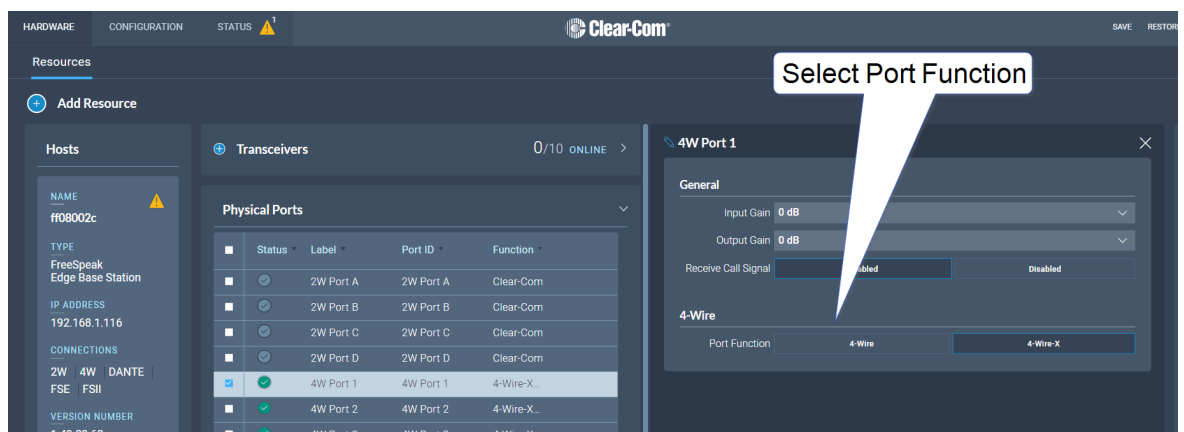

# 14 Upgrading Firmware

---

This chapter describes how to upgrade the firmware on your Station. It contains the following sections:

- 14.1 Introduction ..... 195
- 14.2 Upgrading using the CCM ..... 195
- 14.3 Upgrading using a USB Stick ..... 195
- 14.4 Upgrading sub-systems ..... 196

---

## 14.1 Introduction

There are two ways to upgrade the firmware on the Arcadia:

- Using the CCM web interface. When upgrading from the CCM, you can upgrade connected resources (for example, transceivers and beltpacks).
- Using a USB stick (USB A on the front of the Arcadia). When upgrading in this way, only the Arcadia can be upgraded.

| Device to upgrade                                | File extension               |
|--|------------------------------|
| Arcadia, FS II<br>IP TCVR, FS<br>Edge IP<br>TCVR | .ccf                         |
| FS II<br>beltpack, FS<br>II E1 TCVR              | .fww                         |
| FS Edge<br>beltpack                              | .ccu                         |
| HelixNet   | See Upgrading HelixNet below |

## 14.2 Upgrading using the CCM

1. In the CCM, navigate to **Hardware > Host > Upgrade**.
2. Press **Select File** and select the file containing the updated firmware.
3. When the file is uploaded, the **Upgrade** button will be enabled.
4. Press the **Upgrade** button.
5. The upgrade process will start and the Arcadia will reboot before being available again.
6. The new version of the firmware will be displayed in the **Hosts** panel.

## 14.3 Upgrading using a USB Stick

1. Copy the firmware file onto a USB stick. The file must be at the top level of the USB drive, not within any folders.
2. Insert the USB into the USB port on the front of the Arcadia.

3. Press the **Menu** button.
4. Using the rotary controllers, navigate to **Administration > Software > Update**.
5. The display will show the available firmware files stored on the USB. Select the one you require.
6. Press the 4th rotary encoder. The unit will upgrade and then reboot.
7. To check the current firmware version, in the menu system navigate to **Administration > Software > Current**. The current software version is displayed in the 4th menu screen.

## 14.4 Upgrading sub-systems

Sub-systems connected to Arcadia may additionally need to be upgraded according to Arcadia release notes.

| Device to upgrade                                | File extension               |
|--|------------------------------|
| Arcadia, FS II<br>IP TCVR, FS<br>Edge IP<br>TCVR | .ccf                         |
| FS II<br>beltpack, FS<br>II E1 TCVR              | .fww                         |
| FS Edge<br>beltpack                              | .ccu                         |
| HelixNet   | See Upgrading HelixNet below |

### 14.4.1 FreeSpeak II and Edge

FreeSpeak II and Edge transceivers and beltpacks can be upgraded system-wide from the Arcadia Central Station. The firmware for the component to be upgraded is loaded into the Arcadia CCM with the steps listed in 13.2 and will then be loaded into all devices that require the firmware.

It is recommended to upgrade beltpacks first and then transceivers.

Depending on the firmware and system size the firmware update may take between 3-15 minutes for each type of system device. The firmware file will remain in the Arcadia until it is rebooted or another file is loaded.

## 14.4.2 FreeSpeak Icon beltpacks

FreeSpeak Icon beltpacks are upgraded over USB connection using a software utility available from the Clear-Com website.

## 14.4.3 HelixNet

Upgrades to the HelixNet system are included with the Arcadia software. The HelixNet system requires that all connected devices have the same firmware. Therefore, any mismatches that are detected will cause an immediate and automatic upgrade (or downgrade) to the HelixNet devices on connection. The HelixNet system will also upgrade automatically when the Arcadia Central Station is upgraded.

**Note:** *HelixNet Endpoints manufactured in January 2023 (serial number ends with C00 or higher letter/number) or later can only be used with Arcadia version 2.8 or HMS-4X version 4.4. These endpoints cannot be used with older versions due to differences in hardware components.*

## 14.4.4 V-Series

V-Series keypanels are not upgraded via the Arcadia and should be upgraded directly at the panel.

V-Series IrisX panels are upgraded either locally using USB from the front panel, or, over a network using the panel's CCM interface.

## 14.4.5 Dante

Dante firmware is upgraded using Dante Update, available from within the Dante Controller.

# 15 Licensing

---

This chapter describes how to upgrade your Arcadia Central Station license. It contains the following sections:

- 15.1 Licensed Ports .....199
- 15.2 Online Activation of Additional Licenses (Recommended) .....199
- 15.3 Offline Activation of Additional Licenses .....201

---

## 15.1 Licensed Ports

The Arcadia Central Station is available with licensed port capacity as best fits your needs:

- 16 ports
- 32 ports
- 48 ports
- 64 ports
- 80 ports
- 96 ports
- 112 ports
- 128 ports
- 144 ports
- 160 ports
- 168 ports
- 176 ports
- 192 ports
- 200 ports


You can purchase additional licensed port capacity in 8 or 16-port bundles to a maximum of 200 ports.

When you purchase licensed port upgrades you will receive a **License Ticket ID** that can be activated in the CCM of your Arcadia Central Station.


## 15.2 Online Activation of Additional Licenses (Recommended)

**Note:** *You can activate licenses online if your PC and Arcadia Central Station have an Internet connection on the same network.*


1. Navigate to **Hardware > Resources > Host > License**, and select **Add licenses online**.

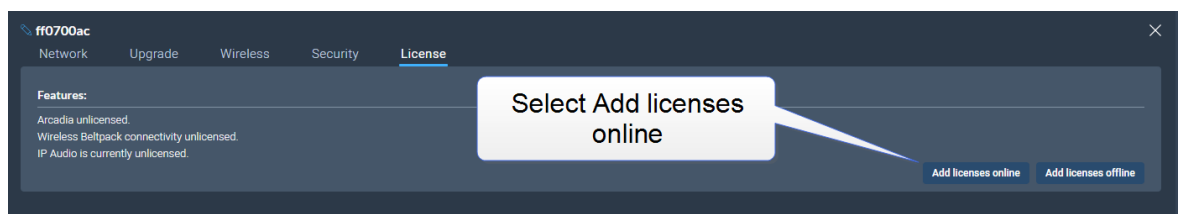

2. Enter the ticket you received from Clear-Com, and then select **Validate**.

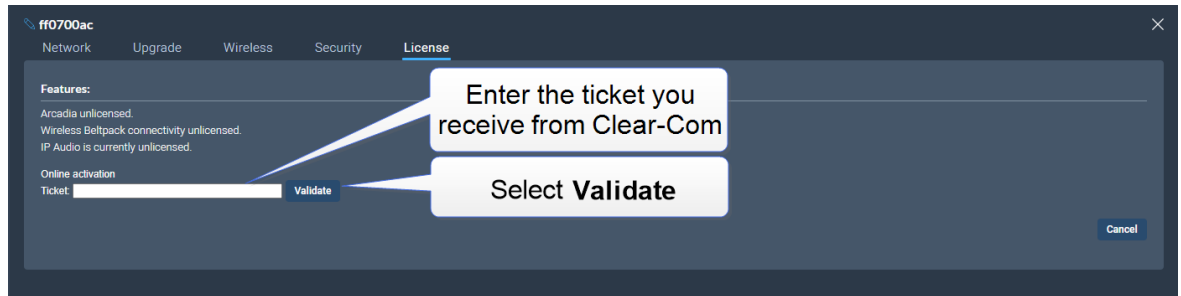


3. Click the checkbox, select the quantity of 8 or 16-port bundles of licensed port upgrades you wish to install and select **Activate**.

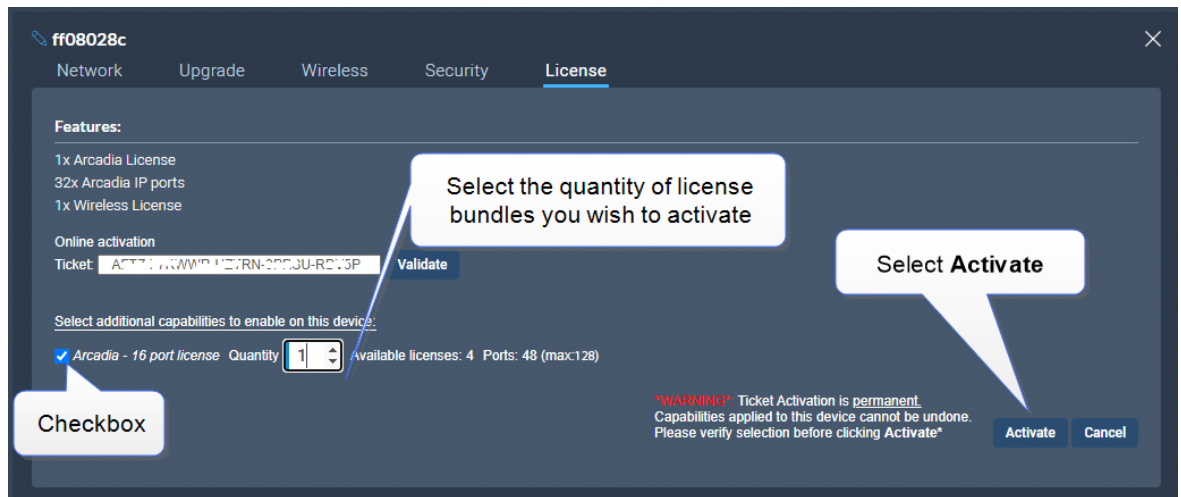


4. You must reboot the Station before the licenses take effect. In the CCM, navigate to **Status > Overview > Host Device** and select **Reboot**.
5. Once the licenses are activated, you will be able to see how many licenses you have in the **Hardware > Resources** page under **Licensed Ports**.

# 15.3 Offline Activation of Additional Licenses

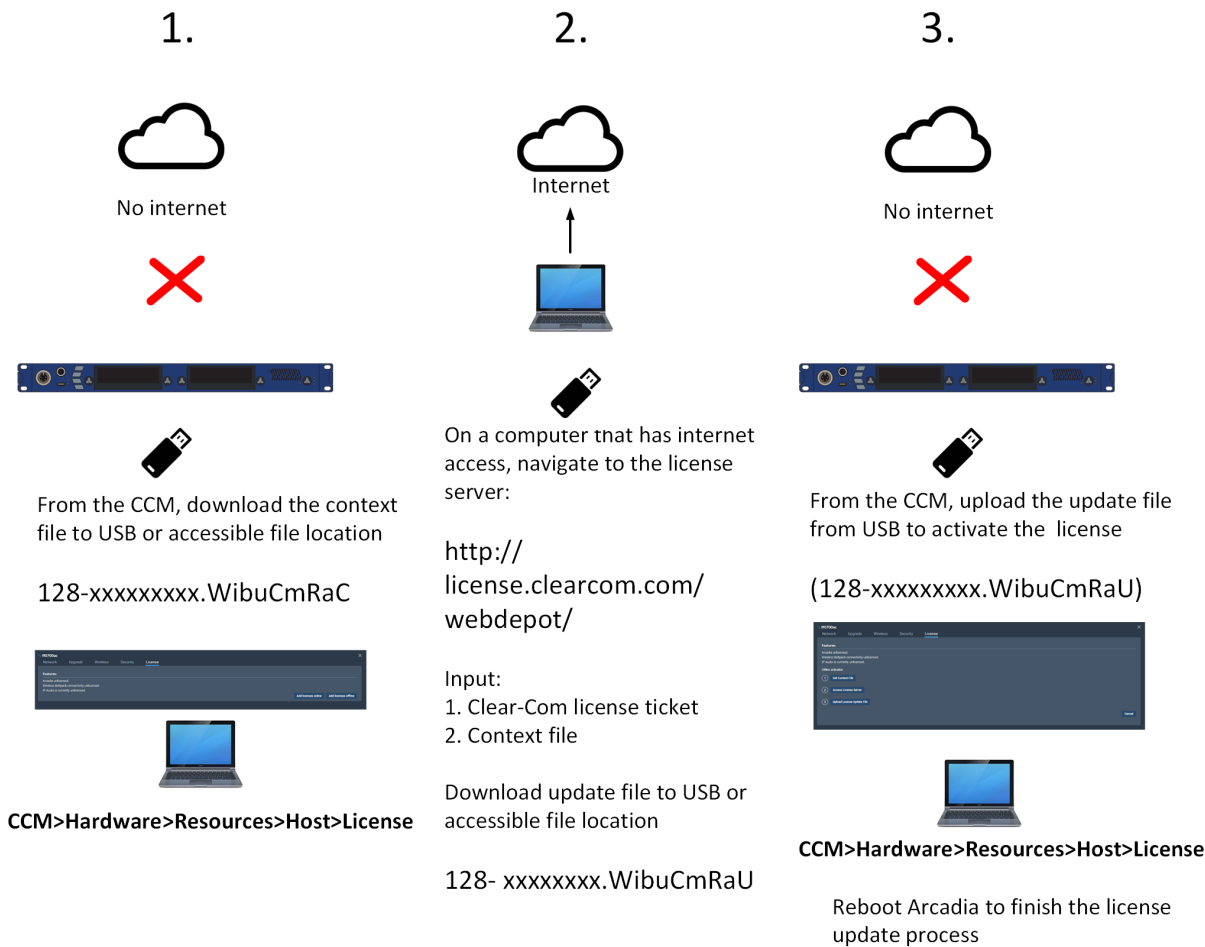


For detailed steps see below.

1. Navigate to **Hardware > Resources > Host > License**, and select **Add licenses offline**.

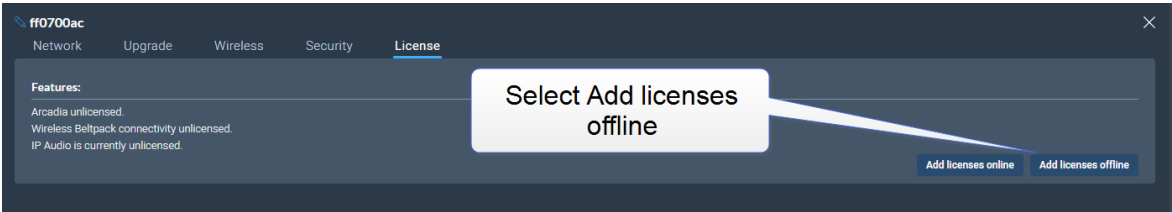


2. Select **Get Context File**.

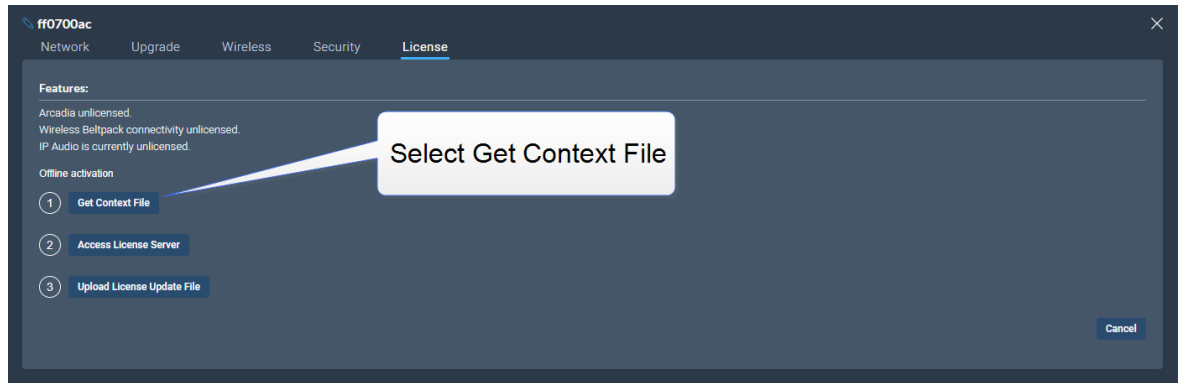


The context file downloads locally.


3. Use another PC which has internet access and connect a browser to <http://license.clearcom.com/webdepot/>. As you will download the licenses into the previously downloaded context file (step 2) you need the context file on the new PC.
4. You will see the online license server. Enter your Clear-Com ticket number, and then Click **Next**.
5. The licenses on your ticket are displayed on the screen. Select **Activate Licenses**.

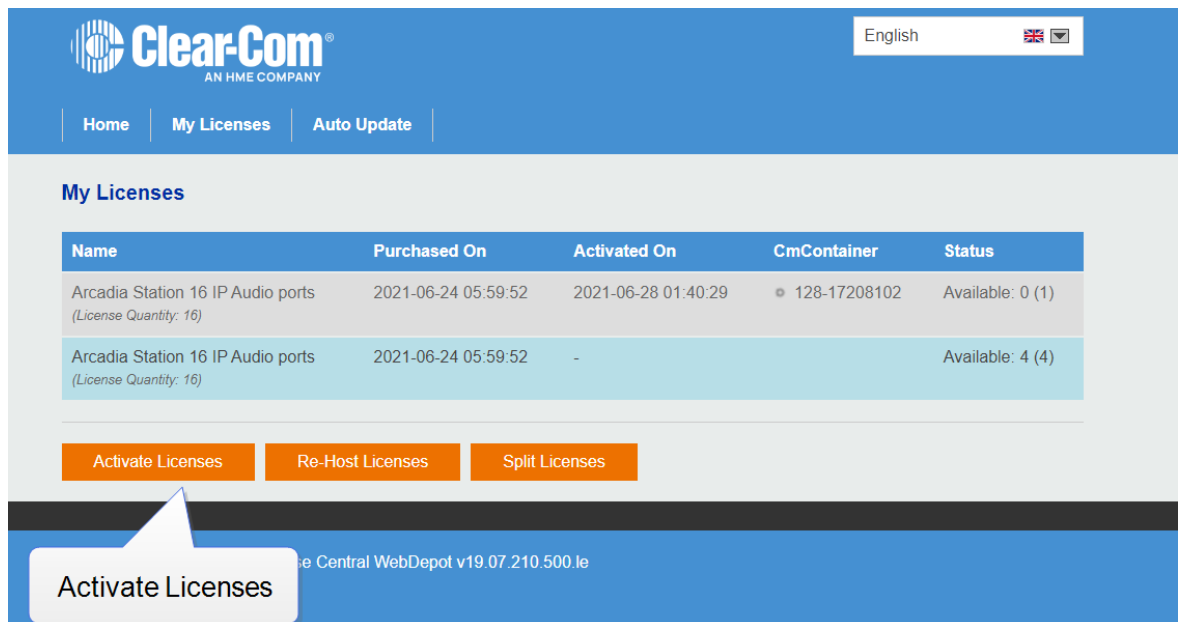

6. Select the left-hand option.

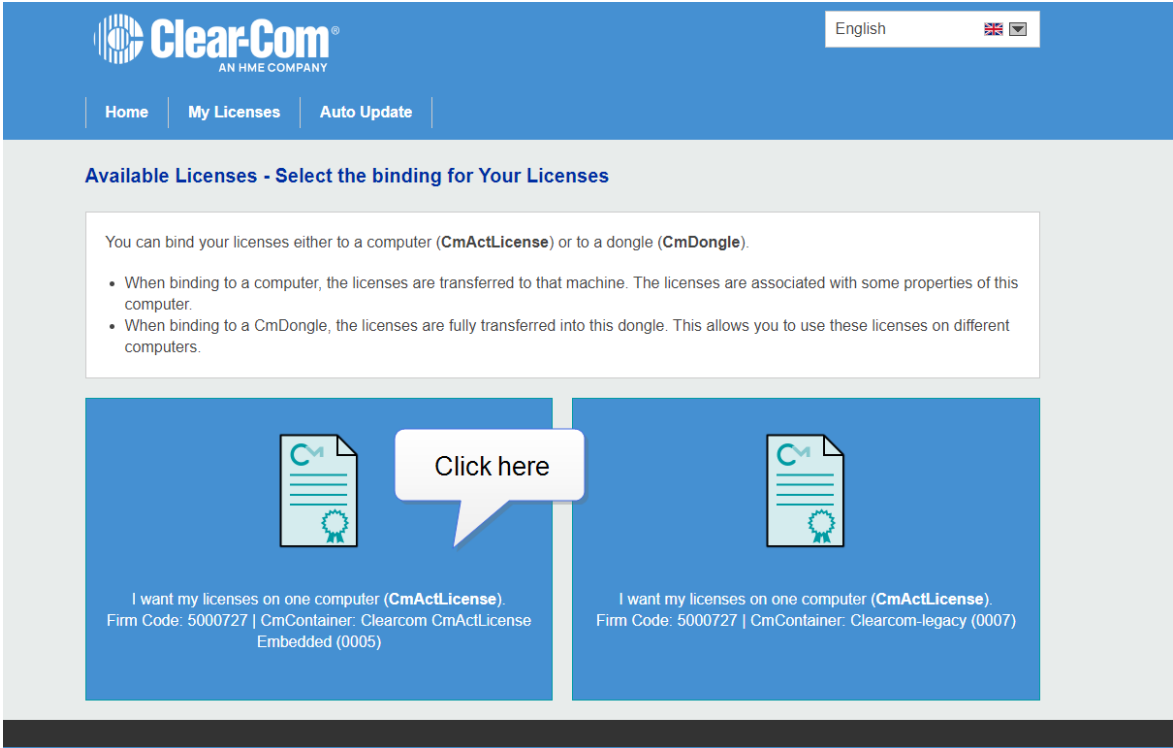

7. Click **File-based license transfer**.

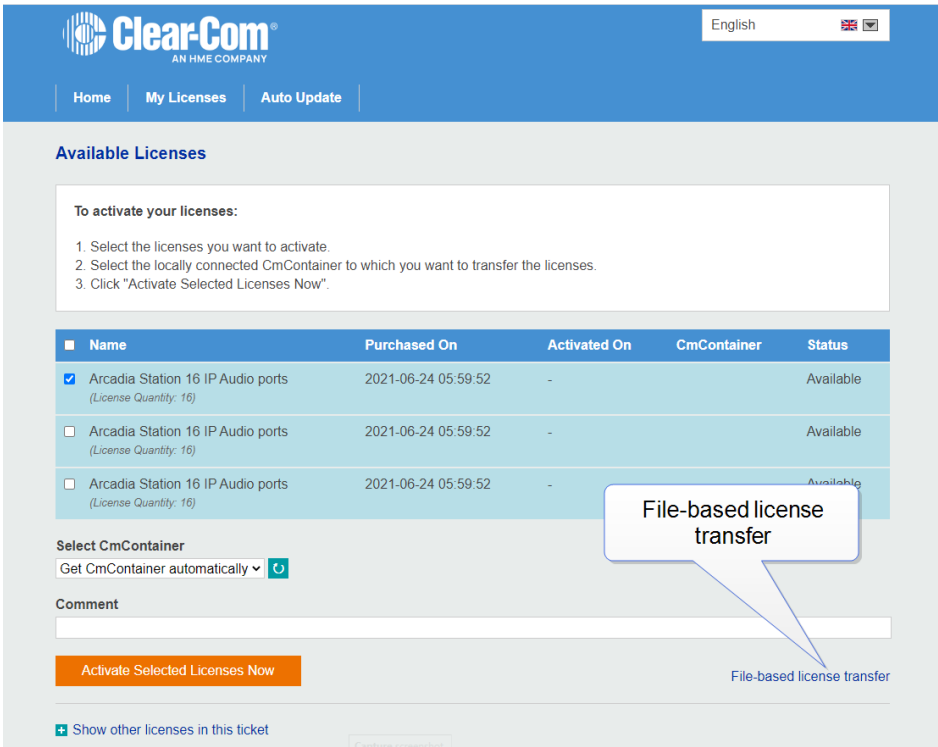

8. Select the required license(s). Click Choose File and navigate to the context file (downloaded in step 2). Select it. Then click **Start Activation Now**.

1. Ensure license is selected

| <input type="checkbox"/>            | Name   | Purchased On        | Activated On | CmContainer | Status    |
|-------------------------------------|--|---------------------|--------------|-------------|-----------|
| <input checked="" type="checkbox"/> | Arcadia Station 16 IP Audio ports<br><i>(License Quantity: 16)</i> | 2021-06-24 05:59:52 | -            |             | Available |
| <input type="checkbox"/>            | Arcadia Station 16 IP Audio ports<br><i>(License Quantity: 16)</i> | 2021-06-24 05:59:52 | -            |             | Available |
| <input type="checkbox"/>            | Arcadia Station 16 IP Audio ports<br><i>(License Quantity: 16)</i> | 2021-06-24 05:59:52 | -            |             | Available |

Select an already used CmContainer  
No CmContainer selected ▾

or

Pick a license request file (\*.WibuCmRaC) of another CmContainer  
Choose File 128-17208102 (4).WibuCmRaC

Comment

**Start Activation Now** Direct license transfer

2. Navigate to the previously downloaded context file and select it

3. Start Activation Now

9. Download the License Update File
10. Do not **Upload Receipt Now**. Instead, return to the CCM and select **Upload License Update File**.
11. Navigate to where you have stored the downloaded file from Step 9 (128-xxxxxxx.WibuCmRaU). Select the file. The license will upload.
12. You must reboot the Station before the licenses take effect. In the CCM, navigate to **Status > Overview > Host Device** and select **Reboot**.
13. Once the licenses are activated, you will be able to see how many licenses you have in the **Hardware > Resources** page under **Licensed Ports**. You can also see licensed features on the **Hosts** panel in the same page.

# 16 Security

---

This chapter describes important security features. It contains the following sections:

- 16.1 Warning ..... 206
- 16.2 Secure HyperText Transfer Protocol (HTTPS) ..... 206
- 16.3 Using HTTPS ..... 206
- 16.4 The Force HTTPS Feature ..... 206
- 16.5 Forcing HTTPS ..... 207
- 16.6 Using Security Certificates ..... 209
- 16.7 EasyDNS update button (Arcadia 4.1 and up) ..... 209

---

## 16.1 Warning

The CCM ensures that you do not turn off port 80 without testing your certificate. If you turn off port 80 without ensuring that you can reach the CCM using port 433 it is possible to get locked out of your CCM. If this happens, you must reset the Arcadia from the front panel menus. This will remove all configuration, including network details from your Arcadia.

**Note:** *Some knowledge of certificate authorization and HTTPS is needed when setting up a secure connection between a PC hosting the Core Configuration Manager (CCM) and a Arcadia.*

**Note:** *Each browser type (for example, Safari, Chrome, Edge, Firefox) uses its own method for certificate management. These methods can change with time and is beyond the control of Clear-Com. Please refer to the instructions supplied with your browser if you require more information.*

The following are some of the main security features.

## 16.2 Secure HyperText Transfer Protocol (HTTPS)

HTTPS is an adaptation of the HTTP protocol. It protects against an intermediary being able to intercept data between devices, using data encryption and Public Key Cryptography to create a secured channel.

## 16.3 Using HTTPS

When using the CCM to establish your intercom setup, you might wish to protect your login credentials and configuration details from unauthorized interference. In this case you will establish an encrypted connection between the CCM and your Arcadia using the **Force HTTPS** feature.

## 16.4 The Force HTTPS Feature


The Arcadia uses port 80 (HTTP) and port 433 (HTTPS) for management. If you wish to create a secured route for data between the CCM and the Arcadia you must:


- Install a security certificate
- Turn off port 80, forcing traffic to use port 433

This creates a certified and encrypted connection between the Arcadia and the PC accessing the CCM.

## 16.5 Forcing HTTPS

1. Chose and install a security certificate on the PC or browser used to reach the CCM of the Arcadia. Clear-Com offers a choice of 3 different types of certificate, offering different levels of security.
2. Test the certificate by trying to reach the CCM on the HTTPS port. Type: **HTTPS:// device IP address** in the browser URL field and press the [Enter] key.

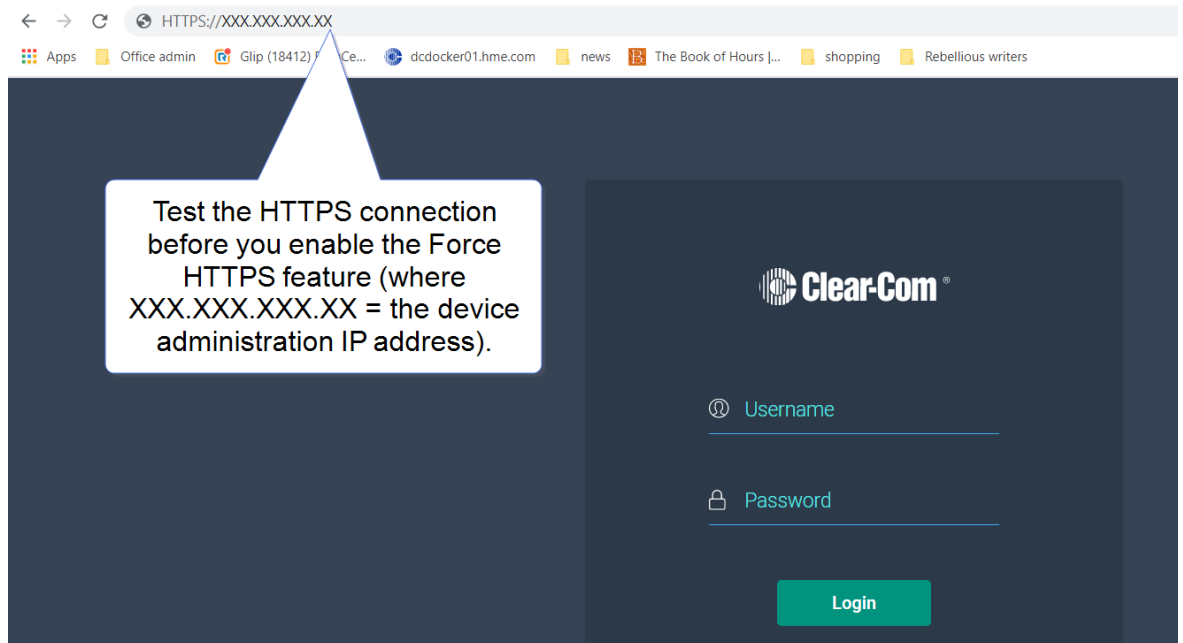

To enable **Force HTTPS** in the CCM navigate to: **Hardware > Resources > Host  > Security** and click to enable **Force HTTPS**. This turns port 80 off, forcing traffic to use port 433.

**ff080238** ✕

Network Upgrade Wireless **Security**

### General

**i Info** PLEASE CONNECT USING HTTPS BEFORE FORCING HTTPS. THIS IS TO ENSURE YOU WON'T HAVE CERTIFICATE VALIDATION ISSUES.

Force HTTPS Enabled Disabled

### Default Certificate

The default certificate is used for internal traffic. Any other certificate loaded onto this unit will only be utilized for CCM.

|                       |  |
|-----------------------|--|
|                       | <a href="#" style="background-color: #0070c0; color: white; padding: 5px 10px; border-radius: 3px;">Regenerate</a> |
| Certificate Status    | <b>Valid</b>   |
| Certificate Type      | <b>Self-signed</b>   |
| Certificate Authority | <b>Clear-Com</b>   |
| Expiration Date       | <b>Jun 8 2023 --- 765 day(s) left.</b>   |
| CA Certificate        | <a href="#" style="background-color: #0070c0; color: white; padding: 5px 10px; border-radius: 3px;">Download</a>   |

### Active Certificate

|                         |   |
|-------------------------|---|
| Use Default Certificate | <a href="#" style="background-color: #0070c0; color: white; padding: 5px 10px; border-radius: 3px;">Switch</a>                    |
| Use EasyDNS Certificate | <a href="#" style="background-color: #0070c0; color: white; padding: 5px 10px; border-radius: 3px;">Switch</a>                    |
| EasyDNS hostname        | <a href="https://cc-fsebase-312yf587-0.clearcomdevices.com" style="color: #0070c0;">cc-fsebase-312yf587-0.clearcomdevices.com</a> |

## 16.6 Using Security Certificates

There are three types of security certificate available. Choose the certification option that best suits your security requirements:

- A certificate of your own choosing (full chain and private key)
- An EasyDNS authorized certificate for \*.clearcomdevices.com (this option requires you to register your Arcadia with a DNS server) and cannot be used unless your Arcadia has internet access
- The Clear-Com self-signed certificate

More detail about certificates:

1. **A certificate of your own choosing.** This option gives you complete control over the security of your Arcadia. This option requires specialized knowledge about how to obtain a full chain certificate and private key, and how to install them on your browser. When using your own certificate you might have to provide a DNS server address and register the Arcadia.
2. **The EasyDNS certificate.** This is a commercial Arcadia certificate. When using the EasyDNS certificate you have to have a DNS server address for registration and a gateway for your device in order for the browser to verify the certificate with AlphaSSL and GlobalSign.
3. **The Clear-Com self-signed certificate (default).** This certificate can be used in a private network (does not require Internet access to verify the certificate). It can also be used to perform an initial test of your security setup. **Warning:** Browsers can be configured to trust the self-signed certificate, but this process will vary between browsers.

## 16.7 EasyDNS update button (Arcadia 4.1 and up)

The Easy DNS certificate expires every 12 months. Use the **Update Certificate** button to download and install the latest certificate from Skyport. This requires an internet connection

Find the update button in: **Hardware > Host > Security > Update Certificate.**

**Note:** *The certificate will not download if the Arcadia clock is wrong. Therefore, you are advised to sync the clock before downloading the certificate (**Status > Host Device > Tools > Sync Clock**).*

## 17 Appendix A: Pinouts

---

### 17.1 GPIO pinouts

#### GPIO 1 (Relay 1 &2)



1. Relay 1 Common
2. Relay 1 Normally Closed
3. Relay 1 Normally open
6. Relay 2 Common
7. Relay 2 Normally Closed
8. Relay 2 Normally Open
4. Input A1
5. Input B1
9. 12V

Shield 0V

## GPIO 2 (Relay 3 &amp; 4)



1. Relay 3 Common
2. Relay 3 Normally Closed
3. Relay 3 Normally open
6. Relay 4 Common
7. Relay 4 Normally Closed
8. Relay 4 Normally Open
4. Input A2
5. Input B2
9. 12V

Shield 0V


## Suggested wiring for a footswitch

| From                      | To                    |   |
|---------------------------|-----------------------|---|
| GPIO-DB9 pin 4 (input A1) | GPIO-DB9 pin 9 (+12V) | Connects power to GPI A-Side              |
| GPIO-DB9 pin 5 (input B1) | Switch                | Connects power to GPI B-Side when engaged |
| GPIO-DB9 Shell (0V)       | Switch                |   |

17.2 2-Wire Pinouts


17.2.1 Clear-Com 2-Wire XLR Pinout

- 1. Ground
- 2. DC power (30V)
- 3. Duplex audio

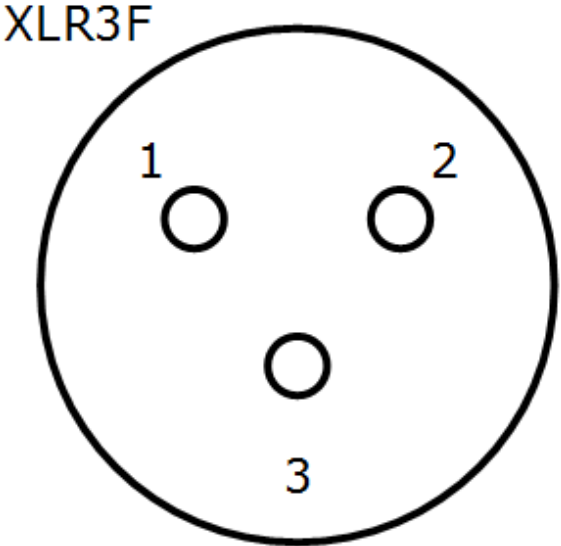

17.2.2 RTS/TW 2-Wire XLR pinout

- 1. Ground
- 2. DC power (30V)  
Duplex audio 1
- 3. Duplex audio 2

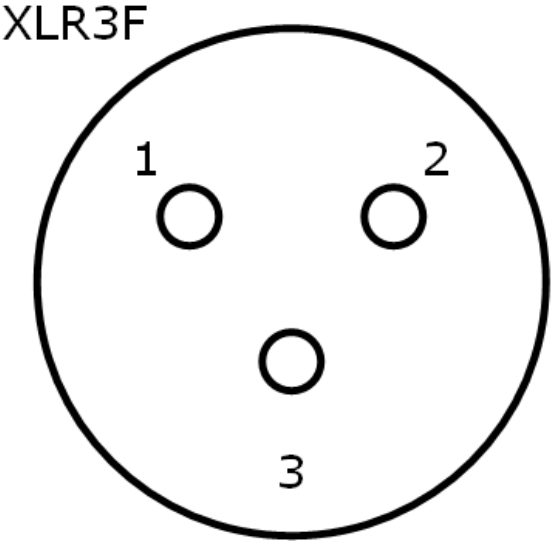

## 17.3 4-Wire Pinouts

| Pin | 4-wire      | 4-wire-X (default) |
|-----|-------------|--------------------|
| 1   | Data in +   | Data out +         |
| 2   | Data in -   | Data out -         |
| 3   | Audio in +  | Audio out +        |
| 4   | Audio out + | Audio in +         |
| 5   | Audio out - | Audio in -         |
| 6   | Audio in -  | Audio out -        |
| 7   | Data out +  | Data in +          |
| 8   | Data out -  | Data in -          |

## 17.4 DECT Sync

| Pin   | Sync In       | Sync Out       |
|-------|---------------|----------------|
| Pin 1 | DECTSYNC IN + | DECTSYNC OUT + |
| Pin 2 | DECTSYNC IN - | DECTSYNC OUT - |
| Pin 3 | 8 KHZ IN +    | 8 KHZ OUT +    |
| Pin 6 | 8 KHZ IN -    | 8 KHZ OUT -    |

### Caution: Shielded Cable Requirement

Shielded Cable is required for ALL FreeSpeak and GPIO port connectivity. CAT 5e Shielded Cable must be used to assure compliance with domestic and international emissions standards. Customers, Installers and or qualified Personnel failing to use shielded cables may cause radio interference in which case the user may be required to take adequate measures.

## Appendix B: Clear-Com Ethernet Cable Recommendations

| Cable recommendations                                    |  |
|--|--|
| Category (Cat)   | <p>Higher Cat numbers will support a higher bandwidth. Therefore, by using a higher Cat number you are future proofing your system to some extent. Example:</p> <ul style="list-style-type: none"> <li>• Cat 5e : up to 1 GB</li> <li>• Cat 6: up to 10 GB</li> </ul> <p>Use Cat 5e or higher.</p>                     |
| American Wire Gauge (AWG)                                | <p>The lower the AWG number, the less temperature rise there will be in the cable when using PoE. This is particularly important for bundles. Local building regulations may rule out the use of 26 AWG or higher, depending on the installation. Check with your local building regulations. Use AWG 24 or lower.</p> |
| Shielded Twisted Pair (STP) or Foiled Twisted Pair (FTP) | <p>Using shielded cable means less problems with interference from other sources. This means that your installation will be more robust if you use shielded cables.</p>  |

**Note:** Overall recommendation: Use Cat 6a, 23 AWG STP cable.

# 19 Appendix C: Specifications

---

This chapter contains a list of technical specifications for the Station. It contains the following subsections:

|                                    |     |
|------------------------------------|-----|
| 19.1 Arcadia Central Station ..... | 216 |
| 19.2 Capacity .....                | 220 |
| 19.3 Network Specifications .....  | 221 |

---

## 19.1 Arcadia Central Station

| Specification                         | Value  |
|---------------------------------------|--|
| Front panel headset                   | (1) 4-pin XLR-M or 5-pin XLR-M <ul style="list-style-type: none"> <li>• auto headset detect</li> </ul>   |
| Front panel headset microphone input  | <ul style="list-style-type: none"> <li>• Input type: Dynamic /Electret - Selectable</li> <li>• Frequency response: headset mic - Partyline: 200Hz – 12 kHz + 3dBu</li> <li>• Frequency response: headset mic - Line Out: 200Hz – 20 kHz + 3dBu</li> <li>• Mic limiter threshold: -50dBu ±3dB</li> <li>• Mic limiter range: ≥ 20dB</li> <li>• Max input level: -25dBu</li> <li>• Input level: -60dBu nominal; -25dBu MAX</li> <li>• Headset mic voltage 5V (Electret selectable)</li> </ul> |
| Front panel headset microphone output | <ul style="list-style-type: none"> <li>• Load Impedance: &gt; 32Ω</li> <li>• Output Impedance: 33Ω</li> <li>• Max Output Level before Distortion: &gt;13 dBu</li> <li>• Total Harmonic Distortion (THD): &lt; 0.1% THD at 1 kHz</li> <li>• Headset Mic - Partyline: -78 dBu (Clear-Com mode)</li> <li>• Headset Mic - Line Out: -60 dBu</li> <li>• Frequency Response: Partyline - Headset Out: 200Hz – 10 kHz + 3dBu</li> </ul>   |

| Specification               | Value   |
|-----------------------------|---|
| Gooseneck microphone input  | <ul style="list-style-type: none"> <li>• Input type: Dynamic, Electret (selectable)</li> <li>• Frequency Response: Gooseneck Mic - Partyline: 200Hz – 12kHz + 3dBu</li> <li>• Frequency Response: Gooseneck Mic - Line Out: 200Hz – 20kHz + 3dBu</li> <li>• Mic Limiter Threshold: -35dBu ±3dB</li> <li>• Mic Limiter Range: ≥ 20dB</li> <li>• Max Input Level: -10dBu</li> <li>• Input Level: -45dBu nominal; -10dBu MAX</li> <li>• Headset Mic Voltage: 5V (Electret selectable)</li> </ul> |
| Speaker Output              | <ul style="list-style-type: none"> <li>• Speaker Type: 1.6 x 2.8in oval</li> <li>• Load Impedance: 4Ω</li> <li>• Max Output Level before 1% Distortion: 18dBu ± 2dB</li> <li>• Total Harmonic Distortion (THD): &lt; 0.5% THD at 1kHz</li> <li>• Max Speaker Level: 87dB ± 2dB SPL A Weighted at 3ft</li> <li>• Frequency Response: 100Hz – 10kHz ± 9dB</li> </ul>  |
| USB connector               | USB type A  |
| Front panel buttons         | <ul style="list-style-type: none"> <li>• MIC: Microphone ON/OFF button</li> <li>• Menu button</li> <li>• HDST: Headset ON/OFF button</li> <li>• Fn: Function button (not active)</li> </ul>   |
| Front panel rotary encoders | (5) Digital rotary encoders<br>Operating level: 0dBu to + 18dBu, nominal, or -18dBu to +8dBu  |
| Front panel touch screens   | (2) 480 x 128 color TFT LED Touch Screen displays   |
| Status LEDs                 | (2) Power supply status LEDs, (1) Arcadia speaker LED, (1) Volume level three color control LED array   |

| Specification  | Value   |
|--|---|
| The Arcadia has two power supplies which can be used together to provide power redundancy. |   |
| Power  | <ol style="list-style-type: none"> <li>1. AC Mains input: 100-240V AC, 50-60Hz, 160W Max, IEC60320 C14 inlet.</li> <li>2. DC Low Voltage Input: 12V DC +/- 5%, 12A</li> </ol>   |
| GPIO port  | <p>(2) DB9F</p> <ul style="list-style-type: none"> <li>• Relay contact type: SPDT</li> <li>• Relay quantity: 4</li> <li>• Relay contact voltage rating: 30 VDC</li> <li>• Relay contact current rating: 1 A</li> <li>• Input type: Opto-Isolated</li> <li>• Input quantity: 2</li> <li>• Input voltage range: 4 - 30 volts DC or AC</li> <li>• Input current: &gt;=1.2mA required</li> </ul>  |
| 2-wire I/O   | <p>(4) XLR-3F</p> <ul style="list-style-type: none"> <li>• 2-wire I/O: Selectable RTS or Clear-Com mode, software controlled null, null depth &gt;60dB at 1kHz</li> <li>• 2-wire Power On/Off: A/B, C/D paired- software controlled</li> <li>• 2-wire Output Voltage: 25 – 28 VDC, 560 mA per pair (A/B or C/D)</li> <li>• 2-wire Impedance: &gt;10kΩ</li> <li>• 2-wire Operating Levels: -18dBu nominal (Clear-Com Mode), -12dBu nominal (RTS Mode), Headroom 18dB</li> <li>• 2-wire Frequency Response: 200 to 12kHz. ±3dB</li> <li>• 2-wire Total Harmonic Distortion (THD): &lt; 0.1% THD at 1 kHz</li> </ul> |

| Specification                            | Value   |
|--|---|
| 4-wire I/O                               | (8) RJ45 <ul style="list-style-type: none"> <li>• 4-wire I/O: Output Impedance &gt;10kΩ, Input Impedance 200Ω + 10%, transformer isolated balanced input and output.</li> <li>• 4-wire Operating Levels: 0dBu Nominal, 18dBu headroom</li> <li>• Port 8 used for stage announce and program feed</li> </ul> |
| Stage announce and program feed          | (1) Cable assembly <b>CAB-RJ45-PGM-SA provided.</b><br>Connects to RJ45 (port 8 on the Station) <ul style="list-style-type: none"> <li>• XLR-3F labeled PGM input</li> <li>• XLR-3M labeled SA output</li> </ul> Program Input level control via rotary encoder.  |
| DECT Sync IN/OUT                         | (2) RJ45 sync input and output  |
| E1 Splitter/transceiver ports            | (2) RJ45<br>(2) Fiber, to be used with SFP module<br><b>Note:</b> 2 splitter ports are active at any one time   |
| LAN connectors                           | (2) RJ45<br>(2) SFP, to be used with Fiber or RJ45 SFP module<br>All 4 LAN ports are fully user configurable, to be split between management, AES67 and Dante traffic.  |
| Dimensions                               | 1 RU: h.44 x w.483 x d. 355 mm (1.75 x 19 x 14 inches)  |
| Weight                                   | Approx 3.3 kg (7.25 lb)   |
| Frequency response - station to beltpack |   |
| Arcadia to beltpack frequency response   | <ul style="list-style-type: none"> <li>• FreeSpeak II &amp; FreeSpeak Icon beltpacks: 200 Hz - 7.5 kHz</li> <li>• FreeSpeak Edge beltpacks: 200 Hz - 12 kHz</li> </ul>  |

## 19.2 Capacity

| Specification                                | Value   |
|--|---|
| Number of transceivers supported by Arcadia  | <ul style="list-style-type: none"> <li>• 32 IP transceivers (FreeSpeak II or FreeSpeak Edge)</li> <li>• E1 transceivers, 2 connected directly to the Arcadia, 10 via splitters</li> </ul> |
| Number of FreeSpeak beltpacks per Arcadia    | Up to 64 beltpacks in total, made up of either FreeSpeak II, FreeSpeak Icon or FreeSpeak Edge beltpacks   |
| Number of HelixNet user stations per Arcadia | Up to 128 made up of beltpacks, remote stations, speaker stations   |
| Audio Channels                               | Max 100   |
| Channels enabled for use with HelixNet       | Max 24  |
| Groups                                       | Max 100   |
| GPIOs  | 2 x GPI, 4 x GPO  |

## 19.3 Network Specifications

| Specification            | Value   |
|--------------------------|---|
| AoIP Interface Protocols | <ul style="list-style-type: none"> <li>• RTSP/SAP</li> <li>• AES67</li> <li>• Dante</li> </ul>  |
| Audio Sampling           | 24-bit Linear 48KHz   |
| IP Addressing            | <ul style="list-style-type: none"> <li>• Static</li> <li>• DHCP</li> </ul>  |
| Network Compatibility    | Layer 2 - Non-Routable  |
| Quality of Service       | DiffServ RFC2474  |
| IGMP                     | On (AoIP)   |
| Multicast                | On (AoIP)   |
| Network Timing           | PTPv2 (AoIP)/PTPv1 (Dante)  |
| Perduplex Connection     | <ul style="list-style-type: none"> <li>• 1 x FS II IPT bandwidth usage: ~7 Mbps</li> <li>• 1 x FS Edge IPT: ~9.6 Mbps</li> </ul>  |
| Network Protocols        | <ul style="list-style-type: none"> <li>• Ethernet IPv4 Unicast Audio and Control</li> <li>• mDNS-Multicast Device Discovery</li> </ul>  |
| Network Ports            | <ul style="list-style-type: none"> <li>• Unicast:</li> <li>• Port 80 TCP - Web Interface, System Management, Expansion</li> <li>• Port 443 for HTTPS</li> <li>• Port 6001 UDP - AES67 Data</li> <li>• Port 15000 - 15256 UDP - AES67 Audio</li> </ul> |
|                          | <p>Multicast:</p> <p>Port 5353 UDP - mDNS, Names, Discovery, Linking, Expansion, Dante (through various ports)</p>  |

| Specification                 | Value   |                                   |
|-------------------------------|---|-----------------------------------|
| Network Jitter Tolerance      | < 1µs required for RF Syncing of Transceivers   |                                   |
| Recommended Ethernet Switches | <ul style="list-style-type: none"> <li>• Managed Ethernet Switch</li> <li>• 1000 Base - T ports for endpoints</li> <li>• 1000 Base IP Trunks between switches</li> <li>• QoS Configuration</li> <li>• Energy Efficient Ethernet bypass option</li> <li>• IGMP Snooping bypass option</li> </ul> |                                   |
| QoS Tags for AoIP             |   |                                   |
| Clock                         | IEEE 1588-2008<br>Announce, Synch, Follow Up,<br>Delay_Req, Delay_Resp,<br>Pdelay_Req, Pdelay_Resp<br>and Pdelay_Resp_Follow_Up<br>packets  | EF (46)<br>(Expedited Forwarding) |
| Media                         | RTP<br>and RTCP media stream data   | AF41 (34) (Assured Forwarding)    |
| Best Effort                   | IEEE 1588-2008 signaling and management messages.<br>Discovery and connection management messages.  | DF (0)<br>(Default Forwarding)    |
| QoS Tags for Dante            |   |                                   |
| High                          | Time Critical PTP Events  | CS7 (56)                          |
| Medium                        | Audio, PTP  | EF (46)<br>(Expedited Forwarding) |
| Low                           | Reserved  | CS1 (8)                           |
| None                          | Other Traffic   | Best Effort (0)                   |

## Appendix D: Spare Parts

| Part  | Part Number  |
|---|--|
| External power supply, 12VDC 150W   | PSU-EXT-0001   |
| Split cable, RJ45 to PGM and SA   | CAB-RJ45-PGM-SA  |
| Fan plate assembly  | T40020-1   |
| Rack ear (x1)   | 272G162-SP   |
| Encoder cap (x1)  | 272G286-SP   |
| Optional equipment  |  |
| Ethernet fiber modules*:<br>1 Gbps SM SXFIBER SFP<br>1 Gbps MM LXFIBER SFP<br>1 Gbps RJ45 SFP | SFP-SMFO-1G-LX<br>SFP-MMFO-1G-SX<br>SFP-RJ45-1G              |
| FreeSpeak E1 fiber modules<br>E1 Multi-Mode<br>E1 Single-Mode                                 | SFP-MMFO-100M-FX or HLI-MMFO<br>SFP-SMFO-100M-LX or HLI-SMFO |
| Gooseneck microphones<br>Gooseneck Mic 250mm/9" TRS<br>Gooseneck Mic 450mm/18" TRS            | GN-250-TRS<br>GN-450-TRS                                     |
| PSU Mounting Bracket  | 272G048-SP   |

\*There is a detailed list of all Clear-Com SFPs (including range, wavelength and speed) on the [Clear-Com Arcadia Knowledge Center](#).

# 21 Appendix E: Front Panel Menu Reference Tables

---

This chapter lists the front panel menu options. It contains the following sections:

- 21.1 Audio Settings ..... 225
- 21.2 Host Settings ..... 225
- 21.3 2 W Audio (A/B) (C/D) ..... 226
- 21.4 Discovery ..... 226
- 21.5 Transceiver ..... 226
- 21.6 Networking ..... 227
- 21.7 Administration ..... 228

---

**Note:** Default values are shown in **bold**.

## 21.1 Audio Settings

| Level 1 | Level 2   | Level 3          | Level 4                                |
|---------|-----------|------------------|--|
| Audio   | Headset   | Headset Limit    | 8 to -12 dB/Off<br>Default = 0 dB      |
|         |           | Headset detect   | <b>Enabled</b> /Disabled               |
|         |           | HS Mic Type      | Electret/ <b>Dynamic</b>               |
|         |           | Sidetone Gain    | 8 to -12 dB<br>Default = -12           |
|         |           | Sidetone Control | <b>Tracking</b> /Non-Tracking/Disabled |
|         | Gooseneck | GN Mic Type      | Electret                               |
|         |           |                  | Dynamic                                |

## 21.2 Host Settings

| Level 1       | Level 2   | Level 3                 | Level 4  |
|---------------|-----------|-------------------------|--|
| Host Settings | Host name | Edit                    | Press controller 4 to open a touchscreen keyboard. |
|               | Display   | Screen Brightness       | High/ <b>Medium</b><br>/Low/Very Low               |
|               |           | Screen Dimming          | 1 to 15 minutes<br>Default = 2 minutes             |
|               |           | Touchscreen sensitivity | Low, <b>Medium</b> , High                          |

## 21.3 2 W Audio (A/B) (C/D)

| Level 1          | Level 2               | Level 3        | Level 4  |
|------------------|-----------------------|----------------|--|
| 2W Audio (A / B) | Interface             | Power detected | Yes/No   |
|                  |                       | Power          | Enabled/ <b>Disabled</b>                                     |
|                  |                       | Mode           | <b>Clear-Com</b> /RTS  |
|                  | 2W A                  | Nulling        | The nulling function is only available if power is detected. |
|                  | 2W B                  | Nulling        | as above   |
| Audio (B / C)    | Same as Audio (A / B) |                |  |

## 21.4 Discovery

| Level 1   | Level 2               | Level 3                  | Level 4             |
|-----------|-----------------------|--------------------------|---------------------|
| Discovery | Discover FSII IP TCVR | Discovered FSII IP TCVRs | Register/Unregister |
|           | Discover FSE TCVR     | Discovered FSE TCVRs     | Register/Unregister |

## 21.5 Transceiver

| Level 1     | Level 2  | Level 3              | Level 4   |
|-------------|--|----------------------|---|
| Transceiver | TCVR 1 ... XX<br>View configured transceivers. | Version              |   |
|             |  | Label                |   |
|             |  | Cable Comp (E1 only) | <b>0 - 69 m</b> , 70 - 139 m, 140 - 209 m, 210 - 279 m, 280 - 349 m, ... (increments of 70 m) up to 1540 - 1609 m |

## 21.6 Networking

| Level 1    | Level 2  | Level 3     | Level 4   |
|------------|--|-------------|---|
| Networking | Management   | LAN Status  | Up/Down   |
|            |  | LAN Port    | LAN Ports 1 - 4   |
|            |  | DHCP        | <b>Enabled/Disabled</b>   |
|            |  | IP Address  |   |
|            |  | Subnet mask |   |
|            |  | MAC         |   |
|            | AES67 (only visible if AES67 has been configured to its own LAN) | LAN Status  | Up/Down   |
|            | Dante (only visible if Dante has been configured in the CCM)     |             |   |
|            |  | LAN Port    | By default Management /HelixNet is configured to LAN 1. AES67 is configured to LAN 2. This can be changed in the CCM. |
|            |  | DHCP        | <b>Enabled/Disabled</b>   |
|            |  | IP Address  |   |
|            |  | Subnet mask |   |
|            |  | MAC         | MAC address   |

## 21.7 Administration

| Level 1        | Level 2   | Level 3                 | Level 4  |
|----------------|-----------|-------------------------|--|
| Administration | Beltpacks | Over The Air            | Start OTA  |
|                |           | BP Role List<br>Sorting | Sort by <b>Role<br/>Number</b><br>/Alphabetical  |
|                |           | Battery Type            | <b>Alkaline</b> /NiMh (for<br>use when not using<br>the supplied Li-ion<br>type batteries) |
|                | Software  | Current                 | View current version   |
|                |           | Update                  | Use this to update<br>the Arcadia using a<br>USB stick.                                    |
|                | License   | Connections             | View connected<br>ports  |

| Level 1 | Level 2 | Level 3        | Level 4   |
|---------|---------|----------------|---|
|         |         | Licensed Ports | View licensed ports: <ul style="list-style-type: none"> <li>• Total Ports</li> <li>• <b>Wireless</b> Ports</li> <li>• <b>HelixNet</b> Channels</li> <li>• <b>Dante</b> Ports</li> <li>• <b>I.V. Direct</b> Ports</li> <li>• <b>Any</b> Ports. Ports configured to Any will accept connections of any type: FreeSpeak, HelixNet, Dante or I.V. Direct</li> </ul> |
|         | Reset   | Reboot         | Press rotary 4 to reboot now  |

| Level 1 | Level 2      | Level 3  | Level 4  |
|---------|--------------|--|--|
|         |              | Reset to Default   | Reset Base. When you reset the Base here, as well as system setup details (channels and roles), network details (IP addresses) are also reset. This is not the case when resetting the Base in the CCM. After resetting you must <b>Add</b> transceivers again. HelixNet connections revert to default config. |
|         |              | Reset CCM Password   | Press rotary 4 to reset CCM password to the default setting.   |
|         | Support Info | Generate   | Insert USB   |
|         | Settings     | Save<br>Restore  | Insert USB   |
|         | CCM Access   | Username<br>Default password   |  |
|         | Hardware     | Hw Info<br>Hw Version<br>BOM number<br>PCB number<br>Serial number<br>Product number | Read only. Serial number here is the number of the electronic main board, not the Arcadia device.  |

## 22 Appendix F: Regulatory Compliance (Regulatory Model: 1410)

---

Applicant Name: Clear-Com LLC

Applicant Address: 1301 Marina Village Pkwy, Suite 105, Alameda CA 94501, United States

Manufacturer Name: Clear-Com LLC

Manufacturer Address: 1301 Marina Village Pkwy, Suite 105, Alameda CA 94501, United States

Country of Origin: USA

Brand: Clear-Com

**Caution:** All products are compliant with regulatory requirements detailed in this document when the user follows all installation instructions and operating conditions per Clear-Com specifications

**Caution:** Use of accessories and peripherals other than those recommended by Clear-Com may void the product's compliance as well as the user's authority to operate the equipment.

### 22.1 FCC Notice

This device complies with Part 15 of the FCC rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) This device must accept any interference received, including interference that may cause undesired operation.

**NOTE:** This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to Part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communication. Operation of this equipment in a residential area is likely to cause harmful interference, in which case the user will be required to correct the interference at his own expense.

Changes or modifications not expressly approved by Clear-Com, LLC, an HM Electronics, Inc. company could void the user's authority to operate this equipment.

### 22.2 Industry Canada Compliance Statement

This Class[A] digital device complies with Canadian ICES-003.

Avis de conformité à la réglementation d'Industrie Canada

## 22.3 Korean Notice

A급 기기 (업무용 방송통신기자재)

이 기기는 업무용(A급)으로 전자파적합기기로  
서 판매자 또는 사용자는 이 점을 주의하시기  
바라며, 가정외의 지역에서 사용하는 것을 목  
적으로 합니다.

## 22.4 European Union (CE mark)

The CE marking indicates compliance with the following directives and standards, whenever applicable to the product in question.

**Directives:**

- Electromagnetic Compatibility Directive 2014/30/EU
- Low Voltage Directive 2014/35/EU
- RoHS Directive 2011/65/EU, 2015/863/EU

**Standards:**

- EN55032
- EN55035
- IEC/EN62368-1
- EN IEC 63000



## 22.5 United Kingdom (UKCA Mark)

The UKCA (UK Conformity Assessed) marking is a new UK product marking that will be used for goods being placed on the market in Great Britain (England, Wales and Scotland). The UKCA marking alone cannot be used for goods placed on the Northern Ireland market, which require the CE marking or UK(NI) marking.



**Warning:**

This is a Class A product. In a domestic environment this product may cause radio interference in which case the user may be required to take adequate measures.

## 22.6 Electrical and Electronic Equipment (WEEE) Waste


The European Union (EU) WEEE Directive (2012/19/EU) places an obligation on producers (manufacturers, distributors and/or retailers) to take-back electronic products at the end of their useful life. The WEEE Directive covers most Clear-Com products being sold into the EU as of August 13, 2005. Manufacturers, distributors and retailers are obliged to finance the costs of recovery from municipal collection points, reuse, and recycling of specified percentages per the WEEE requirements.

### Instructions for Disposal of WEEE by Users in the European Union

The symbol shown below is on the product or on its packaging which indicates that this product was put on the market after August 13, 2005 and must not be disposed of with other waste. Instead, it is the user's responsibility to dispose of the user's waste equipment by handing it over to a designated collection point for the recycling of WEEE. The separate collection and recycling of waste equipment at the time of disposal will help to conserve natural resources and ensure that it is recycled in a manner that protects human health and the environment. For more information about where you can drop off your waste equipment for recycling, please contact your local authority, your household waste disposal service or the seller from whom you purchased the product.



## Appendix G: Setting up a Cold Standby Unit

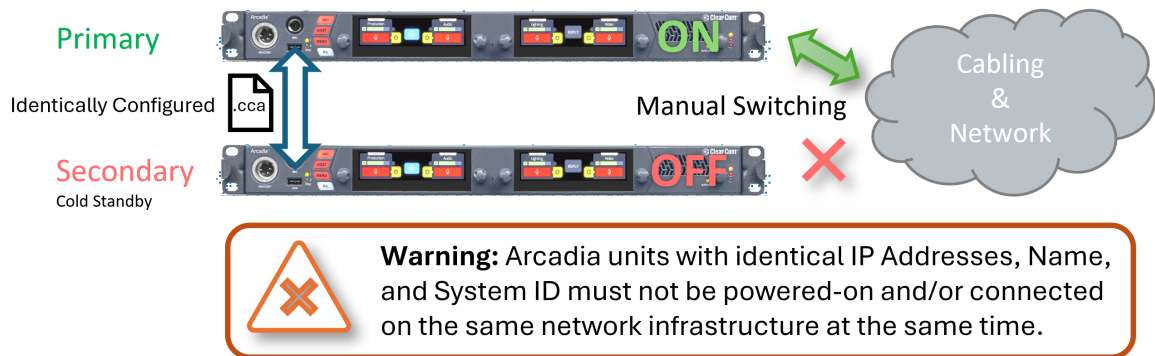

### Preparing a cold standby Arcadia

Arcadia includes various internal features to facilitate a redundant cold standby (secondary) unit for a manual switchover. This is where you can physically switch FreeSpeak, HelixNet, V-Series, I.V. Direct, and analog connections between identically configured Arcadia devices and have system components reconnect.

The primary and identically configured cold standby Arcadia units **MUST NOT** be powered on **OR** on the same network at the same time.

Dante interfaces do not allow for cloned standby units to be configured but does allow routing changes to change over to a different device.

Please see a section on Dante switchover later in this chapter.

### Configuring the system

On: Arcadia Primary Unit:

- Configure
  - To prepare a cold standby unit for manual switchover, start with getting your primary Arcadia system paired to all endpoints, and the system fully connected and configured
- Record
  - Document the name of the Arcadia unit, its IP settings and Wireless System ID
- Save
  - Once connected and configured, save the configuration of the primary Arcadia

## Arcadia secondary unit

- Verify networking
  - Ensure the secondary unit is not on the same physical network as the primary Arcadia unit
- Restore with network settings & system ID
  - Open the CCM and select **Restore Configuration**
  - Restore the configuration with **Network Settings** and **Wireless System ID**
  - Verify configuration is restored: ensure that the system ID, IP settings and the name of the Arcadia match those of the primary unit

## Switching between Arcadia primary & secondary units

The primary Arcadia unit can now be switched out for the secondary Arcadia unit in its most basic form by physically moving the network, FreeSpeak E1, and analog connections from the primary to the secondary unit.

As this switching is done, transceivers and user stations will reconnect with the role fixed to them in the configuration. Key listens will come up in their initial state; unlatched and at a unity level unless otherwise configured.

Once fully configured, it is recommended to test the switchover and observe its behavior within the infrastructure that supports it.

## Dante switchover using Dante Controller presets

Dante doesn't recommend using identically configured cold standby units. However, if no other Arcadia functionality (e.g., Management) is configured on the Dante LAN ports, this allows the Dante ports of both the primary and secondary Arcadia units to be connected to the Dante network at the same time and make use of the Dante Controller's presets functionality for switchover.

To do this, go to Dante Controller:

- Configure the Dante network for the primary Arcadia unit, including all routing
- Go to **File > Save Preset**
- Select the primary Arcadia unit. All receiving Dante stream information will be stored in the preset
- Click on **Advanced**

- Ensure **Name** and **Rx Channel Subscription** are checked at a minimum, but it is recommended that all information is included
- Save as the Primary Arcadia preset
- Repeat all of the above steps for the secondary Arcadia unit

You can now restore the preset for either the primary or secondary Arcadia units in the Dante Controller.

## Implementing your workflows

Various 3rd-party options could be used to perform the switchover, such as 3rd-party port switchers or network switch port controls, in addition to VLAN or preset assignments, depending on your infrastructure. Clear-Com recommends a simple deployment, clear labeling and a tested and documented procedure for how to switch between primary and secondary Arcadia units in your infrastructure.

## Theory of operation - for troubleshooting

- FreeSpeak E1 transceivers connect via a physical connection to the Arcadia.
- FreeSpeak IP transceivers broadcast their mDNS name on the network which gets stored in the configuration of Arcadia upon pairing. Arcadia will then connect to this transceiver when it is visible on the network
- FreeSpeak transceivers broadcast the system ID of Arcadia to any FreeSpeak beltpack within range
- FreeSpeak beltpack pairing stores the system ID of Arcadia in the beltpack **System Connect** screen. This will allow the beltpack to connect to any active Arcadia with an identical configuration of beltpack pairing and system ID delivering either the list of available roles or a fixed role
- FreeSpeak beltpack pairing stores the beltpack's unique ID in the Arcadia system configuration which Arcadia uses to allow the beltpack to connect to the system
- HelixNet user stations connect to the mDNS or IP address of Arcadia once paired either from the HelixNet User Station front panel menu or from the Arcadia CCM via mDNS. Upon reconnecting, the HelixNet user station will either request the last role it used or use a fixed role, if this is configured
- V-Series keypanel and I.V. Directs (I.V. Ports) generally have a unique user name and password established in the Arcadia and stored in the configuration. The keypanel or direct then logs in to the Arcadia using IP address, port number, user name and password

on whichever Arcadia (primary or secondary) is available on the network. A V-Series keypanel will automatically take a role if one is fixed to it in the configuration