

User Guide

FreeSpeak Edge Base Station User Guide



Part Number: PUB-00113 Revision C

June 01, 2023

Document reference

FreeSpeak Edge® Base Station

Part Number: PUB-00113 Revision C

Legal disclaimers

Copyright © 2023 HME Clear-Com Ltd

All rights reserved

Clear-Com and the Clear-Com logo are trademarks or registered trademarks of HM Electronics, Inc.

The software described in this document is furnished under a license agreement and may be used only in accordance with the terms of the agreement.

The product described in this document is distributed under licenses restricting its use, copying, distribution, and decompilation / reverse engineering. No part of this document may be reproduced in any form by any means without prior written authorization of Clear-Com, an HME Company.

Clear-Com Offices are located in California, USA; Cambridge, UK; Dubai, UAE; Montreal, Canada; and Beijing, China. Specific addresses and contact information can be found on Clear-Com's corporate website: www.clearcom.com

Clear-Com contacts

Americas and Asia-Pacific Headquarters

California, United States

Tel: +1 510 337 6600

Email: SalesSupportUS@clearcom.com

Europe, Middle East, and Africa Headquarters

Cambridge, United Kingdom

Tel: +44 1223 815000

Email: SalesSupportEMEA@clearcom.com

China Office

Beijing Representative Office

Beijing, P.R. China

Tel: +8610 59000198/59002608

Email: SalesSupportChina@Clearcom.com

Table of contents

Table of contents	3
1 Introduction	6
1.1 Product Features	7
1.2 FreeSpeak Edge Base Station Interconnections	8
2 Installing FreeSpeak Edge Base Station	9
2.1 Front Panel Connectors, Controls and Indicators	10
2.2 Intercom Touchscreens	11
2.3 Rear Panel Connectors and Indicators	14
2.4 System Powering	15
2.5 Clear-Com Ethernet Cable Recommendations	17
2.6 Stage Announce and Program Feed	18
2.7 Setting the Management IP Address	18
2.8 Saving and Restoring System Configuration	20
2.9 Resetting to Default	21
3 Introduction to the CCM	23
3.1 Accessing the CCM	25
3.2 Changing the CCM Password	26
3.3 Hardware Page Overview	27
3.4 Configuration Page Overview	28
3.5 Status Page	33
4 Example Applications	34
4.1 Fast and Easy Setup: E1	35
4.2 Using E1 With Six Transceivers	37
4.3 Using IP Transceivers with the Base Station	39
4.4 Split Frequency Setup (5, 2.4 and 1.9 GHz System)	41
5 Connecting Transceivers	42
5.1 Overview of Transceivers	43
5.2 Connecting Transceivers Over E1	43
5.3 Connecting Transceivers Over IP	47

6 Network Setup	48
6.1 Network Setup for IP Transceivers	49
6.2 FreeSpeak Edge Base Station LAN Configuration Rules	53
7 Connecting to other systems	55
7.1 Connecting 2-Wire Systems	56
7.2 Connecting 4-Wire Systems	61
7.3 Connecting to Dante-Enabled Devices	66
8 Configuring from the CCM	70
8.1 Configuring Station Settings	71
8.2 Adding IP Transceivers (FS Edge, FS II 1.9)	75
8.3 Registering Beltpacks	76
8.4 Channels and Groups	78
8.5 Managing Channels	79
8.6 Managing Groups	83
8.7 Creating and Editing Roles	89
8.8 Setting up GPIOs and Logic Events	95
8.9 Monitoring System Status	98
9 Security	106
9.1 Warning	106
9.2 Introduction	106
9.3 Using Security Certificates	107
9.4 Forcing HTTPS	108
10 Configuring from the Front Panel	110
10.1 Introduction to Configuring from the Front Panel	111
10.2 Front Panel Menus	111
10.3 Passwords, Addresses and Reset to Default Settings	115
11 Upgrading Firmware	117
11.1 Introduction	118
11.2 Upgrading using the CCM	118
11.3 Upgrading using a USB stick	118
12 Spare parts	120

13 Front Panel Menu Reference Tables	121
13.1 Audio Settings	122
13.2 Host Settings	122
13.3 2 W Audio (A/B) (C/D)	123
13.4 Discovery	123
13.5 Transceiver	124
13.6 Networking	125
13.7 Administration	126
14 Specifications	128
14.1 FreeSpeak Edge Base Station	129
14.2 Capacity	132
14.3 Frequency Response - Station to Beltpack	132
14.4 Front Panel Headset Microphone	133
14.5 Network Specifications	134
15 Pinouts	136
15.1 GPIO pinouts	137
15.2 2-Wire Pinouts	138
15.3 4-Wire Pinouts	139
15.4 DECT Sync	139
16 Regulatory Compliance (Regulatory Model: 1410)	140
16.1 FCC Notice	140
16.2 FCC/IC/EC RF Exposure Warning	141
16.3 Industry Canada Compliance Statement	141
16.4 Korean Notice	141
16.5 European Union (CE mark)	142
16.6 United Kingdom (UKCA Mark)	142
16.7 Electrical and Electronic Equipment (WEEE) Waste	143

1 Introduction

This chapter provides an overview of the FreeSpeak Edge Base Station. It contains the following sections:

1.1 Product Features	7
1.2 FreeSpeak Edge Base Station Interconnections	8

1.1 Product Features

FreeSpeak Edge Base Station is a low-latency intercom platform that interconnects with wired and wireless intercom systems. It supports:

- Six IP transceivers (any combination up to a total of six of FreeSpeak II and FreeSpeak Edge TCVRs)
- 10 E1 transceivers (any combination up to a total of 10 of FreeSpeak II 1.9 and 2.4 TCVRs)
- 16 wireless beltacks (any combination up to a total of 16 of FreeSpeak II and FreeSpeak Edge beltacks)
- Eight Dante channels
- Eight 4-wire ports
 - Port 8 is dedicated to program feed and stage announce
- Four 2-wire ports (Clear-Com or RTS)

The secure browser-based Core Configuration Manager (CCM) offers intuitive configuration and you also have the option of using the touch-sensitive front-panel screens.

You can connect the Base Station to:


- Wireless transceivers:
 - 1.9 GHz - E1 or IP connection
 - 2.4 GHz - E1 only
 - 5 GHz - IP only
- 2-wire partyline systems such as Encore
- Dante compliant systems

System limits:

- 100 channels
- 100 groups
- 200 roles

1.2 FreeSpeak Edge Base Station Interconnections

The following graphic shows an overview of how the FreeSpeak Edge Base Station can interconnect with other intercom components.

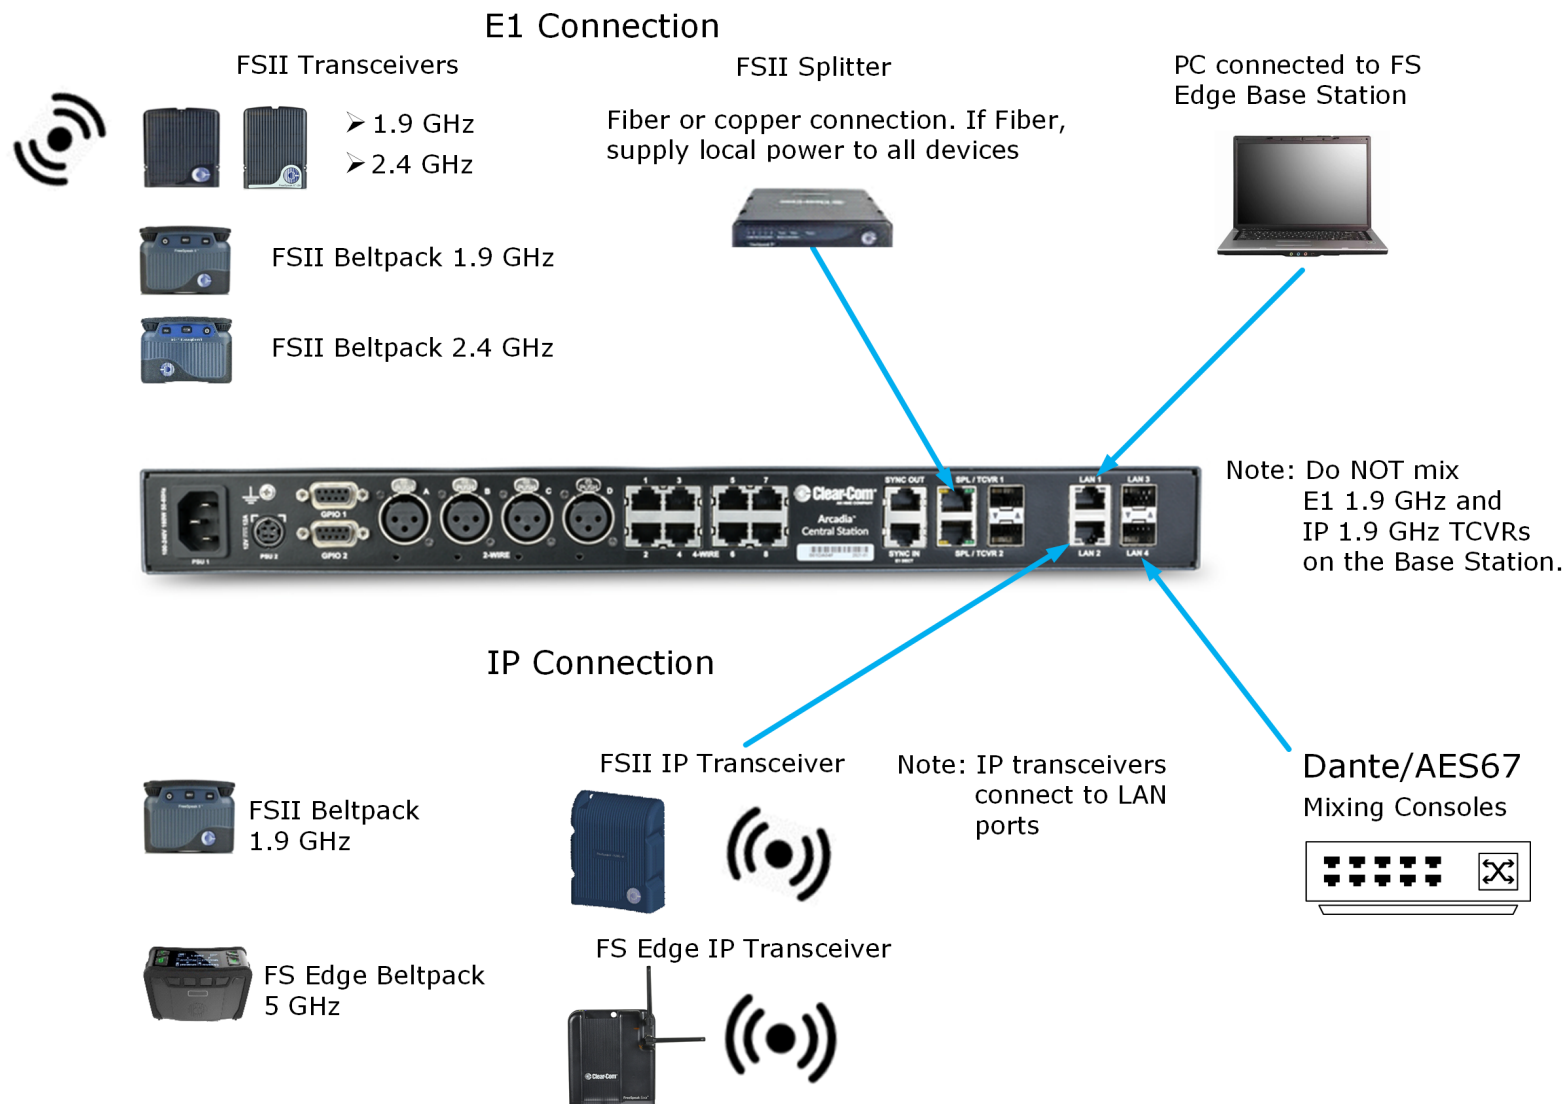


2 Installing FreeSpeak Edge Base Station

This chapter describes the front and rear panels, power supplies and cabling recommendations. It also describes network setup and illustrates example applications. It contains the following sections:

2.1 Front Panel Connectors, Controls and Indicators	10
2.2 Intercom Touchscreens	11
2.3 Rear Panel Connectors and Indicators	14
2.4 System Powering	15
2.5 Clear-Com Ethernet Cable Recommendations	17
2.6 Stage Announce and Program Feed	18
2.7 Setting the Management IP Address	18
2.8 Saving and Restoring System Configuration	20
2.9 Resetting to Default	21

2.1 Front Panel Connectors, Controls and Indicators

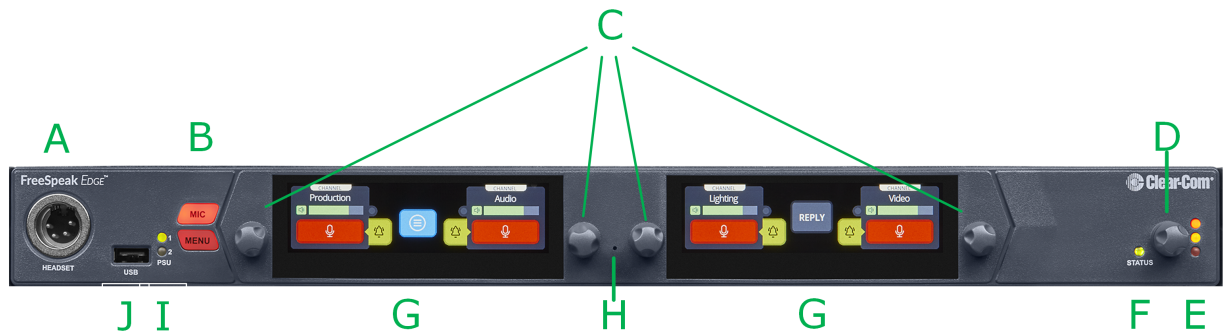

The FreeSpeak Edge front panel connectors, controls and indicators are listed below.


Item	Description
A	Headset connector (4-pin XLR female)
B	Microphone key Menu key
C	Rotary Encoders. Use these to control channel volume, mute or unmute audio, or to navigate through the menu system.
D	Main Volume Control
E	Main Volume Level LEDs: <ul style="list-style-type: none"> • Red - high volume level • Amber - medium volume level • Green - low volume level
F	Base Station status LED <ul style="list-style-type: none"> • Off - the device is off or initializing. • On (solid green) - All ok with the device. • Flashing green (slow, 2 Hz) - there are warning(s) with the device. • Flashing green (fast, 4 Hz) - there are error(s) with the device.
G	Color touchscreen displays
H	Pin reset

Item	Description
I	Power Input LEDs
J	<p>USB A connector.</p> <p>Use to:</p> <ul style="list-style-type: none"> • Register beltacks • Upgrade the Base Station • Save/Restore system settings • Obtain detailed logs for diagnostic purposes

2.2 Intercom Touchscreens


The Base Station has two intercom control touchscreens, available when the front panel screens are not in menu mode. Each touchscreen provides access to two keys which can be configured for channels, groups or point to point communications channels.

2.2.1 Left Intercom Touchscreen

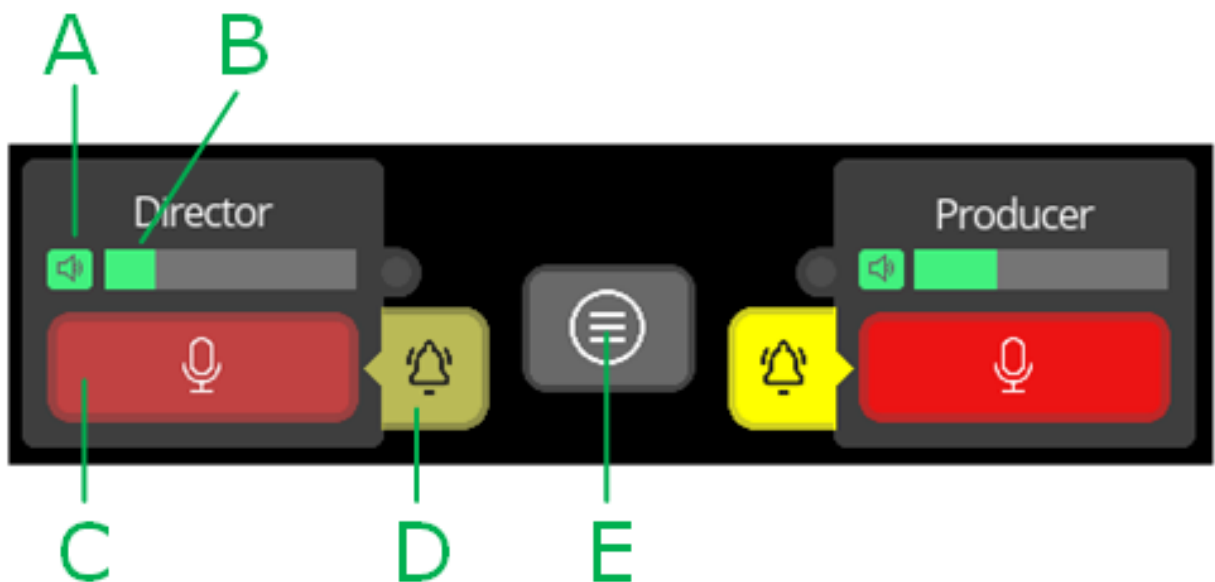


Item	Description
A	Listen activation indicator.
B	Volume level indicator. Control the volume with the rotary controller next to the channel/audio source.
C	Talk button.
D	Call button. Use this to send a call signal.
E	Menu button. Touch to see: <ul style="list-style-type: none"> • Stage Announce • All talk • Remote mic kill (RMK)

2.2.2 Right Intercom Touchscreen

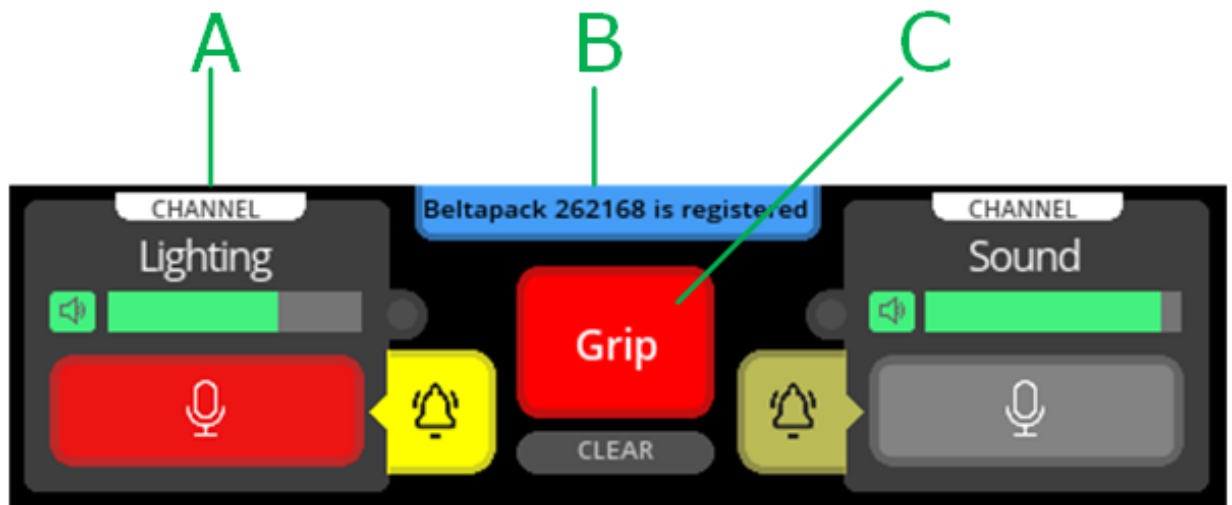

Item	Description
A	Channel indication. Audio routes can be point-to-point or channels.
B	Notification bar <ul style="list-style-type: none">• Beltpack registration• Progress of upgrades• Support information gathering• Resoration of configuration progress
C	Reply button. Use CLEAR to clear the currently visible entry (does not clear the entire key stack).

2.3 Rear Panel Connectors and Indicators

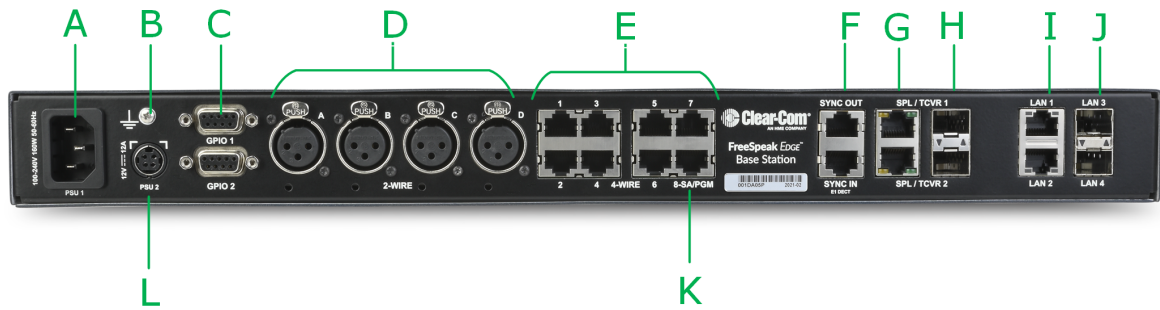

The rear connectors and indicators are listed below.

Item	Description
A	Internal power connector. Mains power lead with internal power supply.
B	Grounding screw.
C	General Purpose Input/Output connectors x2 (DB-9F). <ul style="list-style-type: none"> GPIO 1 contains GPI1 and GPO1 & 2 GPIO 2 contains GPI2 and GPO 3 & 4.
D	XLR 2-wire Partyline connectors
E	RJ45 4-wire audio and data connectors. Port 8 is dedicated to Program Feed (PGM) and Stage Announce (SA), to be used with the split RJ45 cable connector that is supplied with the Base Station.
F	Dect Sync RJ45 connectors, IN, OUT.
G	E1 RJ45 connectors to splitter/transceiver. Do not connect IP transceivers here.

Item	Description
H	SFP cage for E1 fiber connection to splitter/transceiver. Either single-mode or multi-mode fiber modules. Modules must match existing cabling. Do not connect IP transceivers here.
I	RJ45 LAN connectors. Assignable to Management, Dante primary, Dante secondary, AES67 for FreeSpeak IP transceivers.
J	SFP cage for fiber LAN connectors. Assignable to Management, Dante primary, Dante secondary, AES67 for FreeSpeak IP transceivers. Capacity 2.5Gb.
K	SA/PGM. RJ45 for SA and RJ45 to XLR for PGM.
L	External power supply connector (12V DC). CAUTION: Before using, see System Powering on page 15 .

2.4 System Powering

There are two power supplies:

- Mains power connector (IEC) internal power supply
- DC connector. External AC/DC power adapter
12V DC, 12A

Use one power connector, or both to guard against one failing.

2.4.1 Using the External DC Power Connector

CAUTION: YOU MUST CONNECT THE EXTERNAL DC POWER SUPPLY IN THE ORDER DESCRIBED AND ILLUSTRATED BELOW:

1. Connect the external power supply 12V cable connector (A) to the rear chassis 12V input connector of the Station.


Note: When connecting the power cable, be sure to push until the connector locks into the device.

Station (rear, left-side)



2. Connect External Power Supply mains cord (B) to the AC input source.

Mains connector

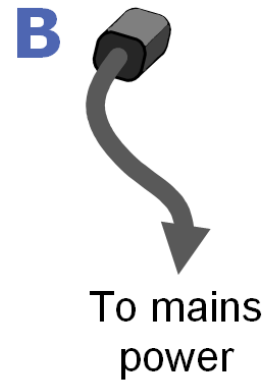

2.5

Clear-Com Ethernet Cable Recommendations


Cable recommendations	
Category (Cat)	<p>Higher Cat numbers will support a higher bandwidth. Therefore, by using a higher Cat number you are future proofing your system to some extent. Example:</p> <ul style="list-style-type: none"> • Cat 5e : up to 1 GB • Cat 6: up to 10 GB <p>Use Cat 5e or higher.</p>
American Wire Gauge (AWG)	<p>The lower the AWG number, the less temperature rise there will be in the cable when using PoE. This is particularly important for bundles. Local building regulations may rule out the use of 26 AWG or higher, depending on the installation. Check with your local building regulations. Use AWG 24 or lower.</p>
Shielded Twisted Pair (STP) or Foiled Twisted Pair (FTP)	<p>Using shielded cable means less problems with interference from other sources. This means that your installation will be more robust if you use shielded cables.</p>

Note: Overall recommendation: Use Cat 6a, 23 AWG STP cable.

2.6 Stage Announce and Program Feed



Your FreeSpeak Edge Base Station is supplied with an RJ45 connector that uses a splitter cable to split into two XLR connectors. If you wish to use an external Stage Announce (**SA**) and Program Feed (**PGM**), you must connect this to the RJ45 port labeled **SA/PGM** (port 8) on the rear of your device, and connect your input (**PGM**) and output (**SA**) to these connectors.

Navigate to **Configuration > Channels** in the CCM and click the add button  next to the PGM and SA ports to put them into channels as required. These audio resources can be routed to **Channels**, **Groups**, **Roles** and **Logic** events (GPIOs).

Note: These resource are unidirectional (simplex, not duplex).

2.7 Setting the Management IP Address

By default your Base Station works with DHCP IP addressing. However, you can set a static IP address for any of the station Ethernet ports (with the exception of Dante audio that is defined by the Audinate Dante Controller).

The Management IP address can be set:

- From the Base Station front panel menus
- From the Core Configuration Manager (CCM)


2.7.1 Setting the Management IP Address from the Front Panel Menus

1. Press the **MENU** button.
2. Using the far left rotary controller, navigate to **Networking**.
3. Select **(Management**.
4. Navigate to **DHCP** and select **DISABLED**. Push to select menu item.
5. A numerical touchscreen keypad appears in the screen.
6. Using the touchscreen, press **Clr** to clear the IP address field.
7. Enter the new IP address using the touchscreen.
8. Press **OK**.
9. Edit the subnet if required.
10. Press **OK**.
11. The Management IP address has been changed.

2.7.2 Setting the Management IP Address from the CCM

To access the CCM, see [Introduction to the CCM on page 23](#).

1. In the CCM, navigate to **Hardware > Resources**.
2. Make sure the **Host** tab is selected.
3. In the **Network** tab, select **Management**.
4. Select **Static**.
5. Enter the required IP address and press the [Enter] key.

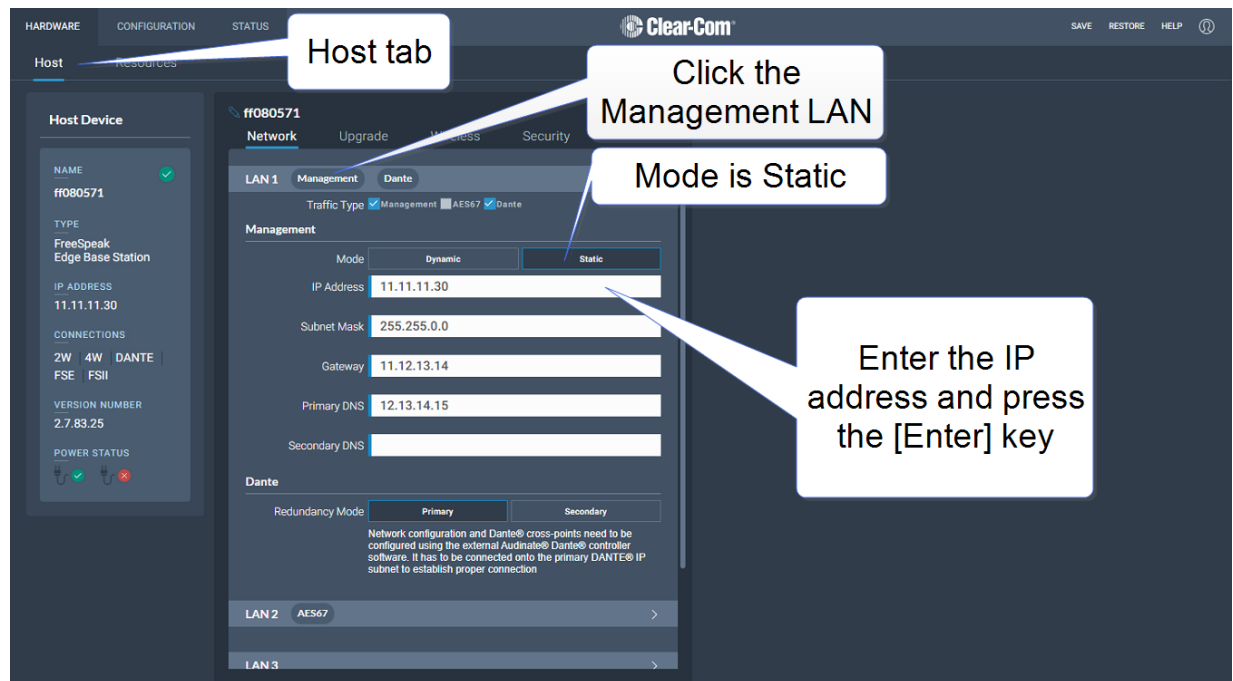

For more information, see: [FreeSpeak Edge Base Station LAN Configuration Rules on page 53](#).

2.8 Saving and Restoring System Configuration

Clear-Com recommends that you make a backup of your system configuration using the Save option that is available in the CCM and the front panel menu system.

2.8.1 Saving System Configuration in the CCM

The **Save** and **Restore** options are available in the CCM top navigation bar.



When you click **Save**, all system configuration; channels, roles and network details are saved to a file (.cca) on your computer.

2.8.2 Saving System Setup in the Front Panel Menus

1. Insert a USB drive into the USB connector on the front of the Base Station.
2. Press the **Menu** button.
3. Using the rotary controllers, navigate to **Administration > Settings > Save**.
4. Push the 4th rotary controller. System setting are saved to the USB drive. The progress of this Save is shown in the notification bar on the front panel.

2.8.3 Restoring System Configuration

Your system configuration can be restored to the Base Station at any time using the **Restore** button in the CCM and also from the front panel menu system.

On restore, the saved configuration is reapplied to the Base Station. The following aspects of the configuration are optionally restored:

- Network settings (IP addresses)
- Over The Air system ID.

You do not get these options when restoring by USB directly to the Base Station. If you want to restore system settings taken from different Stations, you must use the CCM Restore option, as restoring directly from the Base Station in this situation would restore network and OTA system ID and IP and could cause wireless ID conflicts.

2.9 Resetting to Default

Your Base Station can be reset to default settings either from the front panel menus or from the Core Configuration Manager (CCM).

Note: *When you use a pin reset on front the front of the Base Station the device reboots.*

2.9.1 Resetting to Default from the Base Station Menu System

1. Press the **Menu** button on the front of the Base Station.
2. Using the rotary controllers navigate to **Administration > Reset > Reset to Default > Reset Base**.
3. Press the 4th rotary controller.
4. The device will reset to factory defaults and reboot.
Network settings are also reset, and the password is reset to default.

2.9.2 Resetting to Default from the CCM

1. In the CCM, navigate to **Status > Overview > Host Device**.
2. Select **Reset to Default**.
3. From the confirmation dialog box, click **Reset to Default**.
4. The device will reset to factory defaults and reboot.
Network settings are not reset, and the password is also not reset.


3 Introduction to the CCM

This chapter describes the main pages of the Core Configuration Manager (CCM). It contains the following sections:

3.1 Accessing the CCM	25
3.2 Changing the CCM Password	26
3.3 Hardware Page Overview	27
3.4 Configuration Page Overview	28
3.5 Status Page	33

The CCM is an easy-to-use browser-based software tool with intuitive menus that enable you to quickly set up, configure and edit your system. It provides an overview of all the system components and interfaces. It is password protected and suitable for use in poorly lit environments.

At-a-glance guide to using the Core Configuration Manager (CCM)

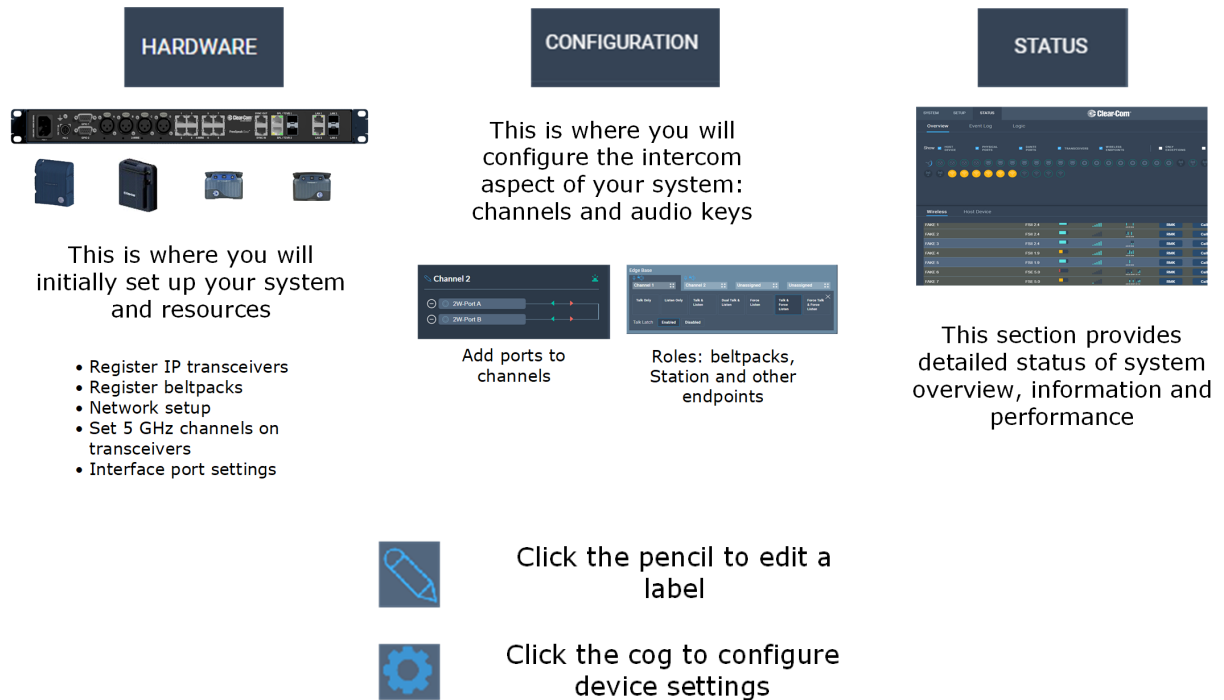


You can access the CCM using the following internet browsers:

- Chrome
- Safari
- Firefox
- Microsoft Edge

3.1 Accessing the CCM

1. Make sure that the Base Station is connected to a network using the LAN connector that is configured for management (Default LAN 1) on the rear panel of the device (see [Rear Panel Connectors and Indicators on page 14](#)).
2. Open a supported internet browser on a desktop that is connected to the same network as the Base Station.
3. In the browser address field, enter the IP address of the Base Station. You can find this from the front panel menus, see [Introduction to Configuring from the Front Panel on page 111](#). The login screen appears:

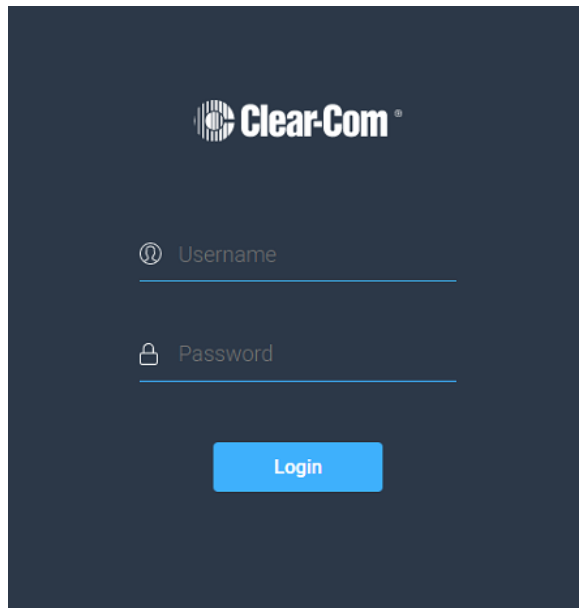

If you enter an incorrect user name or password, an error message appears and you are prompted to re-enter your user credentials.


4. Enter the username and password, and then click **Login**.

The default values are:

- username: **admin**
- password: find the default password in the front panel menu system, see [Passwords, Addresses and Reset to Default Settings on page 115](#).

Note: The username and password are case sensitive.


The CCM **Hardware** page opens.

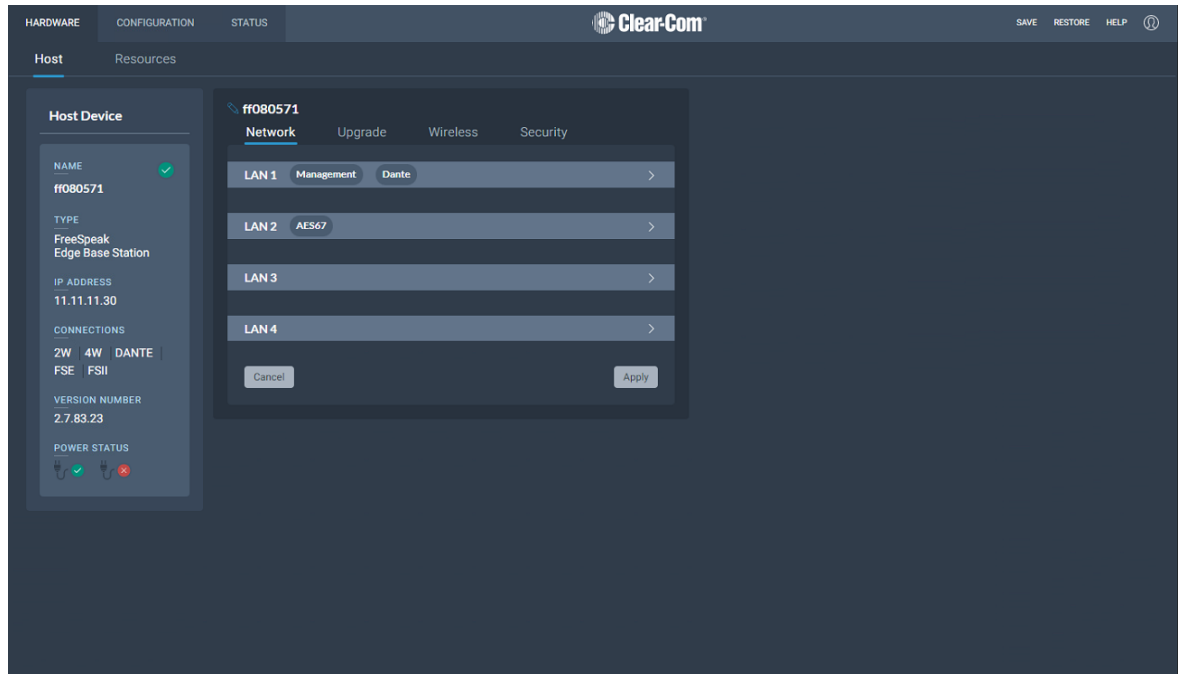

Note: On first opening the CCM, the **Hardware** page opens with the **Host** tab selected. On subsequent occasions, the **Status** page opens.


3.2 Changing the CCM Password

Change the password to one of your own choosing in the top right corner of the navigation bar.

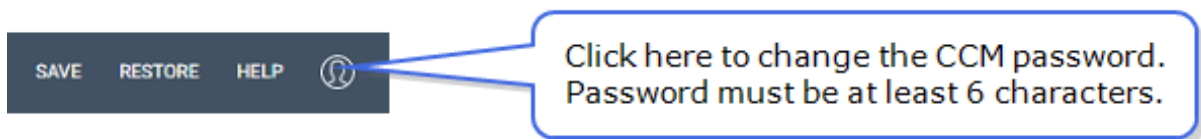

Note: You can reset your password to the default at any time from the Base Station front panel menus.

3.3 Hardware Page Overview

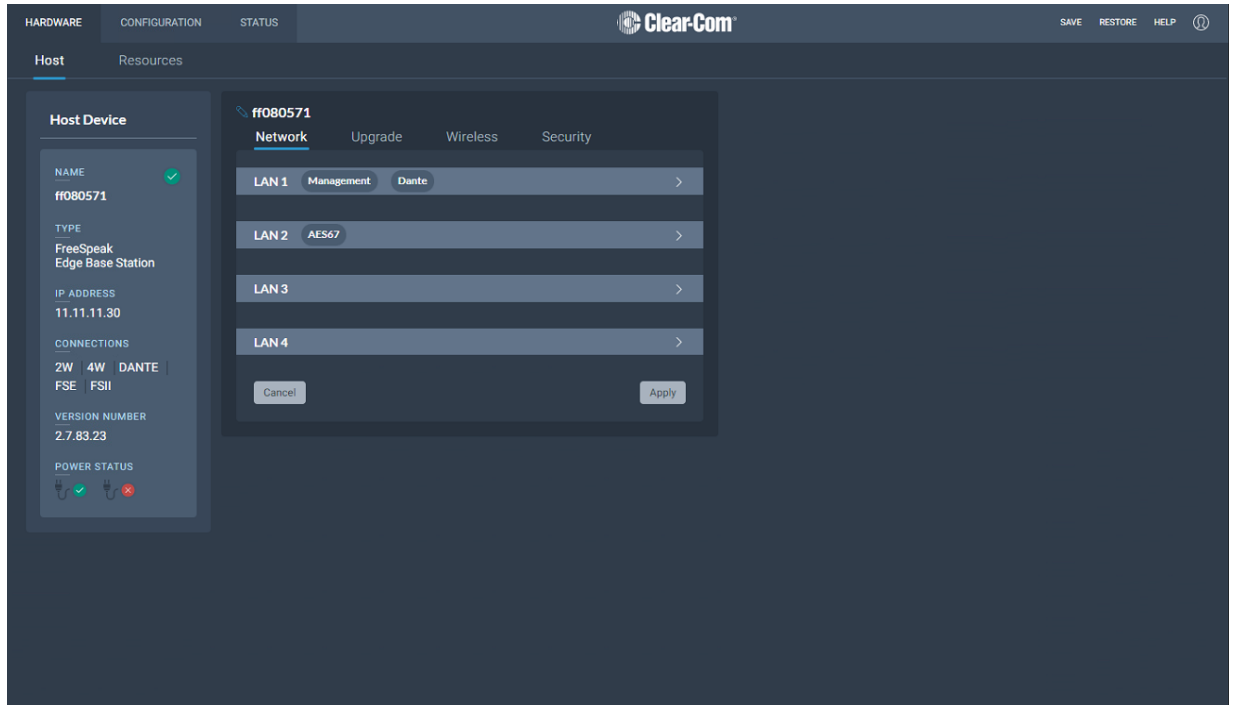

The Hardware page of the CCM is where you set up your system. From the **Hosts** tab you can configure your Station settings.

The Resources Page

Click the **Resources** tab to see the resources page. This gives an overview of the hardware and ports that are present. From this page, you can use the **Add Resource** button to:


- View a list of both discovered and registered IP transceivers
- Add any discovered IP transceivers to the system
- Remove any registered IP transceivers from the system
- Register beltpacks to the system
- Create Dante ports

In the Hardware Resources page you can:


- Adjust settings on interface ports

If you click the down arrow in the **Endpoints** section of the screen you will see a list of connected Endpoints. Select an Endpoint (beltpack) to show configuration details such as:

- Fix/unfix a role. If a role is fixed to a beltack, the user cannot select from a list of roles on powering on the beltack.
- Unregister a beltack from the system.

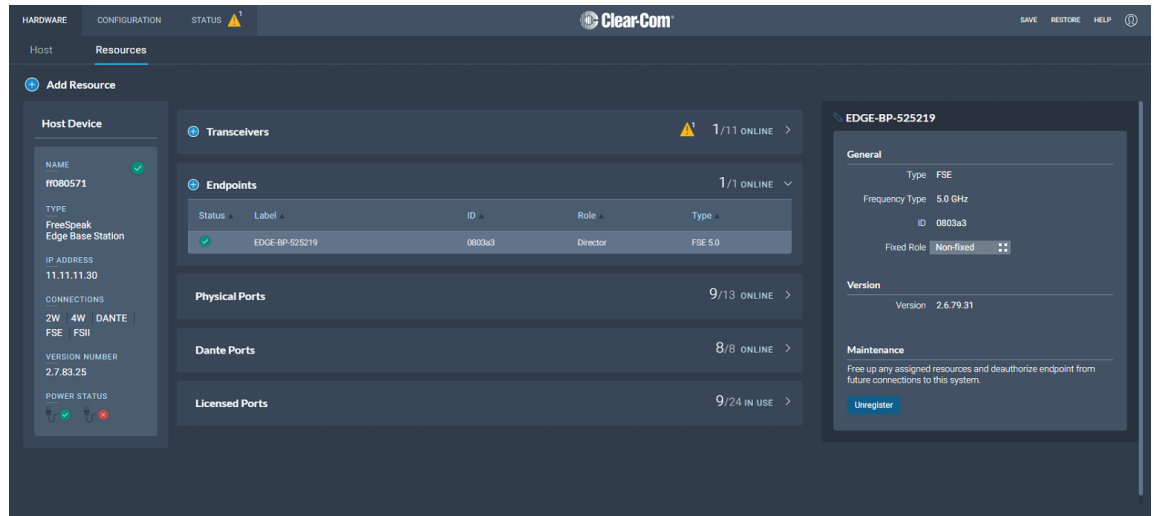

3.4 Configuration Page Overview

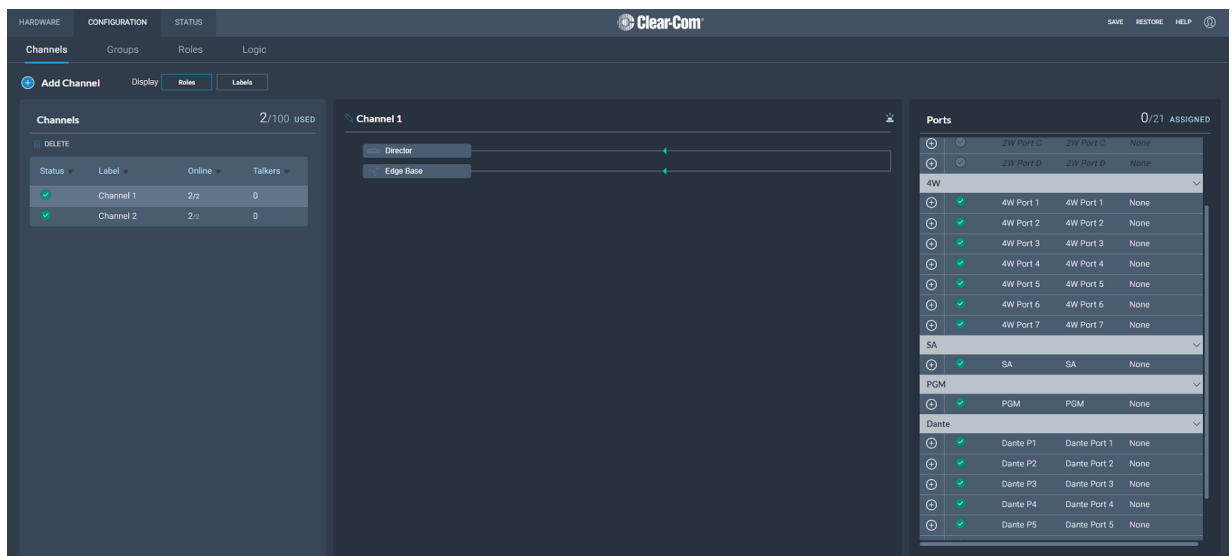

The **Configuration** page of the CCM is where you configure the intercom routing aspects of your system (add audio to channels and set up talk and call keys for beltacks). It consists of four areas:


- Channels
- Roles

- Groups
- Logic (GPIOs)

The **Configuration** page enables you to:

- View existing channels and add new channels
- Add ports to channels
- View existing groups and add new groups
- View and edit roles
- View and edit General Purpose Inputs (GPIs) and General Purpose Outputs (GPOs)

3.4.1 Channels Page

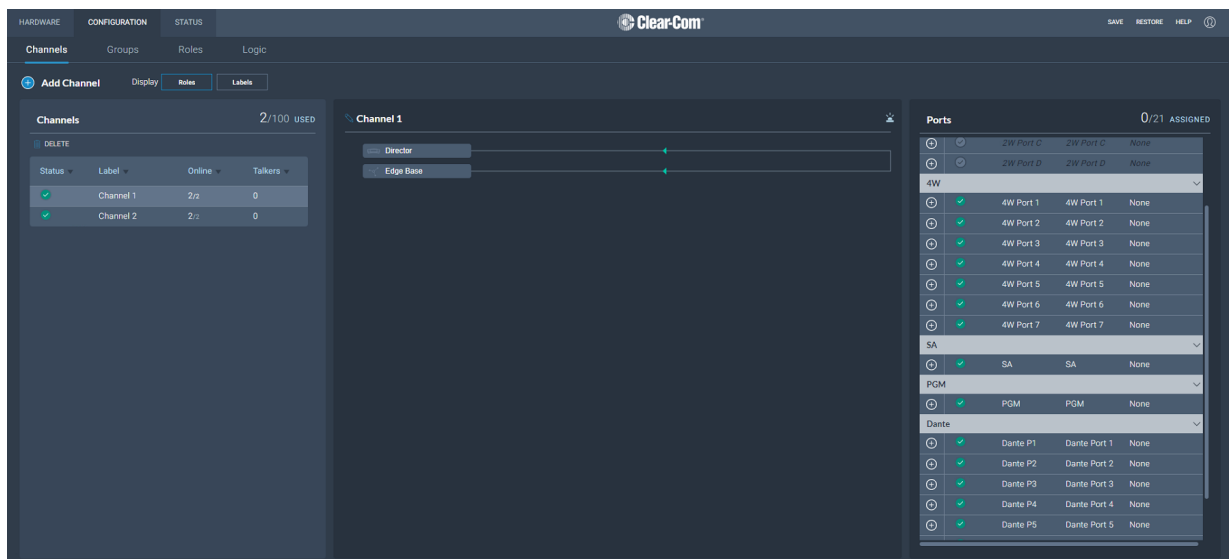

The Channels page enables you to view channels and add ports to channels. Audio keys are added to channels in the **Roles** page. The center panel on this screen shows the live state of audio routing.

3.4.2 Groups Page

The screenshot displays the Clear-Com Groups Page. The top navigation bar includes 'HARDWARE', 'CONFIGURATION', 'STATUS', and the 'Clear-Com' logo. Below this, a sub-navigation bar shows 'Channels', 'Groups', 'Roles', and 'Logic'. The 'Groups' tab is selected.

The main interface is divided into three panels:

- Groups Panel (Left):** Titled 'Groups' with a '1/100 USED' indicator. It features a 'DELETE' button and a table with columns: Status, Label, Online, and Talkers. The table contains one entry: 'Group 1' with a green checkmark in the Status column, '2/2' in the Online column, and '0' in the Talkers column.
- Group 1 Panel (Middle):** Titled 'Group 1', it shows a diagram with two ports: '4W Port 1' and 'SA'.
- Ports Panel (Right):** Titled 'Ports' with a '2/21 ASSIGNED' indicator. It contains a table with columns: Status, Label, Port Id, and Group. The table is organized into sections for different port types:
 - 2W Section:** Contains 4 rows for '2W Port A', '2W Port B', '2W Port C', and '2W Port D'. All have a green checkmark in the Status column and 'None' in the Group column.
 - 4W Section:** Contains 7 rows for '4W Port 1' through '4W Port 7'. All have a green checkmark in the Status column and 'Group 1' in the Group column.
 - SA Section:** Contains 1 row for 'SA' with a green checkmark in the Status column and 'Group 1' in the Group column.

The Groups Page allows you to view Groups and add ports to Groups. Roles are added to Groups in the **Roles** page.


3.4.3 Roles Page

The **Roles** page enables you to create roles for the devices in your intercom system.

Roles are made for:

- The Base Station
- FreeSpeak II beltpacks
- FreeSpeak Edge beltpacks

A role can be made that can be used with either an FS II beltpack or an FS Edge beltpack (this role can only be used on one beltpack at any one time).

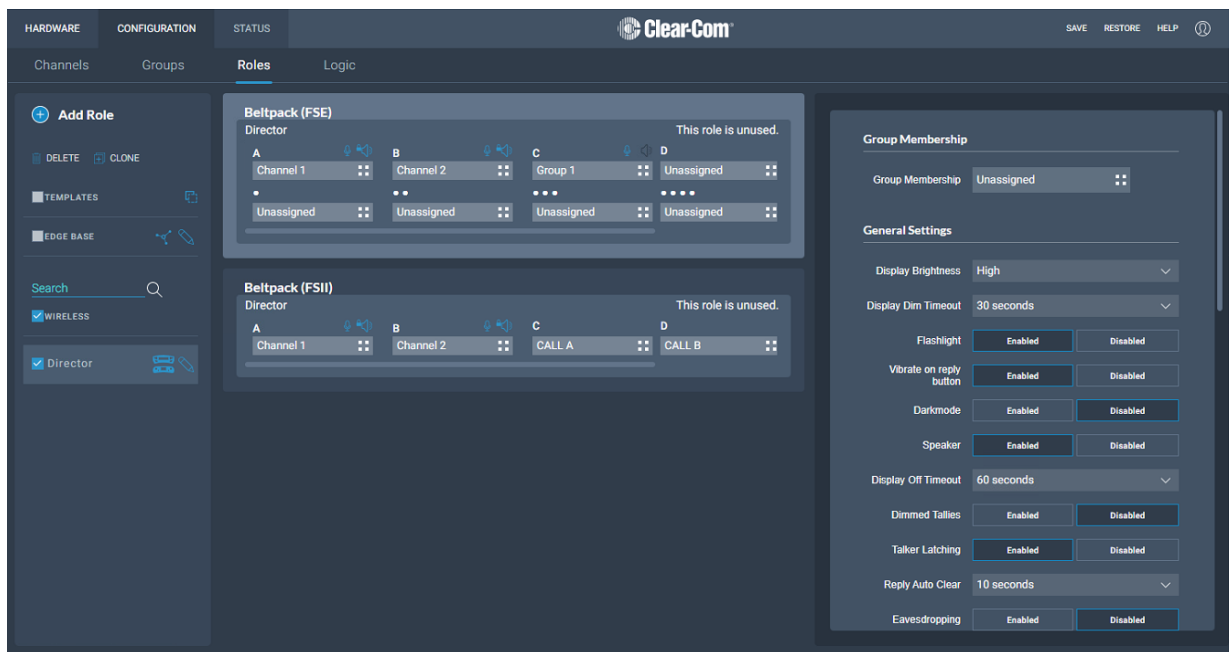

The **Roles** page of the CCM enables you to:

- View, edit, add and delete roles.

3.4.4 Logic Page


The Base Station offers six fully configurable GPIOs, increasing the range and possible uses of controls and relays.

- 2 x GPIs. These can be used, for example, to allow the station operator to open an audio route to a Channel using a foot switch, or to route a program feed to a Channel, Group or beltpack when an on-air light comes on.
 - Up to 10 different audio routes can be generated on each GPI.
- 4 x GPOs. The most common uses for output relays are to turn on an on-air light, connect to a radio, or send an input to an external audio console.
 - Up to 10 different actions can be generated on each GPO.
- You can also set up extended control sequences in the **Control Logic** section.

Relays (GPOs) and GPIs are configured in the **Configuration > Logic** page of the Core Configuration Manager (CCM) and can be viewed and tested on the **Status > Logic** page.

The screenshot displays the Clear-Com Logic configuration interface. On the left sidebar, under the 'GPIO' section, there are two GPIs (GPI1 and GPI2) and four GPOs (GPO1, GPO2, GPO3, GPO4). The main content area is titled 'GPI1' and shows a 'Crosspoints Events' table. The table has two columns: 'Source' and 'Destination'. The 'Source' is 'Edge Base' and the 'Destination' is 'SA'. There are checkmark and cross icons next to the destination. Below this, there is a 'Control Logic' section with a table showing a 'Director' source, '2W Port A' destination, and 'Call' action type. The 'Action Details' column shows '2W Port A receives call'.

3.5 Status Page

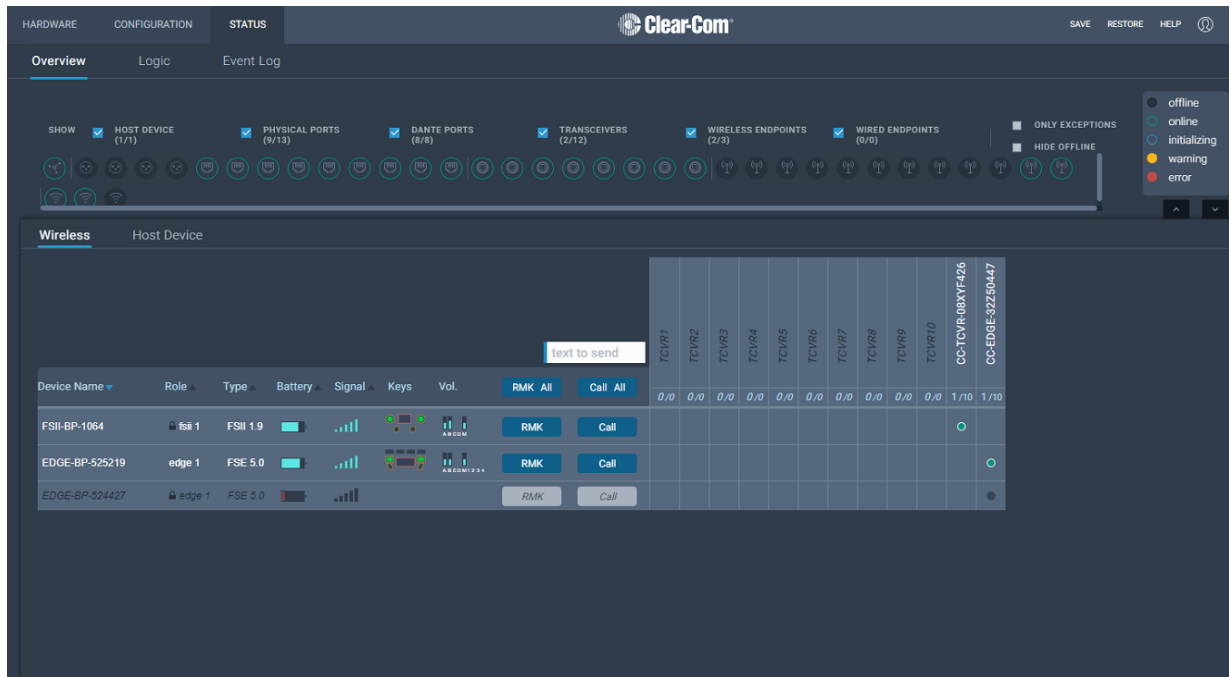

From the **Status** page of the CCM, you can view the status of all the resources that are connected to the FreeSpeak Edge Base Station. These include:

- Transceivers (IP and E1)
- Beltpacks
- Interface ports

Here you will see error and warning states.

Note: *Error states are used exclusively to indicate that audio via this resource is not working.*

You can quickly see if entities are:

- Offline
- Online
- Initializing


4 Example Applications

This chapter contains examples of typical applications. It contains the following sections:

4.1 Fast and Easy Setup: E1	35
4.2 Using E1 With Six Transceivers	37
4.3 Using IP Transceivers with the Base Station	39
4.4 Split Frequency Setup (5, 2.4 and 1.9 GHz System)	41

4.1 Fast and Easy Setup: E1

The FreeSpeak II E1 transceivers use an E1 connection (telecommunications standard) directly to the Base Station. The Core Configuration Manager (CCM) is the easiest way to configure your system, but this setup can be configured with minimal use of the CCM if you work with the default role setup. Using the default setup, all devices have talk and forced listen keys to Channel 1 and Channel 2 and can engage call signals to those channels.

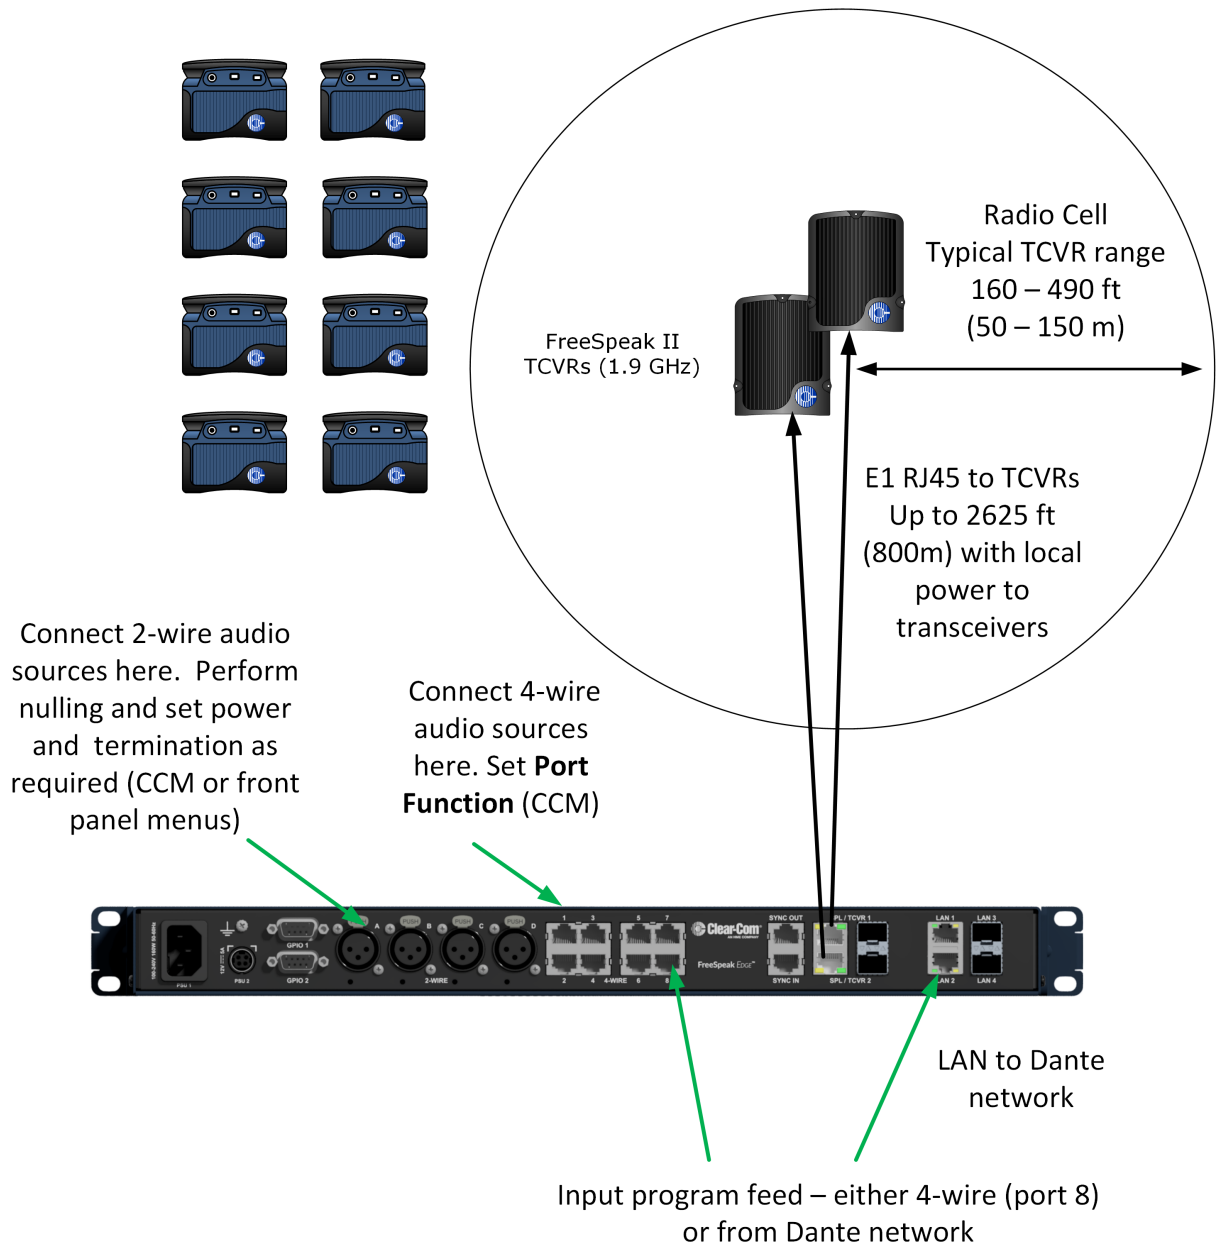


4.1.1 Outline of General Setup and Configuration

- For E1 setup, see [Connecting Transceivers Over E1 on page 43](#).
- To access the CCM, see: [Introduction to the CCM on page 23](#).
- To register beltpacks, see [Registering Beltpacks on page 76](#).
- To set Port Function, see [Port Function on page 62](#).
- To perform null and set power, see [Connecting 2-Wire Systems on page 56](#).
- To connect Program Feed, see [Stage Announce and Program Feed on page 18](#).

4.2 Using E1 With Six Transceivers

This setup includes two splitters, both connected via shielded Cat 5e cable using E1 connectivity. Four channels are configured in the CCM: Channel 1=ALL, Channel 2=Lighting, Channel 3=Sound, Channel 4=FoH. 16 roles are configured for the beltpacks.

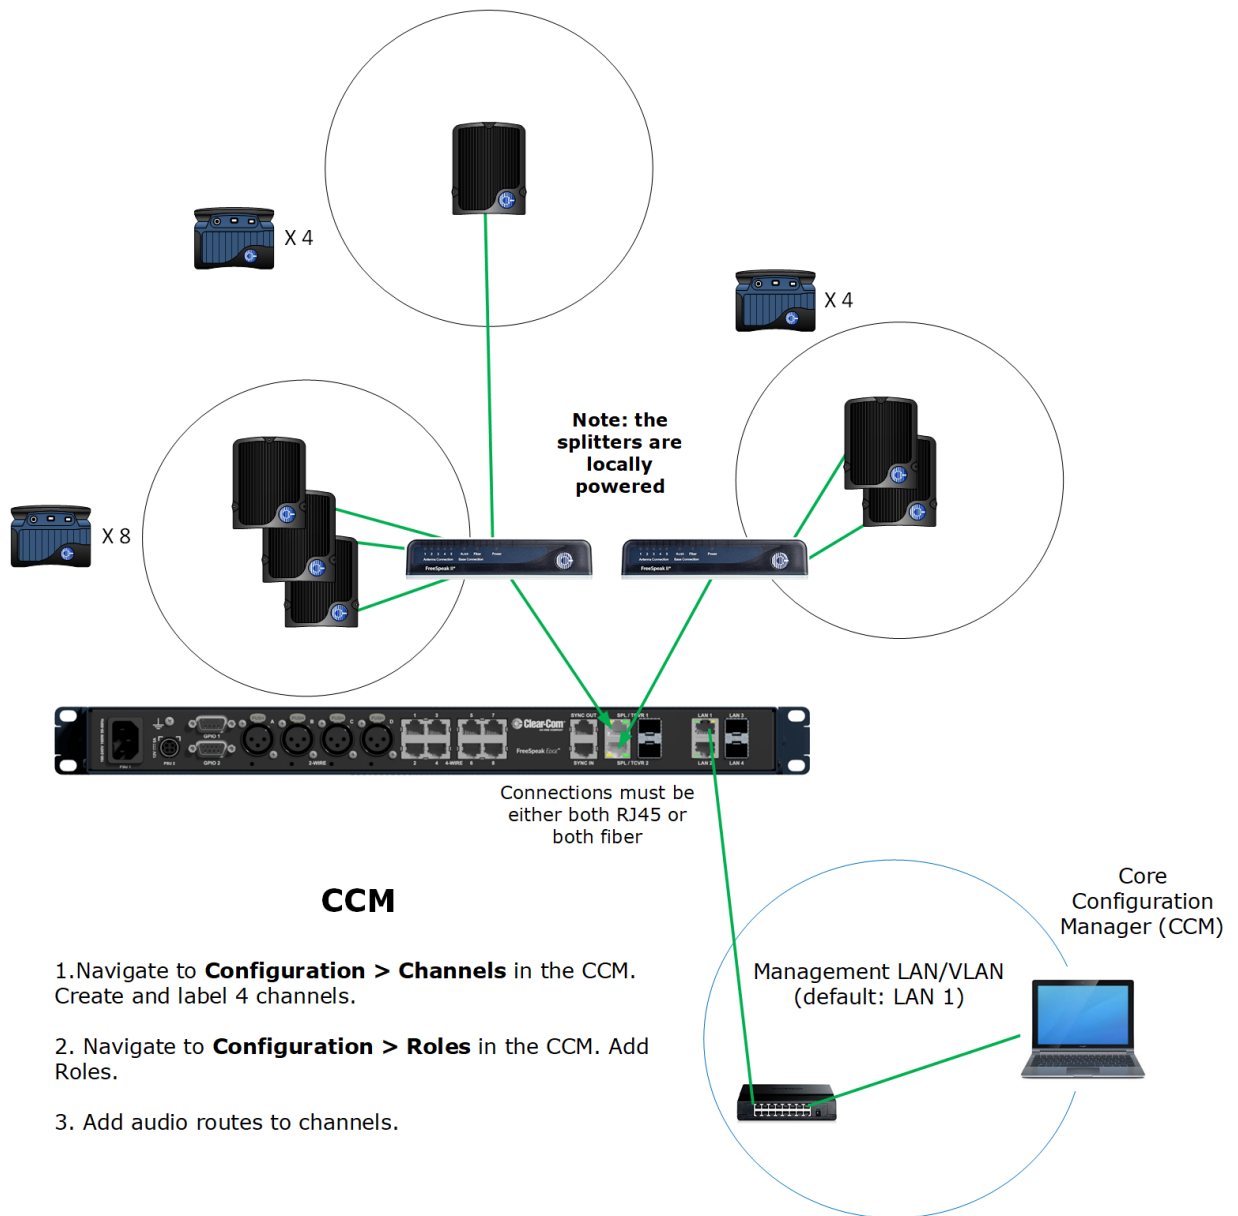

4.2.1 Outline of General Setup and Configuration

- For E1 setup, see [Connecting Transceivers Over E1 on page 43](#).
- To set the splitter DIP switches, see the FSII Splitter Quick Start Guide (FSII SPL-QSG) in the Clear-Com FreeSpeak II Knowledge Center on the Clear-Com website:
[Clear-Com FreeSpeak II Knowledge Center](#)
- To access the CCM, see: [Introduction to the CCM on page 23](#).
- To register beltpacks, see [Registering Beltpacks on page 76](#).
- To set port settings for 2-wire sources, see [Connecting 2-Wire Systems on page 56](#).
- To set port settings for 4-wire sources, see [Connecting 4-Wire Systems on page 61](#).
- To connect program and stage announce, see:
[Stage Announce and Program Feed on page 18](#).
- To configure channels, see [Managing Channels on page 79](#).
- To configure Roles, see [Creating and Editing Roles on page 89](#).

4.3 Using IP Transceivers with the Base Station

This setup has a total of 6 FS Edge transceivers with 16 Beltpacks connected. The IP transceivers are connected via a network that is configured for AES67 traffic. These are configured using the CCM. There are four 2-wire partylines and a Dante network.

Note: *The Dante network must be on a different VLAN or network from the IP transceivers.*

Note: *The AES67 network must be set up correctly for the IP transceivers in order to meet the needs of Clear-Com IP transceivers for high levels of PTP accuracy.*

See the *AoIP Network Recommendations* guide, available from the [Clear-Com FSII Knowledge Center](#).


FS Edge 5 GHz
beltpacks x 16

Register at the
Base or in the
CCM



Note: This setup assumes a dedicated network switch for the Edge Base, transceivers and CCM.

Note: You cannot configure the IP transceiver network (AES67) and Dante to the same network port.

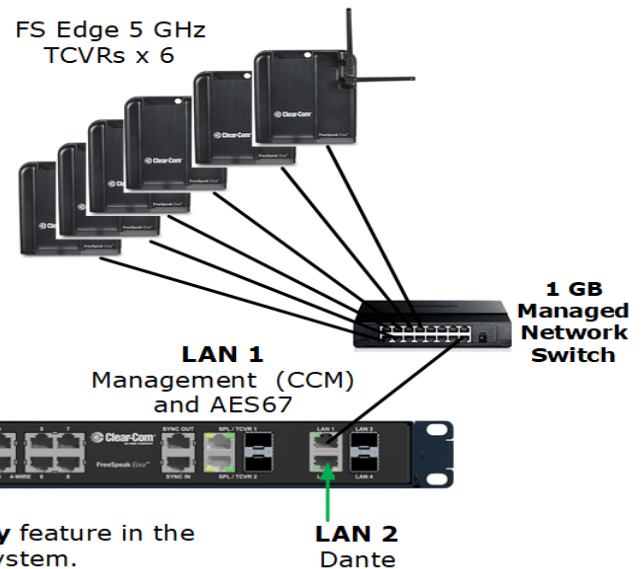

1. You will need to use the **Discovery** feature in the CCM to add IP transceivers to your system.

2. You will need to configure Dante feeds in the Audinate Dante Controller before these can be added to channels in the CCM.

Key
Cat5e/6a Shielded
Ethernet cable
23/24 AWG
(max 100m)

4.3.1 Outline of General Setup and Configuration


- For network setup, see [Network Setup for IP Transceivers on page 49](#).
- To access the CCM, see: [Introduction to the CCM on page 23](#).
- To add IP transceivers to your system, see [Connecting Transceivers on page 42](#).
- For information on the connection process for IP transceivers, see the Quick Start Guides (QSGs) for FS Edge IP transceivers available from the [FreeSpeak Edge Knowledge Center](#).
- For information about connecting to 2-wire systems, see: [Connecting 2-Wire Systems on page 56](#).
- For information about connecting to Dante, see: [Connecting to Dante-Enabled Devices on page 66](#).
- For information about Channels, see [Managing Channels on page 79](#).
- For information about Roles, see [Creating and Editing Roles on page 89](#).

4.4 Split Frequency Setup (5, 2.4 and 1.9 GHz System)

This setup has:

- E1 FS II transceivers (1.9) with 5 beltpacks
- E1 FS II transceivers (2.4) with 4 beltpacks
- FS Edge IP transceivers (5) with 10 beltpacks
- FS II IP transceivers (1.9) with 10 beltpacks.

The E1 Transceivers will automatically connect to the Base Station once powered, but the Edge IP transceivers require additional configuration in the CCM and must be connected to a network that is configured for AES67 traffic.

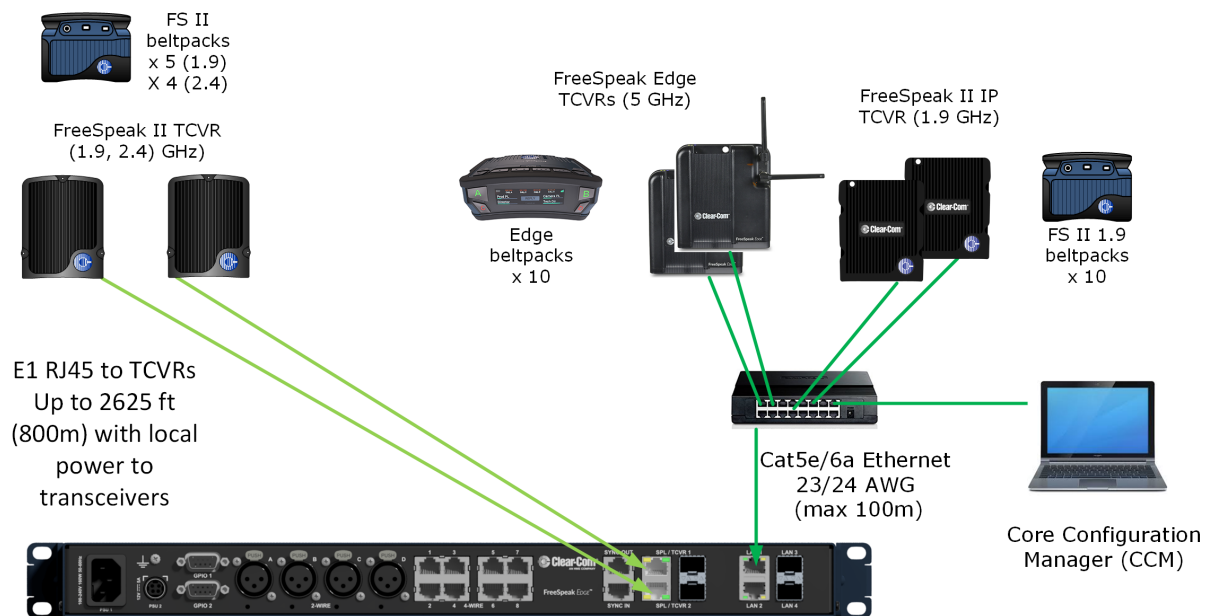

CCM Configuration

2 x Channels: Cameras, Lighting

16 x Roles: Director, Stage Manager, Runners, Maintenance, Lighting, Sound

Note: you can create roles that can be used by FS Edge and/or FS II beltpacks (the role can only be used by 1 beltpack at any given time).

5 Connecting Transceivers

This chapter describes how to connect to E1 and IP transceivers. It contains the following sections:

5.1 Overview of Transceivers	43
5.2 Connecting Transceivers Over E1	43
5.3 Connecting Transceivers Over IP	47

5.1 Overview of Transceivers



5.2 Connecting Transceivers Over E1

E1 is a telecommunications standard whereby data and power are sent over Cat 5/6 or Fiber cable (data only). E1 connections must have dedicated cabling as it is not possible to use network switches with this technology.

FreeSpeak II systems (1.9 and 2.4 GHz) can be connected to the Base Station using E1 connectivity.

Note: *You must place E1 1.9 GHz and IP 1.9 GHz transceivers in the same RF zone.*

Transceivers can be connected directly to the Base Station (up to two transceivers) or connected using FreeSpeak II splitters (up to 2 splitters, each hosting up to 5 transceivers so up to 10 transceivers in total).

Transceivers/splitters are connected to the Base Station using connectors G and H. See [Rear Panel Connectors and Indicators on page 14](#).

Note: *Transceivers and splitters can be connected using Fiber or copper cable. If you use Fiber, the devices MUST have local power and you MUST configure the ports to fiber in the CCM (default = RJ45). Navigate to: **CCM > Host > Wireless > Wireless Transceivers**.*

Example connection with a splitter



Note: The splitter connections are switched between RJ45 and Fiber routing using DIP switches inside the splitter.

For more examples of connection options and how to set the DIP switches, see the FreeSpeak II Splitter Quick Start Guide available from the [FreeSpeak II Knowledge Center](#).

5.2.1 Cable Distances - E1 Connections

Base Station to TCVR/splitter	
TCVR directly connected to and powered by the Base Station	<ul style="list-style-type: none"> • 328 ft (100 m) using shielded 24 AWG Cat 5/6e cable • 164 ft (50 m) using shielded 26 AWG Cat 5/6e cable
TCVR directly connected to the Base Station with local/direct power at TCVR	<ul style="list-style-type: none"> • 2625 ft (800 m) using shielded 24 AWG Cat 5/6e cable • 1312 ft (400 m) using shielded 26 AWG Cat 5/6e cable
Base Station to splitter (splitter is powered)	<ul style="list-style-type: none"> • 2625 ft (800 m) using shielded 24 AWG Cat 5/6e cable • 1312 ft (400 m) using shielded 26 AWG Cat 5/6e cable

Splitter to TCVRs	
TCVRs powered by splitter	<ul style="list-style-type: none"> • 328 ft (100 m) using shielded 24 AWG Cat 5/6e cable • 164 ft (50 m) using shielded 26 AWG Cat 5/6e cable
TCVRs have local/direct power	<ul style="list-style-type: none"> • 2625 ft (800 m) using shielded 24 AWG Cat 5/6e cable • 1312 ft (400 m) using shielded 26 AWG Cat 5/6e cable

Note: *Fiber connections: Connection distances will depend on existing cable infrastructure.*

5.2.2 Using a Transceiver With a Fiber Connection

To connect a Base Station to a splitter (FSII-SPL) using Fiber, you must install Fiber modules to the Base Station and the splitter.

- Modules are available for single mode Fiber cable (HLI-SMFO) and multi-mode Fiber cable (HLI-MMFO).
- Modules must be ordered from Clear-Com as a pair, one for the Base Station and one for the splitter.
- Modules can be hot patched. There is no need to power off devices.
- To install the modules, simply remove the dust cap from the connector port and slide the module into the connector.

Note: *When using a Fiber connection, all devices must have local power supplied.*

5.2.3 E1 Transceiver/Splitter Port Connection Type (RJ45 or Fiber)


Transceivers/splitters can be connected to the Base Station using either RJ45 cable or fiber cable.

The connection type for the ports is determined by a software setting in the Core Configuration Manager (CCM). Default setting is **RJ45**.

The CCM determines the connection type for both connectors; you must chose either RJ45 or Fiber. It is not possible to mix these connection types on the Base Station.

Setting FSII Transceiver/Splitter Connection Type

1. In the CCM, navigate to **Hardware > Hosts > Wireless**.
2. Select **FreeSpeak II > Transceiver Port** type as required.

 **ff08002c** ×

Network Upgrade **Wireless** Security

General

Administration PIN

OTA System ID

BP Role List Sorting

Freespeak Edge

Edge Wireless Region

Excluded Channel(s)

Freespeak II

Transceiver Ports

AA Battery Type

OTA PIN

Set transceiver port connection type

5.2.4 Setting Cable Length Offset (E1)

Cable length offset is used to prevent the DECT or radio signals between transceivers getting out of synchronization. If transceivers are not synchronized, beltpack handover will not happen effectively. This is particularly important if you have overlapping transceiver coverage zones (RF cells) or the beltpacks need to move between coverage zones.

Cable length offset or transceiver sync compensation needs to be set when:


- The difference in total cable length between transceivers is $\geq 1640\text{ft} / 500\text{m}$ (this includes both fiber and copper cable runs).

Example

TCVR #1: total cable length = 328ft / 100m

TCVR #2: total cable length = 2788ft / 850m

The difference in cable length between transceivers = 2460ft / 750m. Therefore, in this case you must set transceiver cable length on both transceivers. This allows any latency to be calculated and offset by the system.

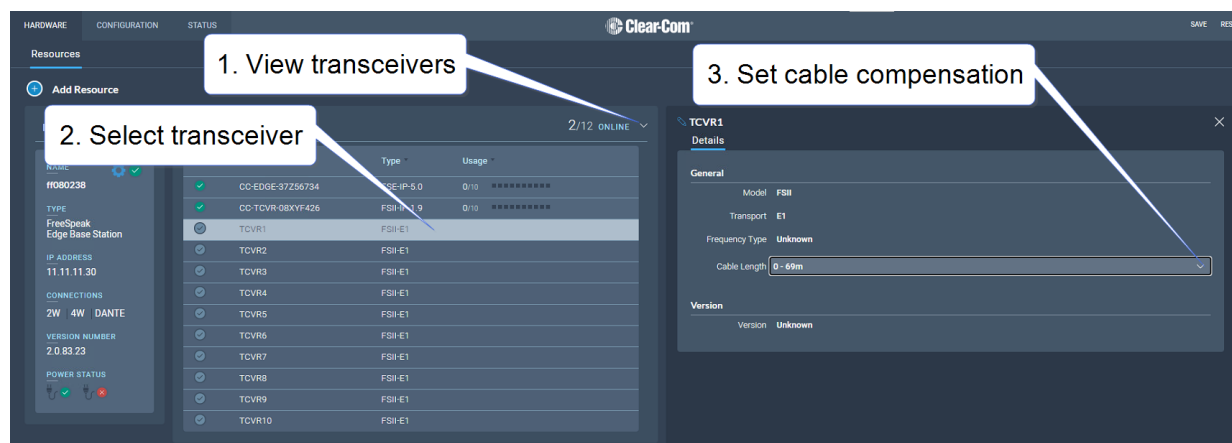

In the configuration tool, navigate to: **Resources > Transceivers > Details > General > Cable Length**

5.3 Connecting Transceivers Over IP

When connecting IP transceivers, connect them to the LAN connector that is configured for AES67 on the rear of the Base Station using Ethernet cable.

See [Network Setup for IP Transceivers on page 49](#).

Once your transceivers are set up on the network you will add them to your system using the CCM or the Front Panel.

See [Adding IP Transceivers \(FS Edge, FS II 1.9\) on page 75](#).

6 Network Setup

This chapter describes how to set up and configure your network for FreeSpeak Edge Base Station IP transceivers. It contains the following sections:

6.1 Network Setup for IP Transceivers	49
6.2 FreeSpeak Edge Base Station LAN Configuration Rules	53


6.1 Network Setup for IP Transceivers

The FreeSpeak Edge Base Station has LAN connections assignable to different network traffic such as Management, AES67, Dante and so on. See [Rear Panel Connectors and Indicators on page 14](#) LAN ports 1 - 4 (I and J).


The LAN ports are fully user configurable but you can work with the following default settings:

- LAN 1: Management
- LAN 2
- LAN 3: Not configured (SFP)
- LAN 4: Not configured (SFP)


6.1.1 Connection to IP Transceivers, Example 1

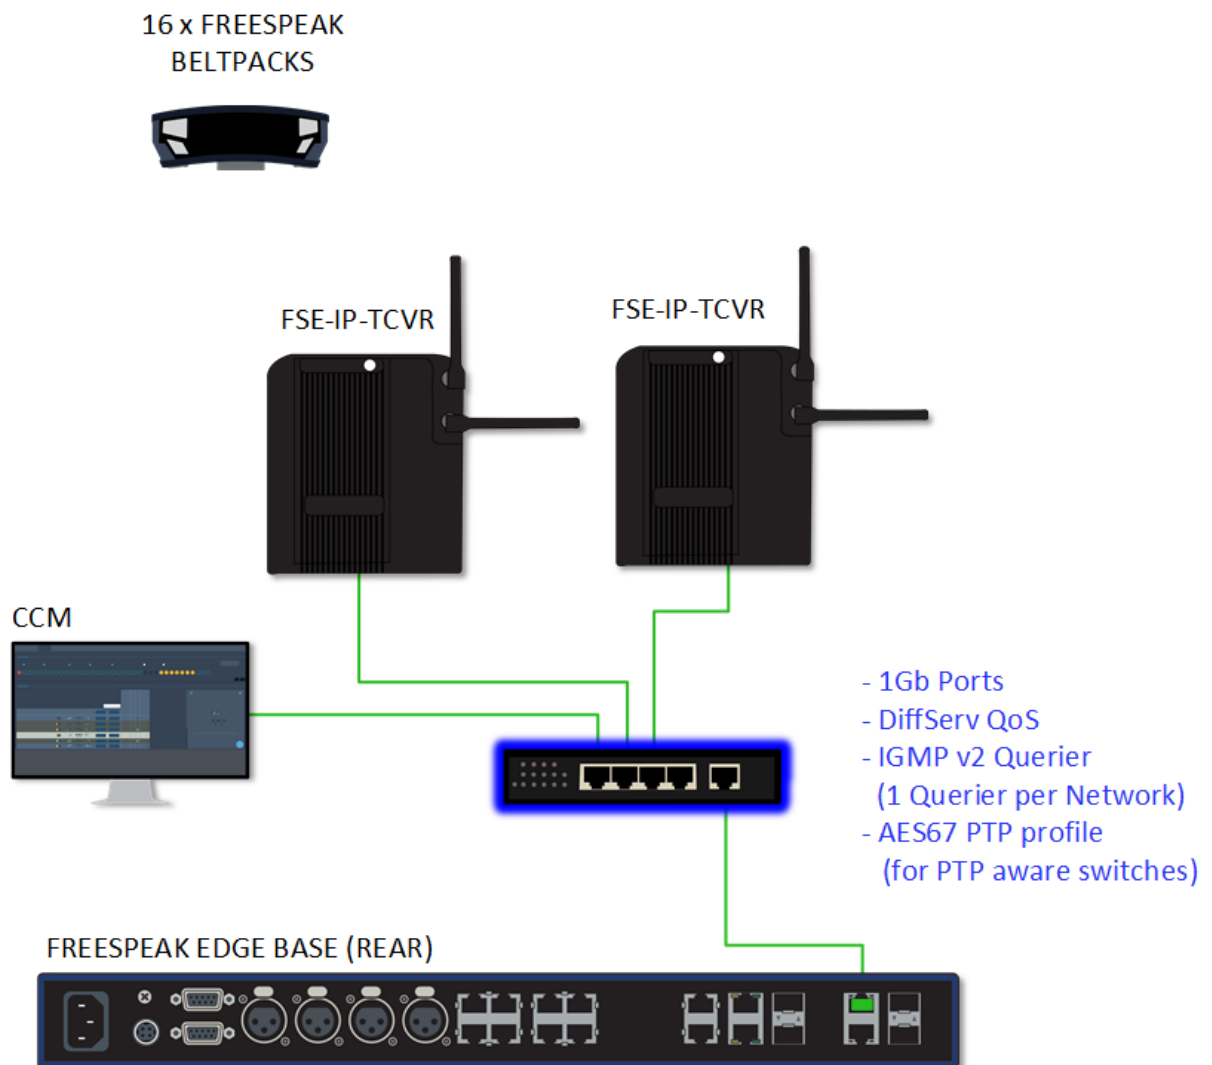

6.1.2 Connection to IP Transceivers and Dante, Example 2

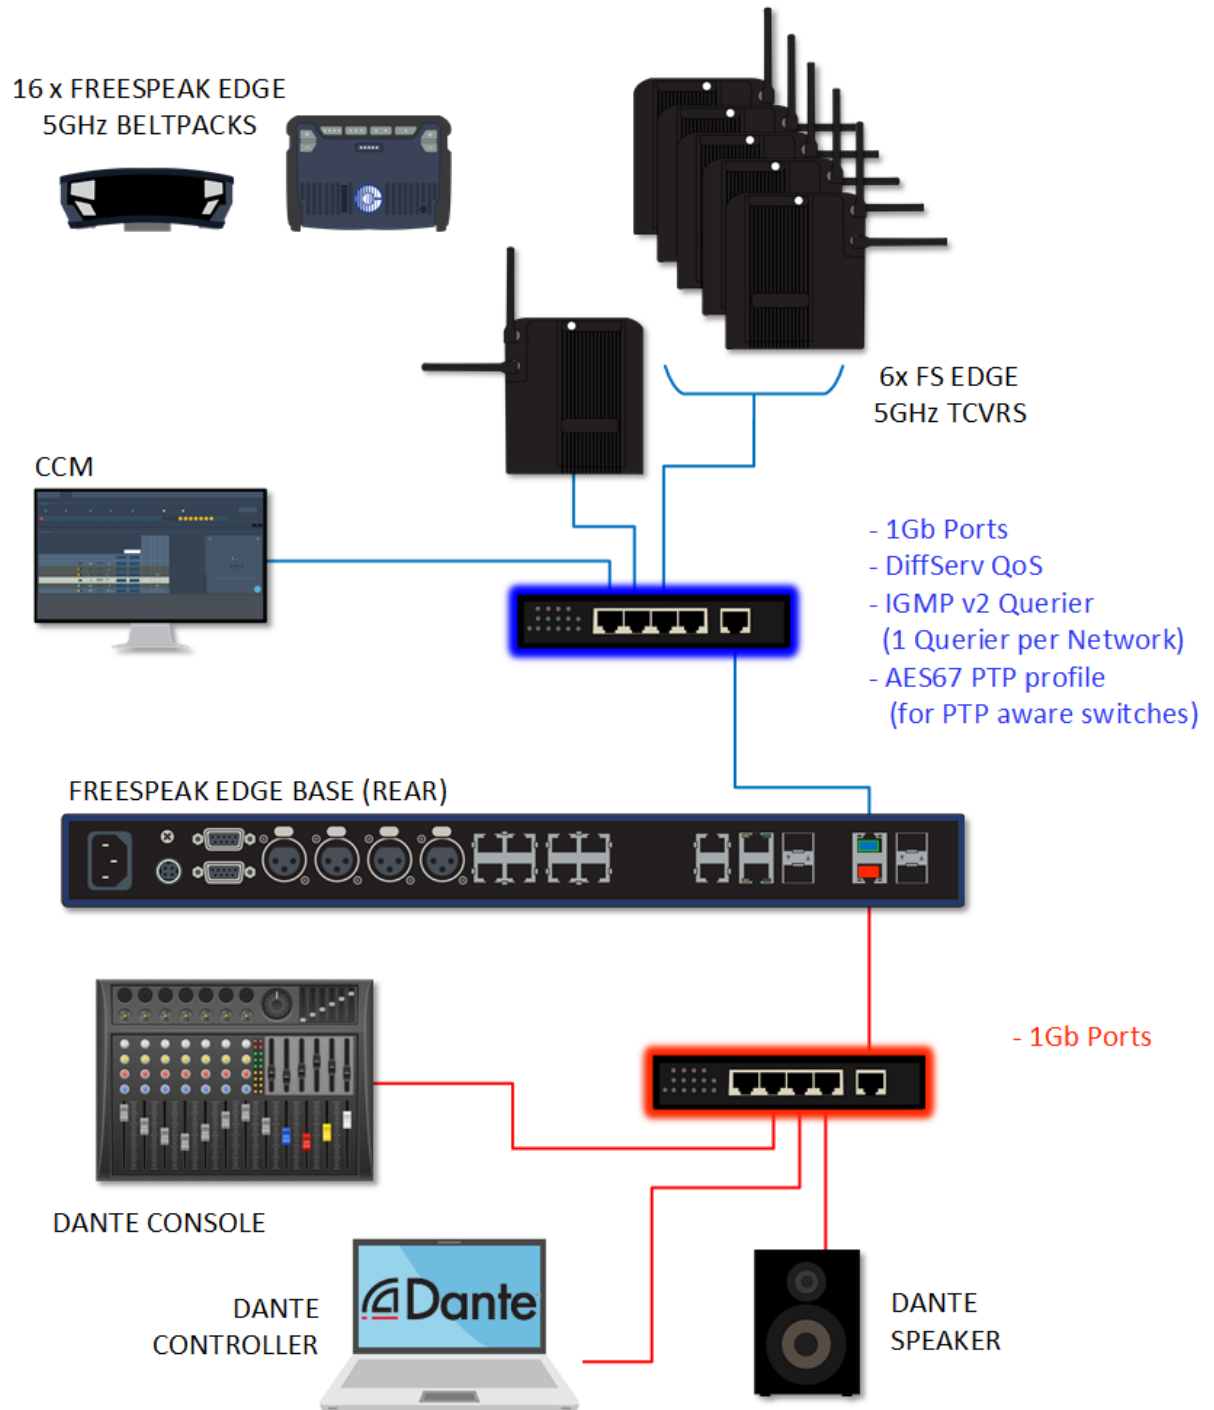


6.1.3 Connection to IP Transceivers and Dante, Example 3

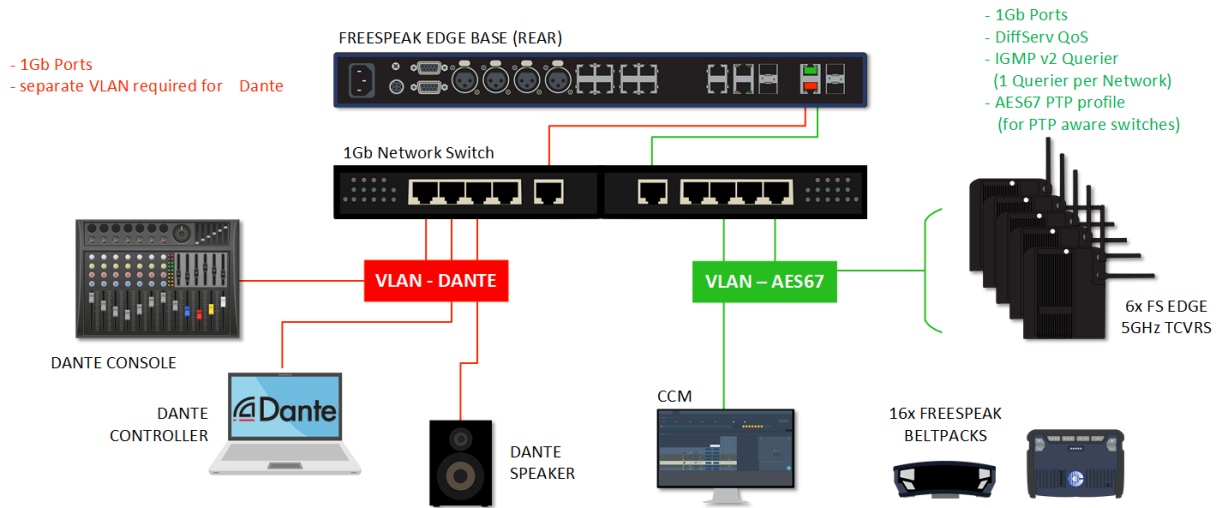

6.1.4 Connection to IP Transceivers, Example 4

If you are connecting to a network set up where there is lots of traffic, either management or AES67, Clear-Com recommends that you split AES67 traffic into its own segment.

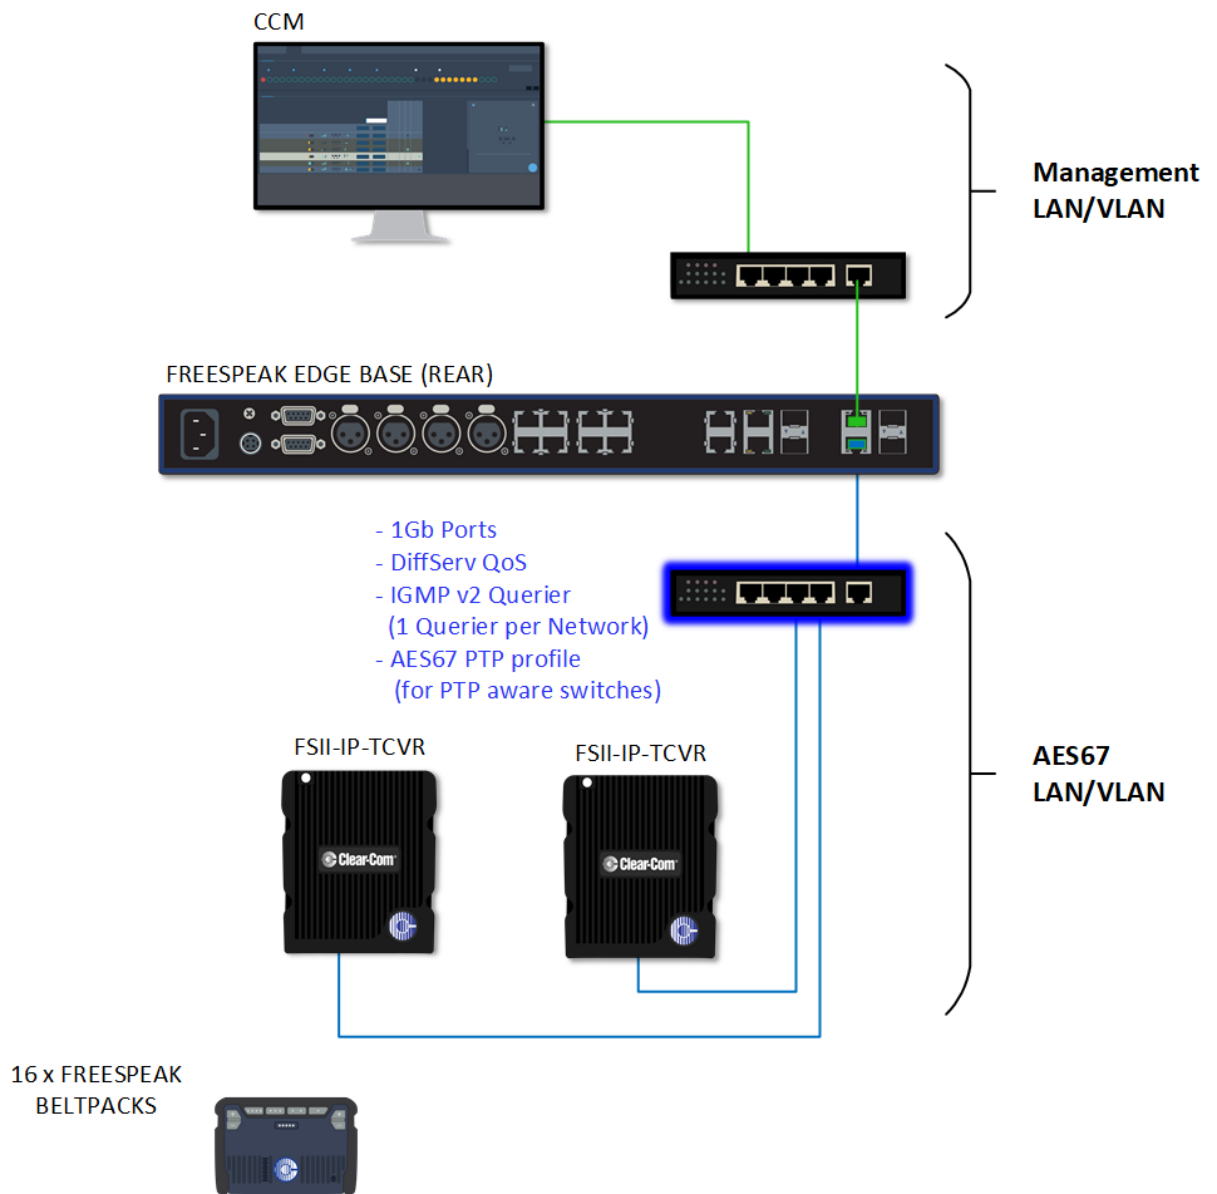

6.1.5 Setup Rules

- The default setup, Management on LAN 1 and AES67 on LAN 2, allows your computer to be connected directly to the Base Station for configuration and a dedicated switch to LAN 2 for FreeSpeak IP transceivers. This is in order to accommodate the IP transceivers' need for high clocking accuracy. Too much traffic on your network will degrade the performance of your IP transceivers.
- For the AoIP network, try to keep the number of layer 2 hops between PTP leader and follower as low as possible (no more than 3). If more are required, consider using a Boundary Clock or a Transparent Clock.
- For more information on achieving a well-regulated PTP network and recommendations for suitable switches, see *Clear-Com AoIP Network Recommendations* available from the [FreeSpeak II Knowledge Center](#).
- Use DHCP (the default setting) for fast and easy setup of the devices. If the device does not encounter a DHCP server on the network it will automatically allocate an address in the link-local range (169.254.xx.xx).
- IP addresses can be configured statically under **Hardware > Resources > Network** in the CCM.
- For information on the 5 GHz transceiver (status and connection indicators) see the *Edge Transceiver Quick Start Guide* available from the [FreeSpeak Edge Knowledge Center](#).
- Connection status indicators on the FreeSpeak II IP transceiver are the same as the Edge transceiver (no channel scan).
- For PoE to the transceivers you will need a PoE enabled network switch.

6.2 FreeSpeak Edge Base Station LAN Configuration Rules

Note: *Do not plug any two LAN ports into the same LAN or VLAN. This can create a network loop affecting IP stability.*

Note: *Configuring/changing the AES67 IP address will cause the Base Station to reboot.*

AES67 Rules

- AES67 should not be on the same subnet as Management unless on the same LAN port
- AES67 cannot be on the same LAN port as DANTE primary or secondary

Clear-Com recommends that you configure AES67 port on the Station to a Static IP address if there is no third-party DHCP server on the network.

IP Rules

- The IP addresses cannot be in the reserved range: 10.0.0.0-10.0.0.7
- The IP addresses cannot be in the LQ tunnel range 172.23.xxx.xxx
- The IP addresses cannot be in the localhost range 127.xxx.xxx.xxx
- The IP addresses cannot be in the multicast range 224.xxx.xxx.xxx-239.xxx.xxx.xxx

Static IP Rules

- The static IP addresses cannot be in link local range: 169.254.xxx.xxx

Dante Rules

- Dante primary and secondary cannot be on the same LAN port (rear connector)

Clear-Com recommends that you configure AES67 port on the Station to a Static IP address if there is no third-party DHCP server on the network.

Management Rules

- You cannot disable the Management LAN.

7

Connecting to other systems


This chapter describes how to connect your FreeSpeak Edge Base Station with other intercom systems. It contains the following sections:

7.1 Connecting 2-Wire Systems	56
7.2 Connecting 4-Wire Systems	61
7.3 Connecting to Dante-Enabled Devices	66

7.1 Connecting 2-Wire Systems



- Power: Enabled/**disabled**
- Mode: **Clear-Com**/RTS
- Termination: Enabled/**disabled**
- Nulling: Start Nulling

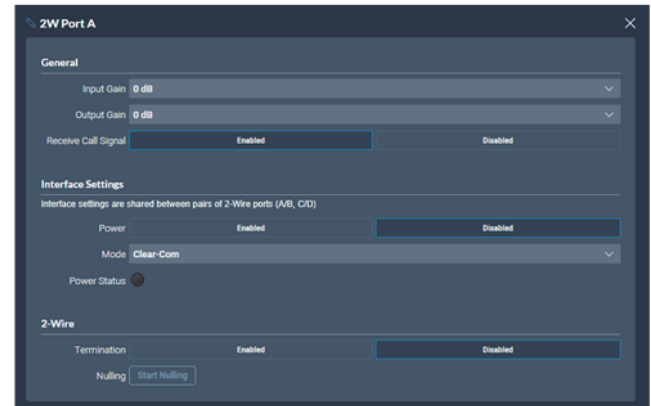

When connecting 2-wire equipment the following applies:

- Every time equipment is changed on a 2-wire interface (port) you should perform nulling. You must null every time you add wired resources to your system.
 - No one should listen during the nulling process.
 - It is good practice to press the remote mic kill (RMK) button on all channels before nulling.
- Encore beltpacks can be powered by the Base Station via the partyline. Quantity of beltpacks and length of cable are variables, dependent on the type of devices and existing cabling. To calculate what will work best in your circumstances, see the [Encore Partyline Power Calculator](#), available from the Clear-Com website.
- Enable/disable the partyline power. Default setting: **Disabled**.

These functions can be set either in the 2-wire port settings page of the Core Configuration Manager (CCM) or from the front panel screens on the Base Station.

- Enable/disable Line termination. The line should only be terminated once on interconnected devices, do not terminate on more than one piece of equipment. Default setting: **Disabled**.

Line termination is set in the CCM (not the front panel menu system). To do this, in the CCM navigate to: **Hardware > Resources > Physical Ports**. See below.

To configure 2-wire port settings in the CCM navigate to: **Hardware > Resources > Physical Ports > (select port) :**

2W Port A

General

Input Gain 0 dB 

Output Gain 0 dB 

Receive Call Signal ☒ Enabled ☐ Disabled

Interface Settings

Interface settings are shared between pairs of 2-Wire ports (A/B, C/D)

Power ☐ Enabled ☒ Disabled

Mode Clear-Com 

Power Status 

2-Wire

Termination ☐ Enabled ☒ Disabled

Nulling

7.1.1 Using Stations to Interconnect Equipment

When connecting Clear-Com Stations to other Clear-Com equipment and third-party systems (2-wire) use the following guidelines.

Device Type	Supports call signalling?
HelixNet HLI-2W2*	Yes
Encore MS-702/4	Yes
Encore RS Beltpack RS-701 / 702 / 703	Yes
RTS 2-wire equipment	Yes, but does not pass call signalling to 4-wire audio routes.
FreeSpeak/FreeSpeak II Base II*	Yes**
2-way radio	Yes, via a TW-47 interface

*Where there is a choice between a 2-wire and a 4-wire connection, 4-wire provides the best audio quality and is preferred.

** On a FreeSpeak II Base Station only ports 3 and 4 support call signalling.


7.2 Connecting 4-Wire Systems

When connecting to 4-wire equipment the following applies:

- To minimize noise and meet regulatory requirements, use screened (shielded) cable when connecting 4-wire ports.
- Pinout configuration (Port Function) can be set on all the Base Station 4-wire interfaces. This is a software switch that switches the configuration of the pins on the RJ45 connectors according to the device you are connecting to. Default setting: **4-wire-X**.


7.2.1 Example Connections

Edge Base Station connected to an Eclipse Matrix

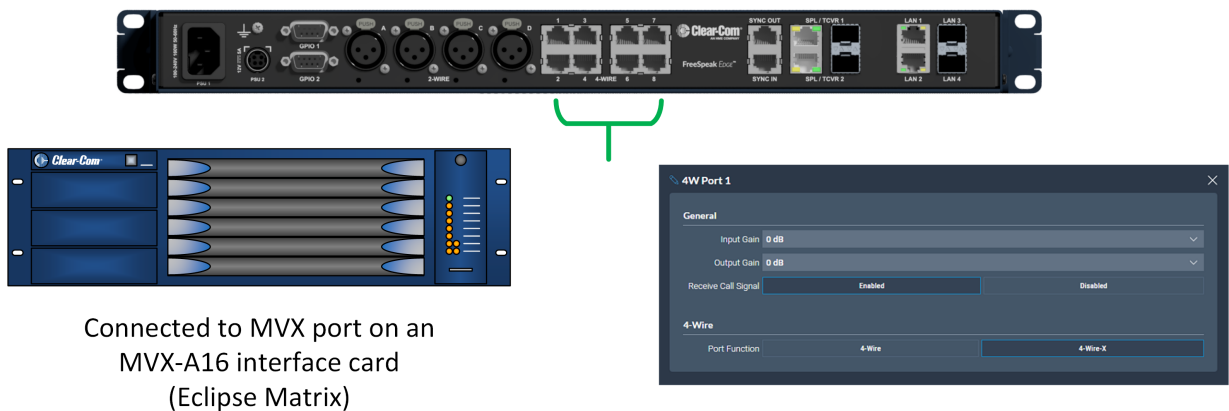

- Call signal: **Enabled**
- Port Function type set to : **4-wire-X**

Edge Base Station connected via Cat5 to a HelixNet Base Station

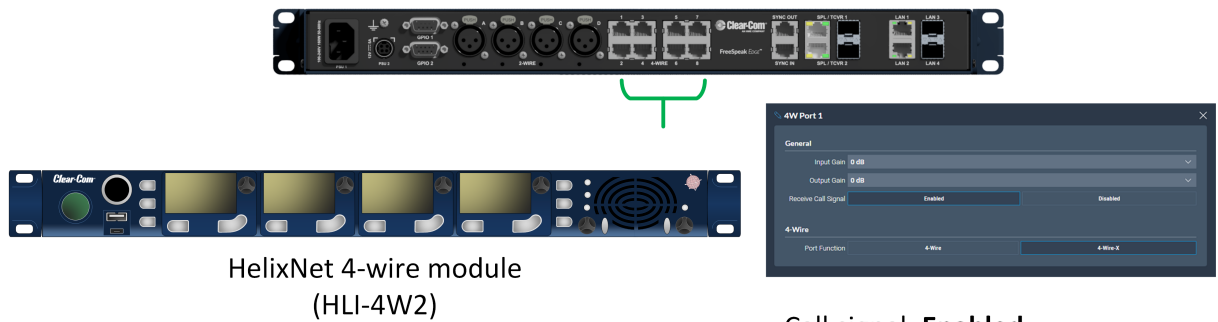

- Call signal: **Enabled**
- Port Function type is set to: **4-wire**

7.2.2 Port Function

Check this function whenever you are connecting 4-wire devices (not GPIO DB-9M connectors) to your Base Station. Default = **4-wire-X**.

About Port Function


Clear-Com products are designed so central audio routing devices (base stations and matrices) can connect directly to other Base Stations using a straight-through CAT 5/6 cable. The pin assignments (inputs and outputs) on these devices are complementary. Previously, a crossover cable was necessary when connecting bases to other bases (RJ45 connector). It is no longer necessary to use a crossover cable as there is now a **Port Function** toggle which changes pinouts as required. To set this function navigate in the CCM to **Hardware > Resources > Physical Ports** and select the required 4-wire port.

Port Function Pinouts

Pin No	4-wire	4-wire-X (default)
1	Data in +	Data out +
2	Data in -	Data out -
3	Audio in +	Audio out +
4	Audio out +	Audio in +
5	Audio out -	Audio in -
6	Audio in -	Audio out -
7	Data out +	Data in +
8	Data out -	Data in -

Setting Port Function (Pin Polarity) on a 4-Wire Connection

1. Connect the devices using 1:1 Cat5/6/6e cable.
2. In the CCM, navigate to **Hardware > Resources > Physical Ports**.
3. Select the 4-wire port.
4. Select **Port Function**.

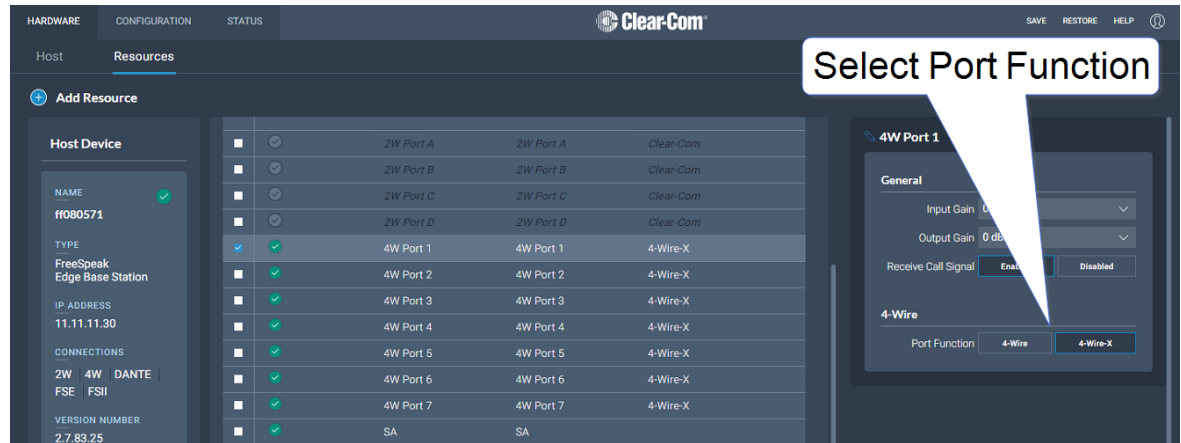

7.2.3 Using Stations to Interconnect Equipment

When connecting Clear-Com Stations to other Clear-Com equipment and other third-party systems (4-wire) use the following guidelines:

Device Type	Port Function	Supports call signalling?
HelixNet HLI-4W2	4-wire	Yes
MVX-A16 (Eclipse Matrix)	4-wire-X	Yes (Identified as a CCI-22 in the software)
Other matrices (third party)	Depends on third-party pinout	No
HME DX210/DX410	4-wire	Yes
FreeSpeak/FreeSpeak II Base II	4-wire	Yes**
FreeSpeak Edge Base	When connecting two Stations with a straight cable, the Port Function settings must be as follows: Station 1: 4-wire Station 2: 4-wire-X	Yes

Device Type	Port Function	Supports call signalling?
2-way radio : 4-wire device with relay activation *	Depends on third-party pinout	Yes (call signal can fire relay)

* Connect to a DB9 on the Station rear.

** On a FreeSpeak II Base Station only ports 3 and 4 support call signalling.

7.3 Connecting to Dante-Enabled Devices

To configure Dante connections you must be familiar with the Audinate Dante Controller, available from the Audinate website.

Before configuring the connection in the Dante Controller, you must determine which of the 4 RJ45 LAN connectors on the Base Station you wish to use for Dante network traffic. See [Rear Panel Connectors and Indicators on page 14](#)

Note: *The PC running the Audinate Dante Controller must also be connected to the Dante network.*

Note: *The Dante connection on the Station supports both Dante and Dante provided AES67 for audio interfacing.*

Determining which LAN connector you wish to use for Dante must be done in the CCM.

Navigate to **Hardware > Host**. Under the **Network** tab, select the port for Dante. This port will default to a DHCP setting. If you wish to configure a static IP address you must do this in the Dante controller.


The screenshot displays the Clear-Com CCM interface for configuring a Host Device. On the left, the 'Host Device' panel shows details for device 'ff080571', including its IP address (11.11.11.30) and connection status for various ports (2W, 4W, DANTE, FSE, FSII). The main area is the 'Network' configuration page for the selected device. It lists four LAN ports: LAN 1 (Management), LAN 2 (AES67), LAN 3 (Dante), and LAN 4. A callout box labeled 'Select Dante' points to the 'Dante' option under LAN 3. Below the LAN list, the 'Dante' configuration section shows 'Redundancy Mode' set to 'Primary' and 'Secondary'. A note indicates that network configuration and Dante cross-points must be configured using external Audinate Dante controller software. At the bottom, there are 'Cancel' and 'Apply' buttons. A second callout box labeled 'Apply' points to the 'Apply' button.

Note: LAN 3 and 4 are for use with an SFP module (either fiber or RJ45).

LAN connectors can be configured in any way you wish, but the CCM enforces that you **MUST NOT** configure IP transceivers (AES67) and Dante traffic on the same network. This is because AES67 network traffic has higher timing requirements than Dante network traffic, due to the need for IP transceivers to achieve DECT synchronization.

When configuring Dante connections, the Dante subsystem IP configuration is determined by the Dante Controller.

1. In the CCM, navigate to **Hardware > Resources > Host > Network** and configure Dante on the LAN connector you wish to use for Dante connections.
2. Connect a cable (Cat5/6e or fiber) to the LAN connector that is designated for Dante. Connect the other end to a switch on your Dante network.
3. Open the Dante Controller and check that the network interface details are correct.

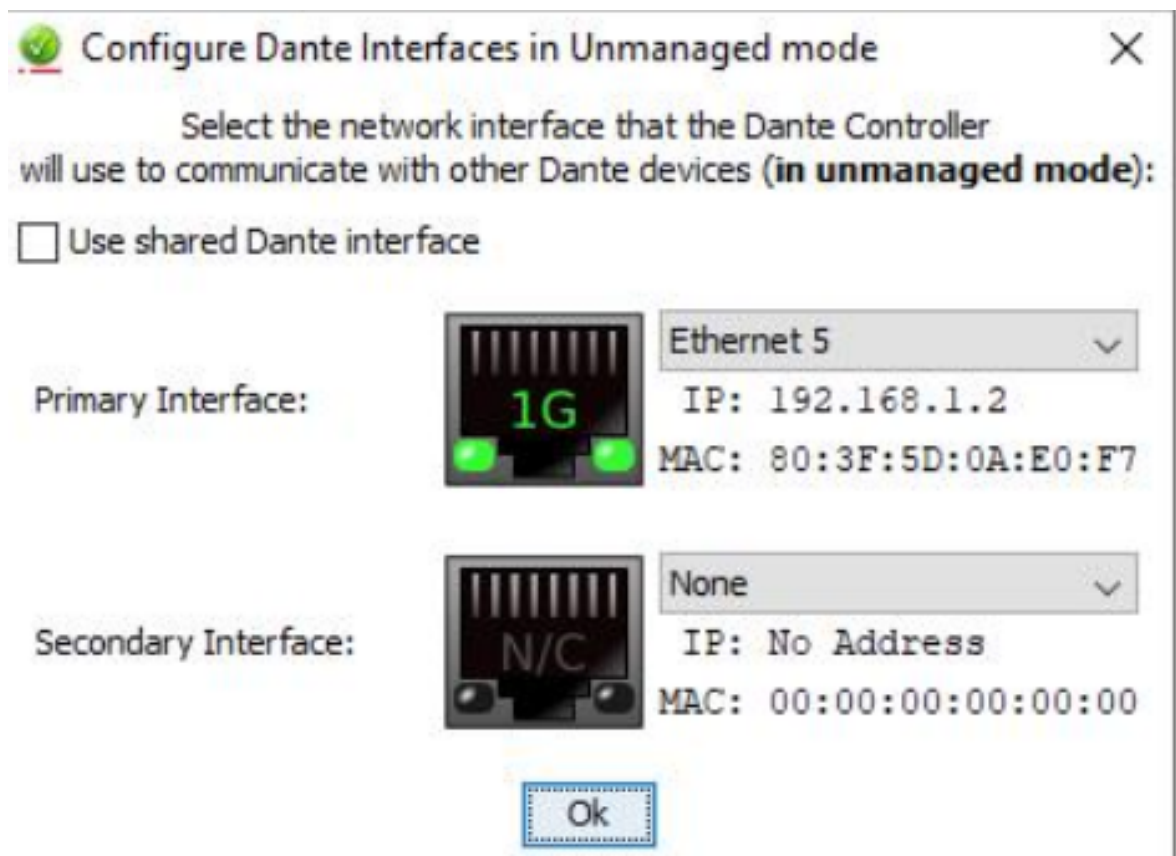

4. Check network and connection details under the **Status** tab in the CCM.

Network (Dante Primary)		Device Name LekanA	
IP Address	192.168.1.94	Hardware Name	CCEdge-1ac634
Subnet Mask	255.255.0.0	Channels	8
Port	LAN3	Sample Rate	48000 Hz
Link Speed	1000 Mbps	PTP	
Link Status	Up	Status	LOCKED
MAC	00:1d:c1:1a:c6:34	Role	Master
		Master ID	00-0e-98-ff-fe-08-02-6e (Priority 127)
		Local ID	00-0e-98-ff-fe-08-02-6e (Priority 127)
Network (Dante Secondary)			
IP Address	172.31.147.22		
Subnet Mask	255.255.0.0		
Port	LAN1		
Link Speed	1000 Mbps		
Link Status	Up		
MAC	00:1d:c1:1a:c6:35		

5. Details can also be viewed in the Dante Controller.

Dante Controller - Network View

File Device View Help

Grand Master Clock: LekanA

Device Name	Model Name	Product Version	Dante Version	Device Lock	Primary Address	Primary Link Speed	Secondary Address	Secondary Link Speed
LekanA	Clear-Com Edge	1.0.0	4.2.0.28	<input type="checkbox"/>	192.168.1.94	1Gbps	172.31.147.22	1Gbps

Routing Device Info Clock Status Network Status Events

Clear All

☐ Device Lock
☐ Sample Rate
☐ Sync to External
☐ Latency
☐ Subscriptions
☐ Tx Multicast Flows
☐ AES67
☐ Sample Rate Pull-up

- Route the channels as required in the Dante Controller.
- You will see available Dante ports in the **Configuration** page of the CCM. These ports can be assigned to channels on the Base Station in the usual way.
- Select the required channel click the **+** icon next to the port.

The screenshot displays the Clear-Com configuration interface. The top navigation bar includes tabs for HARDWARE, CONFIGURATION, and STATUS, along with buttons for SAVE, RESTORE, and HELP. The CONFIGURATION tab is active, and the Channels sub-tab is selected.

Channels Section: A table lists two channels. Channel 1 is selected.

Status	Id	Name	Online	Talkers
✓	1	Channel 1	2/2	1
✓	2	Channel 2	1/1	0

Channel 1 Detail: A diagram shows Dante P 1 connected to the Edge Base.

Ports Section: A table lists 20 ports. The first 8 are 2W-Ports (A-D), followed by 8 4W-Ports (1-8), and finally 7 Dante Ports (P 1-P 7). The Dante P 1 entry is highlighted by a callout bubble.

	2W-Port A	2W-Port B	2W-Port C	2W-Port D	None
✓	2W-Port A	2W-Port B	2W-Port C	2W-Port D	None
✓	2W-Port B	2W-Port C	2W-Port D	None	None
✓	2W-Port C	2W-Port D	None	None	None
✓	2W-Port D	None	None	None	None
4W					
✓	4W-Port1	4W-Port 1	None	None	None
✓	4W-Port2	4W-Port 2	None	None	None
✓	4W-Port3	4W-Port 3	None	None	None
✓	4W-Port4	4W-Port 4	None	None	None
✓	4W-Port5	4W-Port 5	None	None	None
✓	4W-Port6	4W-Port 6	None	None	None
✓	4W-Port7	4W-Port 7	None	None	None
✓	4W-Port8	4W-Port 8	None	None	None
Dante					
✓	Dante P 1	Dante-Port 1	Channel 1		
✓	Dante P 2	Dante-Port 2	None		
✓	Dante P 3	Dante-Port 3	None		
✓	Dante P 4	Dante-Port 4	None		
✓	Dante P 5	Dante-Port 5	None		
✓	Dante P 6	Dante-Port 6	None		
✓	Dante P 7	Dante-Port 7	None		

Callout: Click here

8


Configuring from the CCM

This chapter describes how to use the CCM to set up, configure and monitor your intercom system. It contains the following sections:

8.1 Configuring Station Settings	71
8.2 Adding IP Transceivers (FS Edge, FS II 1.9)	75
8.3 Registering Beltpacks	76
8.4 Channels and Groups	78
8.5 Managing Channels	79
8.6 Managing Groups	83
8.7 Creating and Editing Roles	89
8.8 Setting up GPIOs and Logic Events	95
8.9 Monitoring System Status	98

8.1 Configuring Station Settings

To configure the Base Station, navigate to **Hardware>Hosts**.

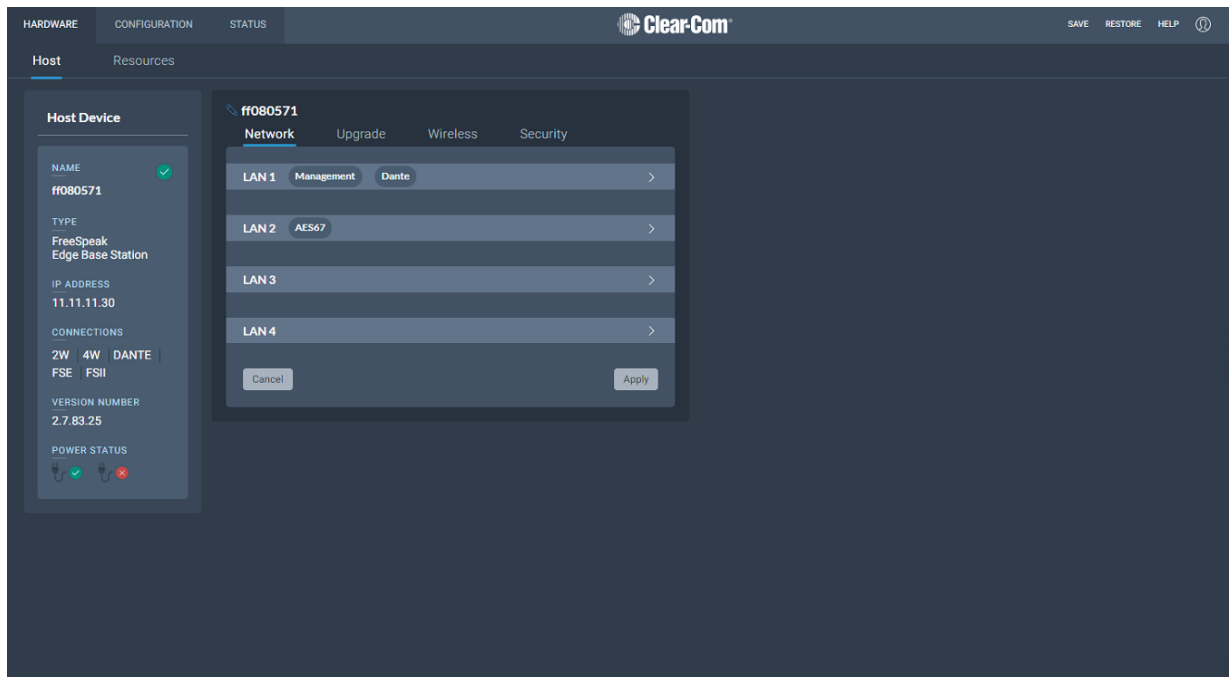

Here you can:

- Configure the network
- Upgrade the Base Station and connected resources
- Change the following wireless beltpack system settings:
 - Beltpack administration pin numbers
 - FS Edge wireless region (important for system compliance)
 - FSII battery type, if you are not using the supplied Li-ion batteries you may use Alkaline or NiMH type batteries
- Configure security settings

Click the pencil icon  to name your Base Station .

8.1.1 Configuring the Network

After changing the network configuration, you must click **Apply** or [Enter] key.

For information see: [FreeSpeak Edge Base Station LAN Configuration Rules on page 53](#).

The screenshot shows the 'Network' configuration window for device 'ff080238'. The 'Network' tab is selected, and the 'LAN 1' configuration is active. The 'Management' traffic type is selected. The 'Mode' is set to 'Dynamic'. The IP Address is '11.11.11.30' and the Subnet Mask is '255.255.0.0'. The Gateway, Primary DNS, and Secondary DNS fields are empty. The 'LAN 2' configuration is set to 'AES67'. The 'LAN 3' and 'LAN 4' configurations are also visible. The 'Apply' button is at the bottom right.


Callouts in the image:

- Network tab
- Click dropdown
- Select traffic type
- Select either static or dynamic (default)

8.1.2 Upgrading

To upgrade the Base Station and connected resources:


1. Select the **Upgrade** tab.
2. **Select File** then navigate to where the upgrade file is stored on your computer.
3. Select the file and when the **Upgrade** button lights, click it. This begins the upgrade process.

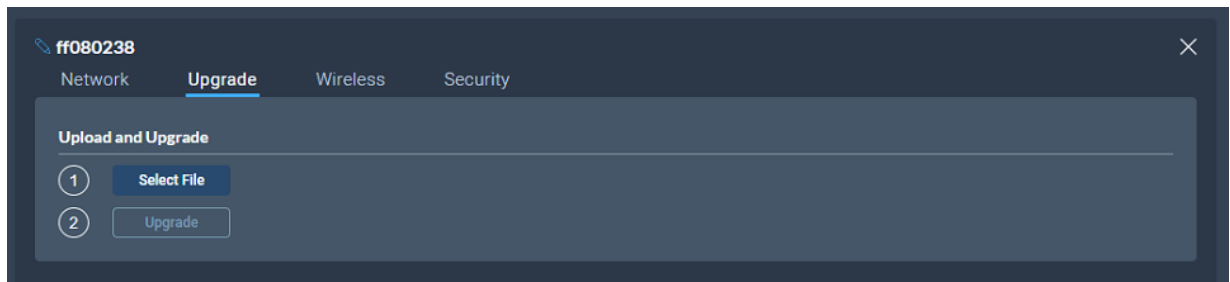

Device to upgrade	File extension
Base Station, FS II IP TCVR, FS Edge IP TCVR	.ccf
FS II beltpack, FS II E1 TCVR	.fww
FS Edge beltpack	.ccu

8.1.3 Setting Up the Wireless Beltpack System

Select the **Wireless** tab.

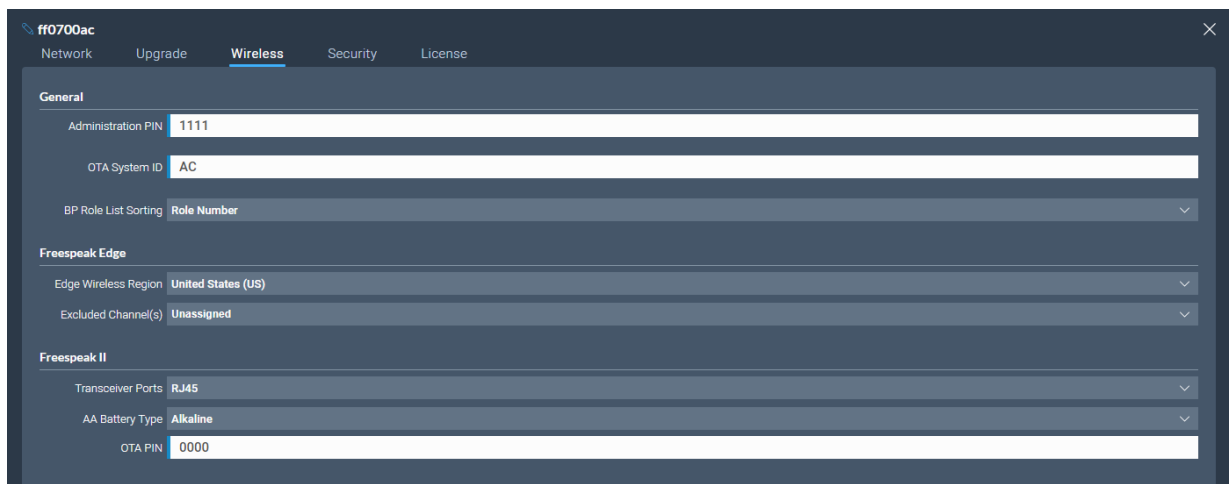


From the Wireless tab, you can set or view the following System and Station settings.

System

- The administration pin for your wireless system, used by the beltpack to be able to access privileged functionality
- System ID. This is used to differentiate this system's RF signals from those of other systems
- Beltpack role list sorting:
 - Role number
 - Alphabetical

FreeSpeak Edge

- The wireless region for your FreeSpeak Edge beltpacks. The region set here **MUST** match the hard-coded setting on your Edge transceiver or the system will not work. You will see an error flag in the **Status** page if the regions do not match. Please contact your Clear-Com representative if you have any difficulties with this.
- Select from a list of 5 GHz channels that you can exclude and prevent transceivers from using.

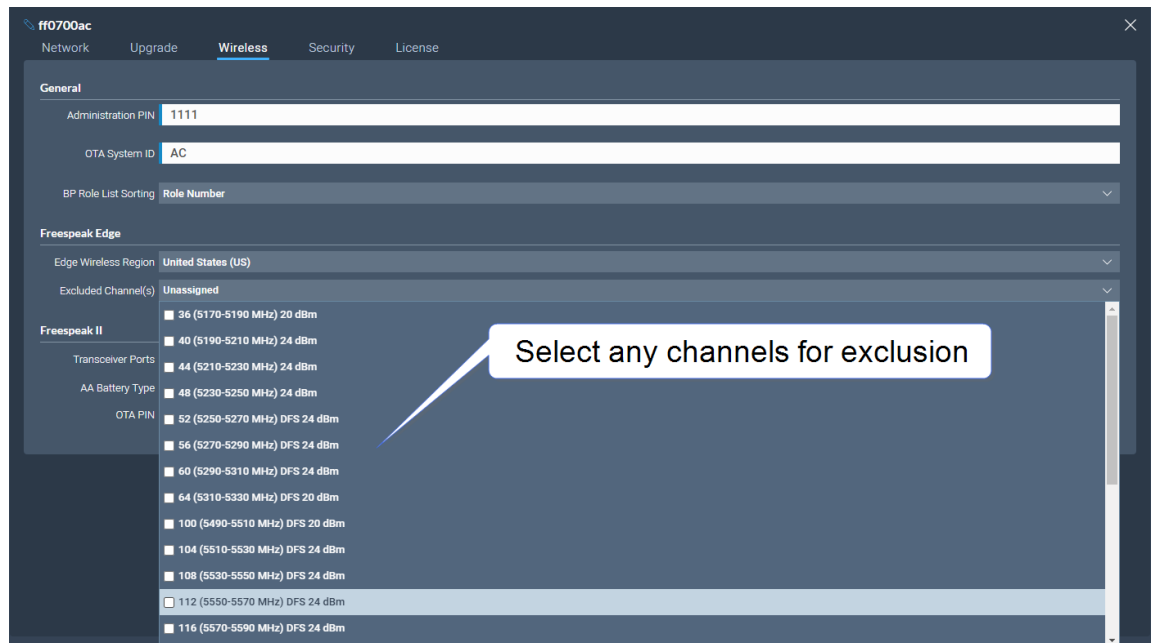

FreeSpeak II


- AA Battery type. You can choose not to use the Li-ion batteries supplied with the belt packs, in which case you must specify battery type here. Choose between:
 - Alkaline (AA) batteries (default setting)
 - NiMH batteries for use in settings where air pressure is an issue (for instance on an underwater site).
- The OTA pin you need for over-the-air (OTA) registration of your FreeSpeak II belt packs.

8.2 Adding IP Transceivers (FS Edge, FS II 1.9)


Note: To add E1 transceivers, see [Connecting Transceivers Over E1 on page 43](#).

To add IP transceivers:


1. Navigate to **Hardware > Resources** and select **Add Resource**. The following screen appears.

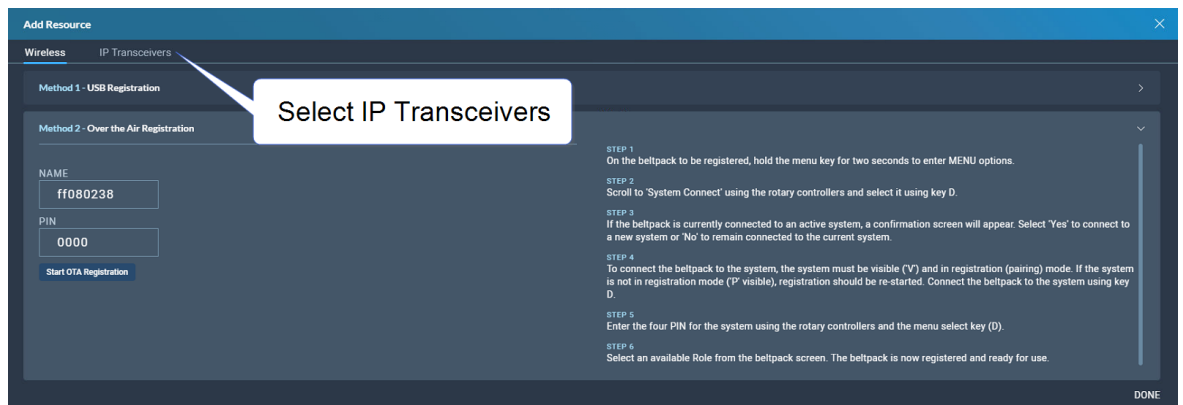

2. Select **IP Transceivers**. The following screen appears:

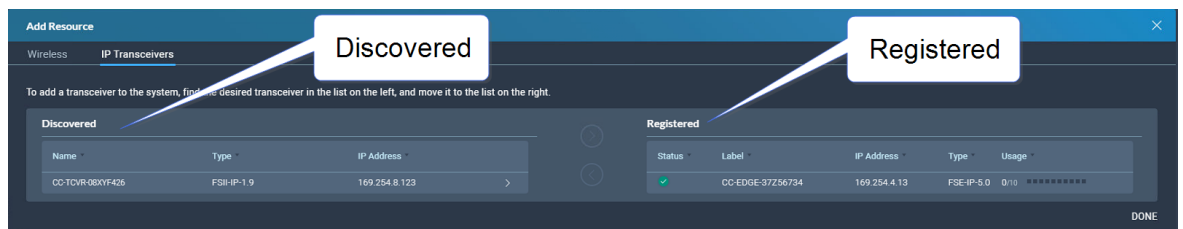

3. Select the transceiver that you want to register from the left-hand area of the screen, and click the right-hand arrow.

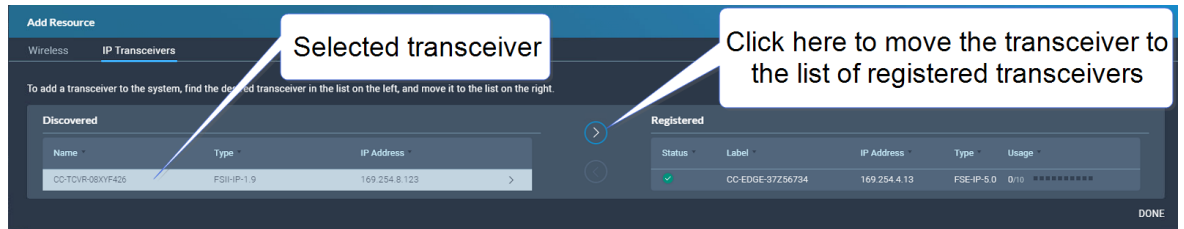

The selected transceiver appears in the right-hand list of registered transceivers.

8.3 Registering Beltpacks

Before you can use a beltpack, you must register it. This enables the FreeSpeak Edge Base Station to associate the beltpack with roles and assigned keys.

You can register a beltpack in two ways:

- By USB cable. When registering a beltpack in this way, a role that assigns keys to the beltpack is automatically created and fixed to the beltpack. The role can be edited as required in the **Configuration > Roles** page of the CCM.
- Over The Air (OTA). When you register a beltpack in this way you must create a role for it manually in **Configuration > Roles** before the beltpack can connect.

8.3.1 Registering a beltpack by USB cable

This method of registering beltpacks is recommended for fast and easy set up.


To register a beltpack using a USB cable, connect a beltpack to Base Station using a USB A to micro USB B (FSII) / USB C (FSE) cable. The beltpack can be powered on either before or after connection. The Base Station will show 'Beltpack [ID] is now registered' in the front menu screens.

Note: *When beltpacks are registered in this way, a role with two channels (1 and 2) is automatically generated and applied to the beltpack. Roles can be edited at any time in the **Configuration** page of the CCM.*

8.3.2 Registering a beltpack OTA

To register a beltpack using OTA:

1. Navigate to **Hardware > Resources** and click **Add Resource**. The following screen appears:

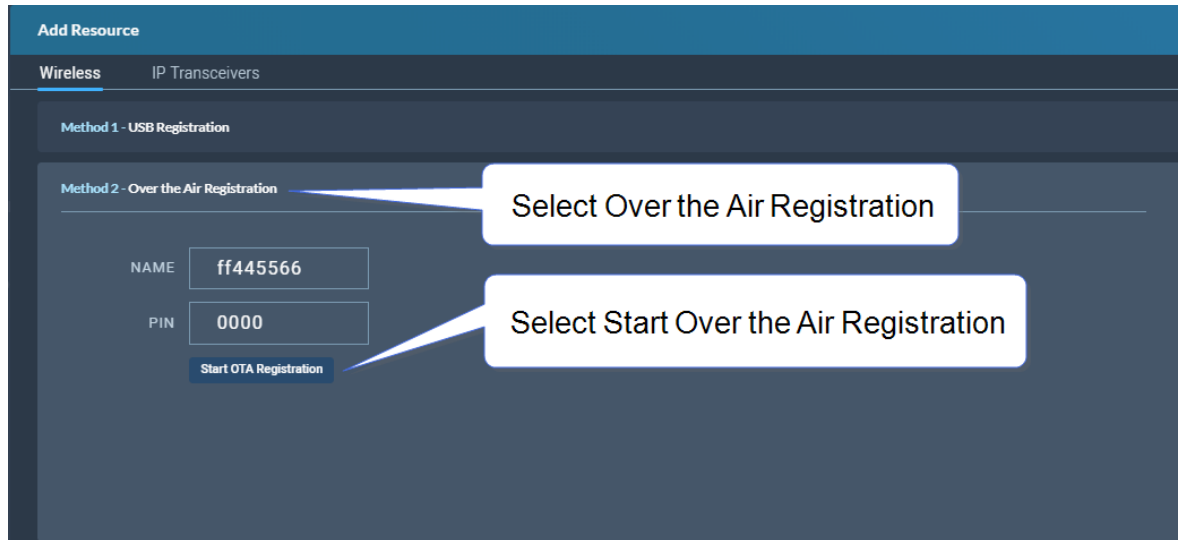


2. Click **Start OTA Registration**.

Note:

A timer is started indicating how long the system is open for registration. You can close OTA registration on the system at any point.

8.3.3 Unregistering a beltpack

To unregister a beltpack, navigate to **Hardware > Resources > Endpoints** (click the down arrow to see all connected Endpoints). Select an Endpoint by clicking on it. Select **Unregister**.

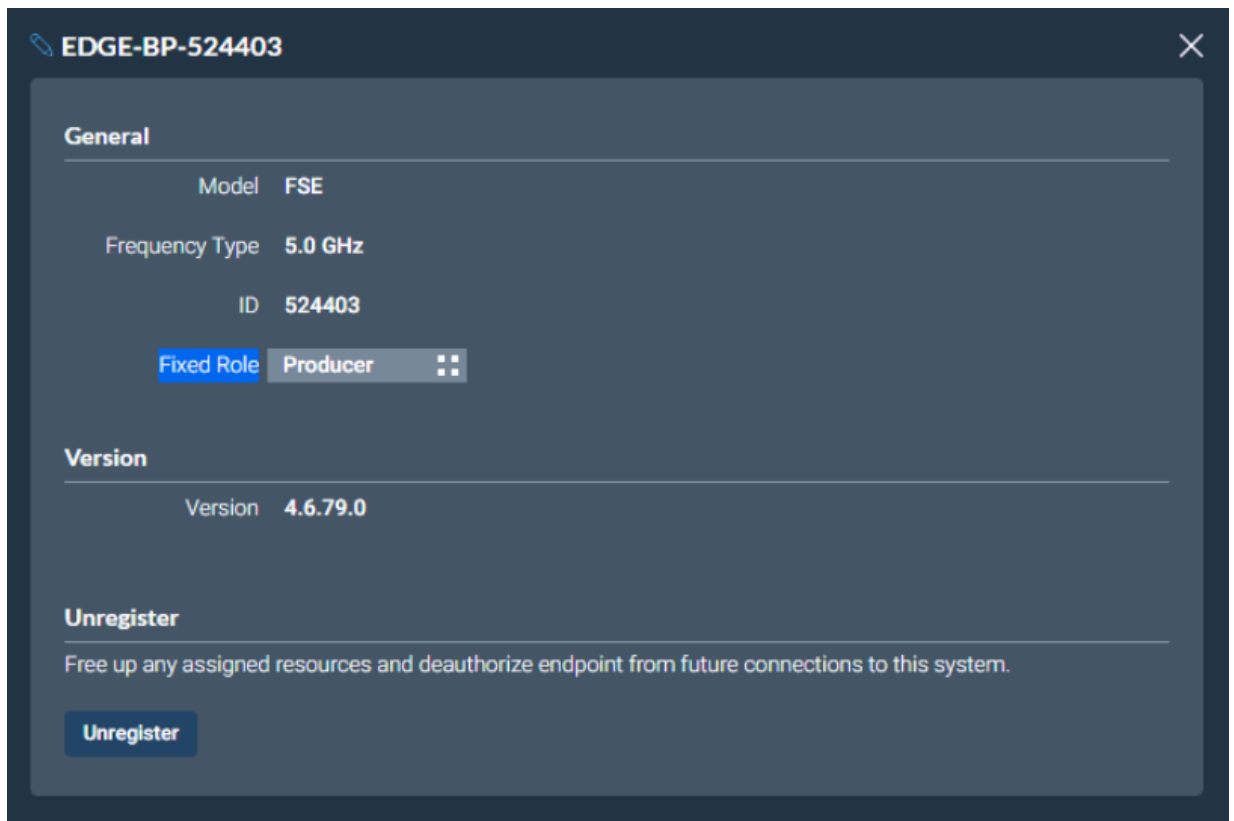


8.4 Channels and Groups

Channels and groups are both essentially digital containers for audio sources, allowing communication between members.

8.4.1 Channels


A Channel operates as an intercom Partyline or conference. All members can talk to and listen to all other members, as long as they have keys to do so.

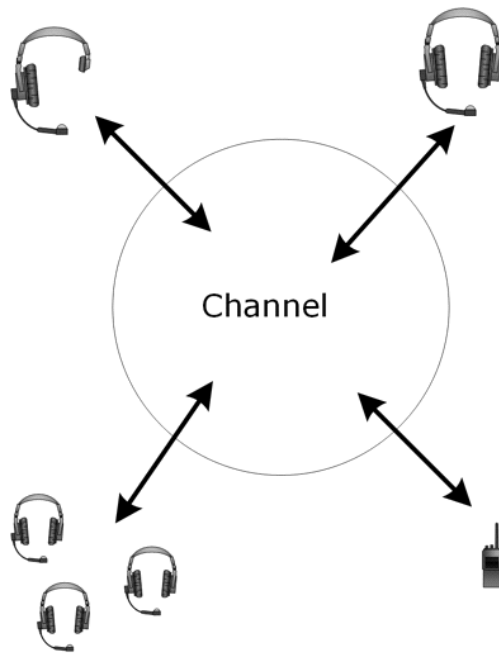

The default key behavior setting for a wireless beltpack in a Channel is **Talk and Forced Listen**. For more information, see **Key Behavior**.

8.4.2 Groups

A Group configuration enables an announcement or broadcast to a number of members at the same time.

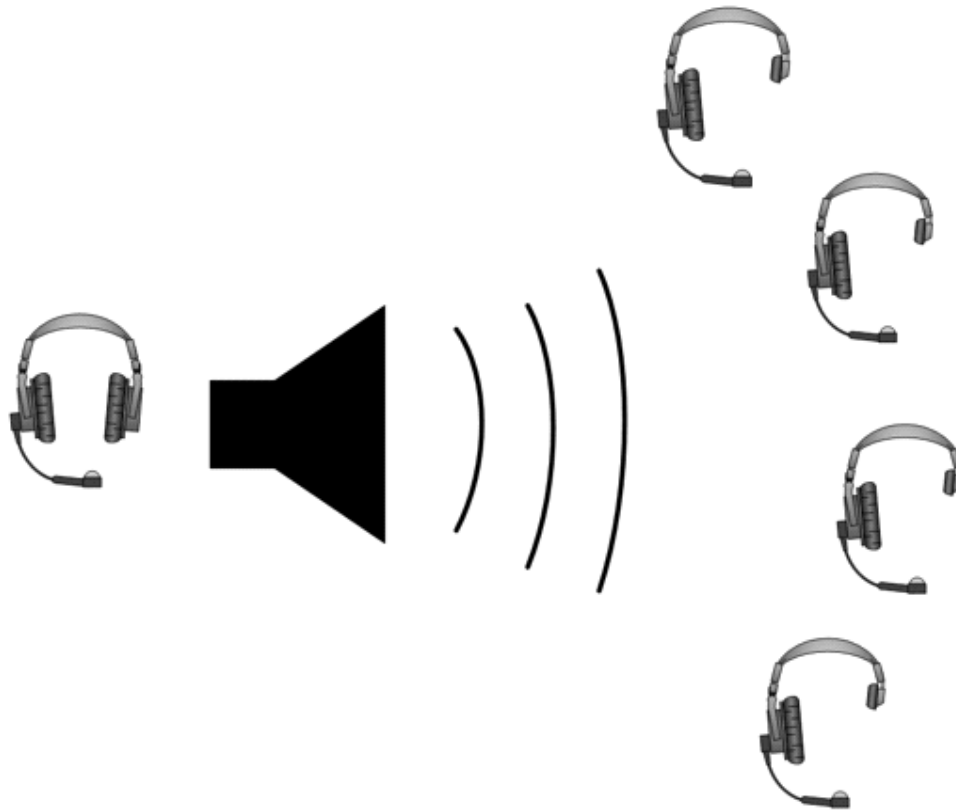

A group member can reply directly to the announcer using the **Reply** key. The other group members will not hear this.


To set up a group, you must first put the members in the Group. Then, when the members are in the Group, you can set up a key or keys to talk to it.

8.5 Managing Channels

From the **Channels** tab, you can:


- View existing channels and add or remove new channels.
- View existing ports, and add or remove ports from the channel.

To access the **Channels** screen, navigate to **Configuration > Channels**. The Channels screen appears.

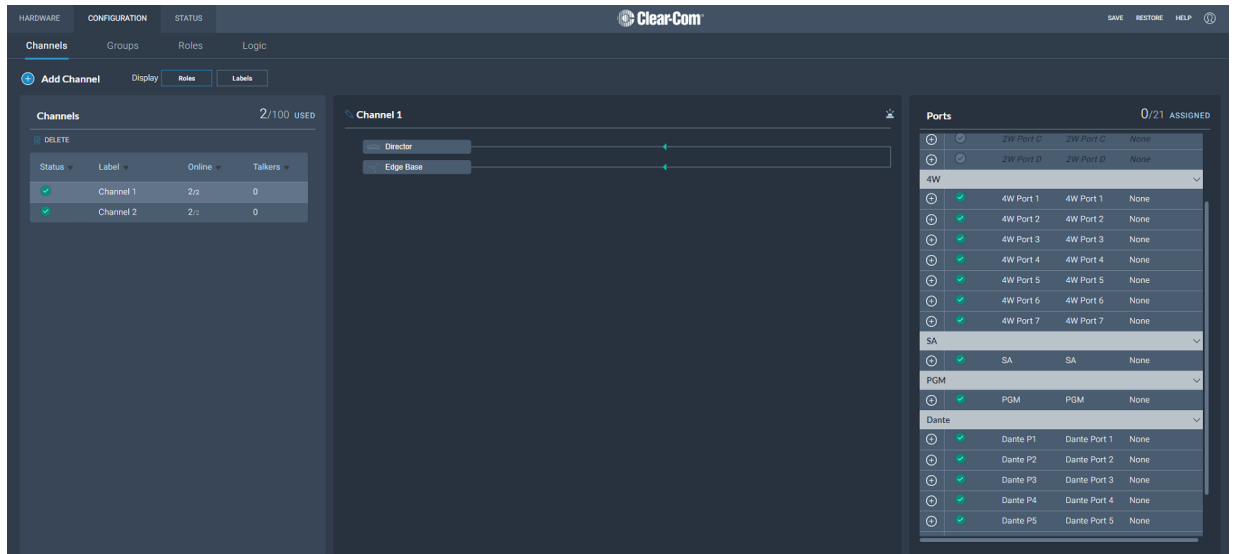

8.5.1 Viewing Information About a Channel

When you open the **Channels** screen, the left-hand panel displays a list of all the channels that are currently present. The following information is displayed for each channel.

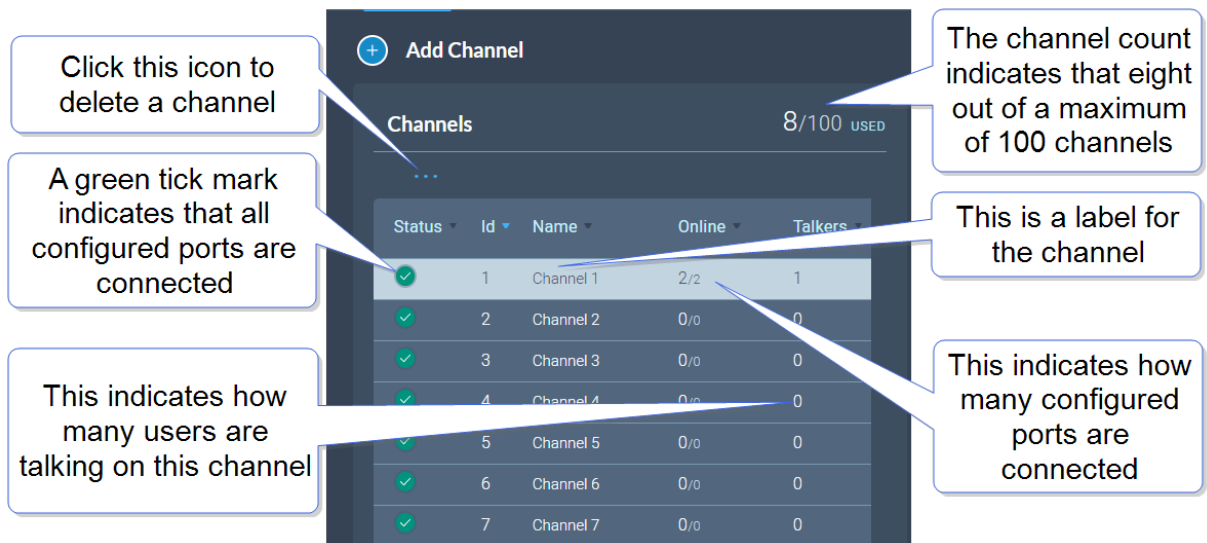

Status

A green tick mark indicates that all the ports that are configured for the channel are connected. Otherwise, a warning triangle is shown.

Name

This field contains a label that enables you to identify the channel.

Note: A label can contain up to 10 characters. You can edit this label from the center panel.

Online

This indicates how many of the total channel members are online.

Talkers

This indicates how many members have active talk routes on this channel.

8.5.2 Adding a New Channel

To add a new channel:


1. Click the new channel icon . A new entry appears in the list of added channels.


Note: You can only add new channels up to a maximum number (100).

2. Add any required ports to the channel.

8.5.3 Adding Ports to a Channel

To add ports to a channel:

1. From the **Channel** panel, select the channel in which the port is to be added.
2. From the **Ports** panel, click the add port icon  of the port that you require.

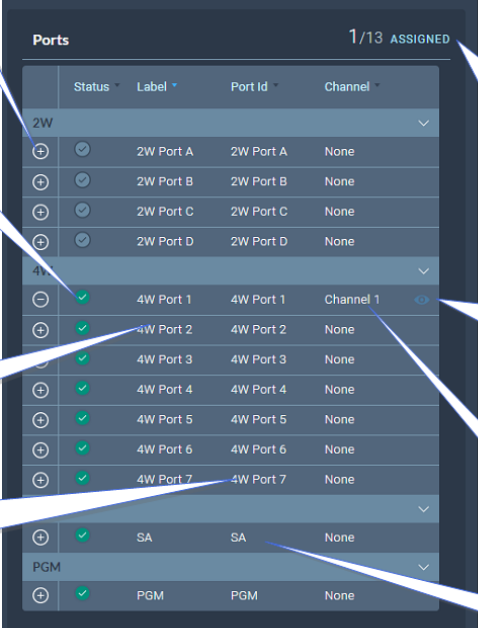

Click here to add this port to a channel

A green checkmark indicates that the port is online

This is a label that helps you to identify the port

This identifies the port. Changing the label does not affect the Port Id

This indicates how many of the total number of ports are assigned to the currently selected channel


Click on the eye icon to highlight the channels that the port is assigned to

This is the name of the channel that the port is currently assigned to

Stage Announce

Status	Label	Port Id	Channel
2W			
	2W Port A	2W Port A	None
	2W Port B	2W Port B	None
	2W Port C	2W Port C	None
	2W Port D	2W Port D	None
4W			
	4W Port 1	4W Port 1	Channel 1
	4W Port 2	4W Port 2	None
	4W Port 3	4W Port 3	None
	4W Port 4	4W Port 4	None
	4W Port 5	4W Port 5	None
	4W Port 6	4W Port 6	None
	4W Port 7	4W Port 7	None
SA			
	SA	SA	None
PGM			
	PGM	PGM	None

The port is now added to the channel, and appears in the list of ports in the center panel.

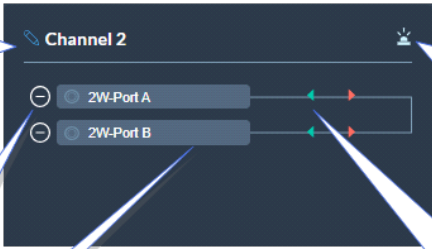

Click here to edit the channel label

Click here to remove the port from the channel

This is the label of the port

When this is lit it indicates that a call signal is active in this channel

The green arrows indicate active listen (left arrow). The red arrows indicate active talk (right arrow).

Port	Listen (Green Arrow)	Talk (Red Arrow)
2W-Port A		
2W-Port B		

8.5.4 Removing Ports From a Channel

To remove a port from a channel:

1. From the **Channels** panel, select the required channel.

2. Click the remove icon  of the port that you want to remove.

The port is removed.

8.5.5 Deleting a Channel

To delete a channel:

1. From the **Channels** panel, select the channel that you want to delete.
2. Remove all the ports from the channel

Note: *If you do not remove the ports, you will be prompted to do so in step 3.*

3. Click the **More Actions** icon , and select **Delete**.


8.6 Managing Groups

From the **Groups** tab, you can:

- View existing groups and add or remove new groups.
- View existing ports, and add or remove ports from the groups.

Note: *Beltpacks are added to Groups in the Roles page.*

To access the **Groups** screen, navigate to **Configuration > Groups**. The Groups screen appears:

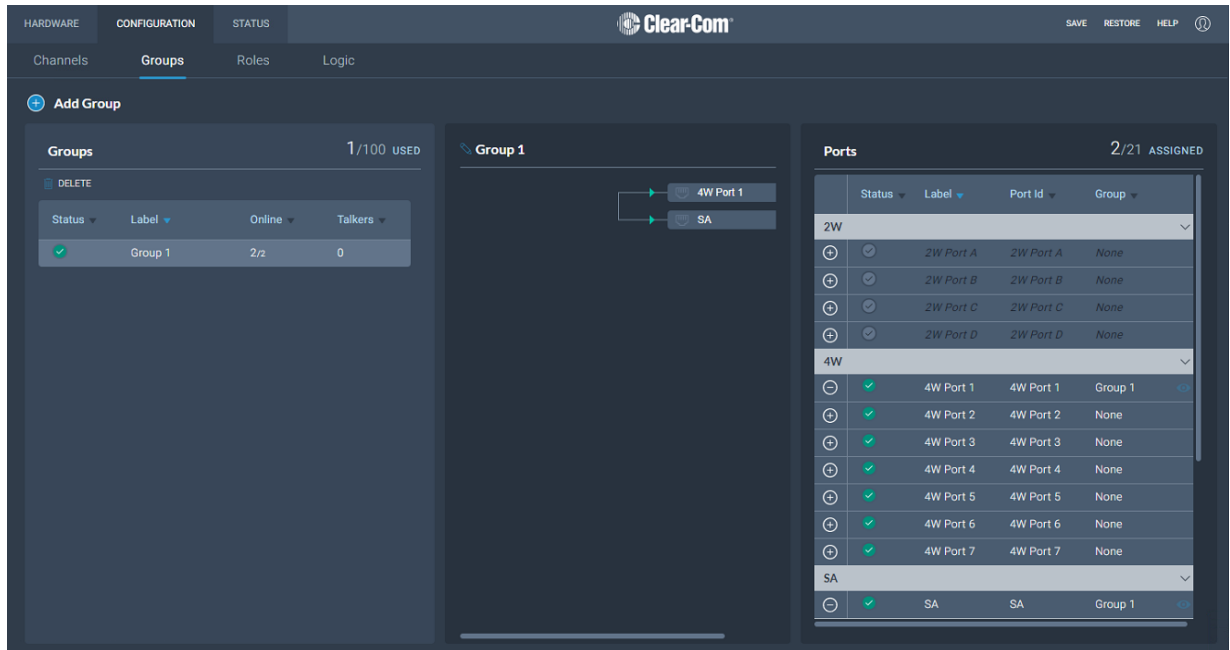

8.6.1 Viewing Information About a Group

When you open the **Groups** screen, the left-hand panel displays a list of all the groups that have been created. The following information is displayed for each group.



Status

A green tick mark indicates that all the ports that are configured for group are connected. Otherwise, a warning triangle is shown.

Name

This field contains a label that enables you to identify the group.

Note: A label can contain up to 10 characters. You can edit this label from the center panel.

Online


This indicates how many of the total group members are online.

Talkers

This indicates how many FS II beltacks or logic-routed ports have active talk routes on this group.

8.6.2 Adding a New Group


To add a new group:


1. Click the new group icon . A new entry appears in the list of added groups.
Note: You can only add new groups up to a maximum number (100).
2. You can now add any required ports and members to the group.

8.6.3 Adding Ports and Roles to a Group

To configure a group you must first put the members in the group. These can be ports and/or roles. When you have done this you will configure a talk key to the group (group administrator).

Adding Ports to a Group

1. From the **Group** panel, select the group in which the port is to be added.
2. From the **Ports** panel, click the add port icon  of the port that you require.

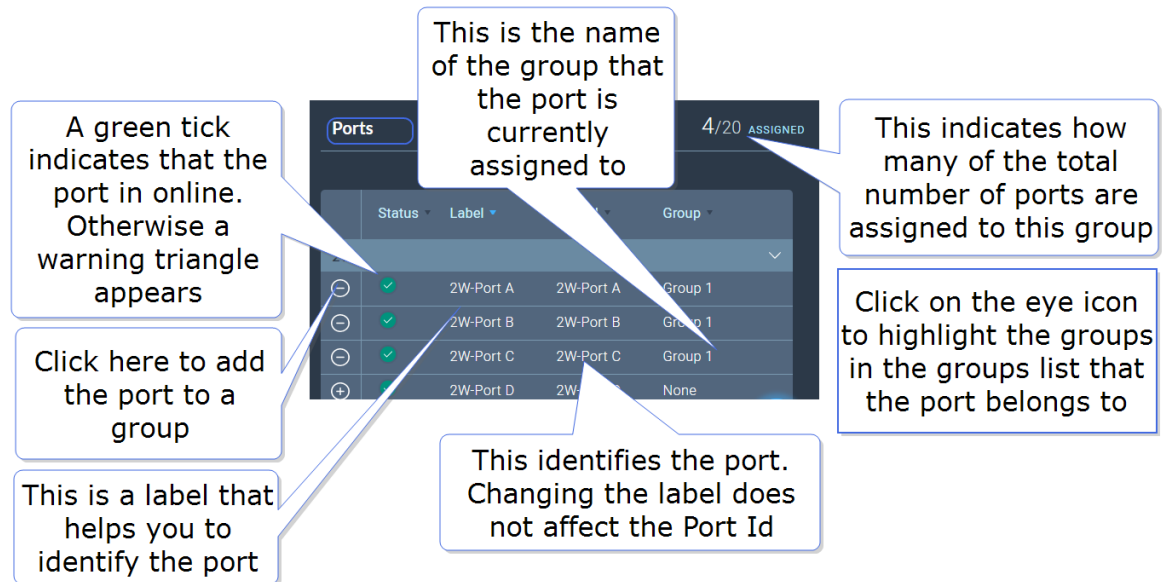

The port is now added to the group, and appears in the list of ports in the center panel.


Adding Roles to a Group

1. In the **Roles** page, select the role you wish to add to the group.
2. On the left side of the screen, select **Group Membership**.

Group Membership

Group Membership

Unassigned




Add role to a group

Headset


Limiter

0 dB



Sidetone Gain

-12 dB



Sidetone Control

Tracking

Non-Tracking

Disabled

Headphone Detect

Enabled


Disabled

Headset Mic Type

Dynamic


Electret

Page 87


 Clear-Com®

Configuring a Talk Key to the Group

1. In the **Roles** page, select the role you want to talk to the group.
2. Configure a talk key to the group (Talk Only)

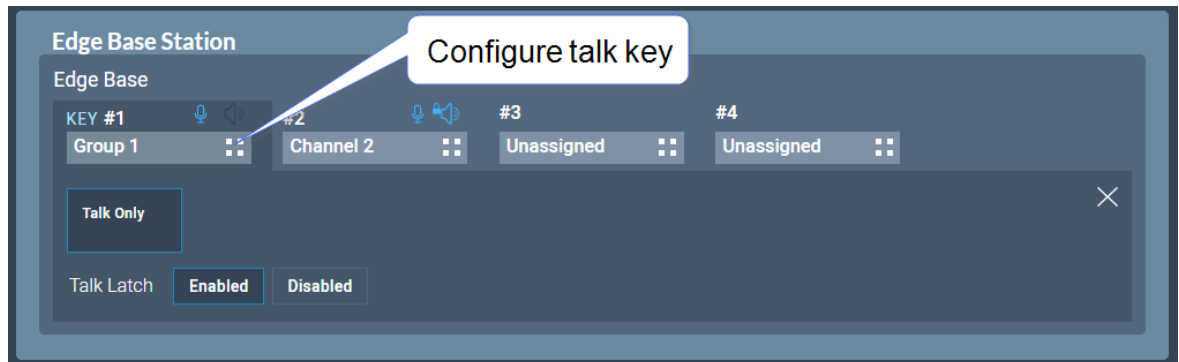

When you have configured members and a talk key to a group, you will see the group by selecting it in the **Groups** page. The group administrator will talk to the whole group. The group members can talk directly back to the group administrator using the **Reply** key. This communication will not be broadcast to the group, only the administrator will hear.

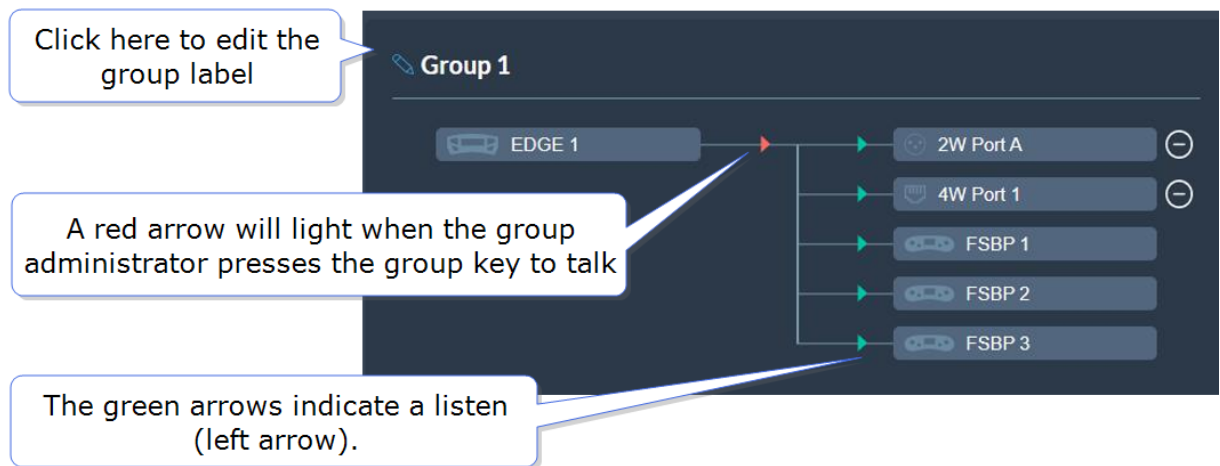

8.6.4 Removing Ports from a Group

To remove a port from a group:

1. From the **Groups** panel, select the required group.

2. Click the remove icon  of the port that you want to remove.

The port is removed.

8.6.5 Deleting a Group

To delete a group:

1. From the **Groups** panel, select the group that you want to delete.
2. Remove all the ports from the group

Note: If you do not remove the ports, you will be prompted to do so in step 3.


3. Click the trash can icon. The group is deleted.

8.7 Creating and Editing Roles

From the **Roles** page, you can view, add, edit, clone or delete roles.

8.7.1 Viewing Roles

To view roles, navigate to **Configuration > Roles**. The following screen appears.

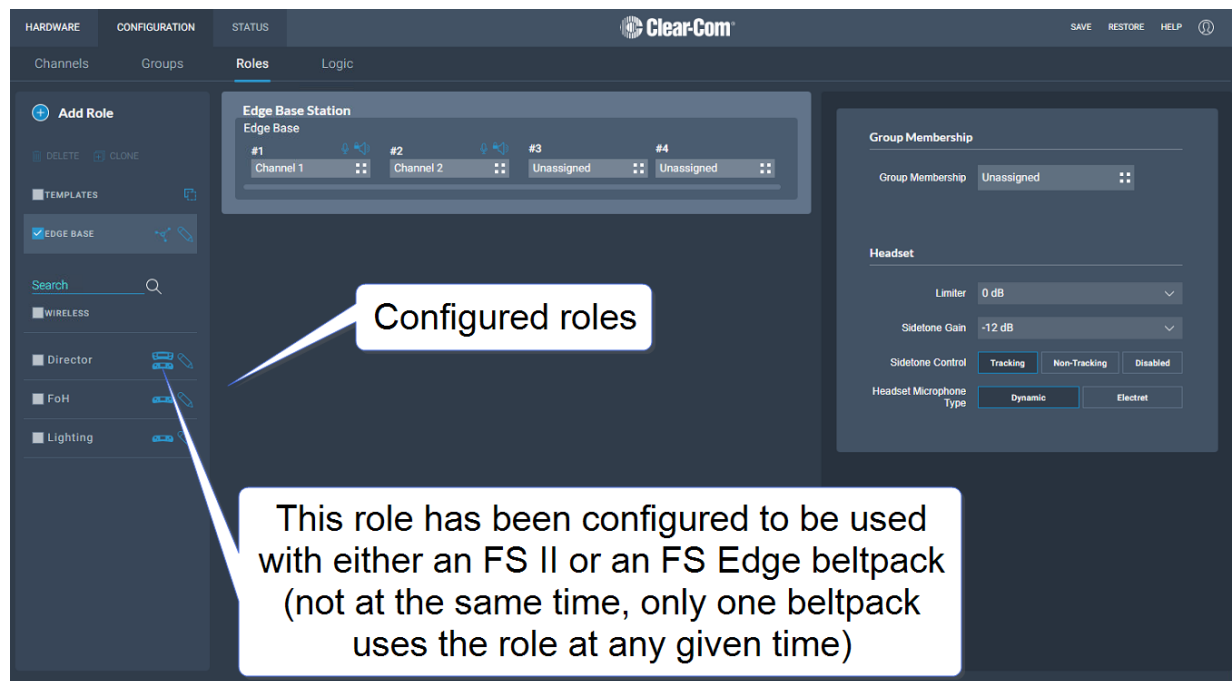

A list of roles appears on the left-hand side of the screen.


8.7.2 Adding Roles

To add roles:


1. Navigate to **Configuration > Roles**.



2. Click **Add Roles**. The following screen appears.

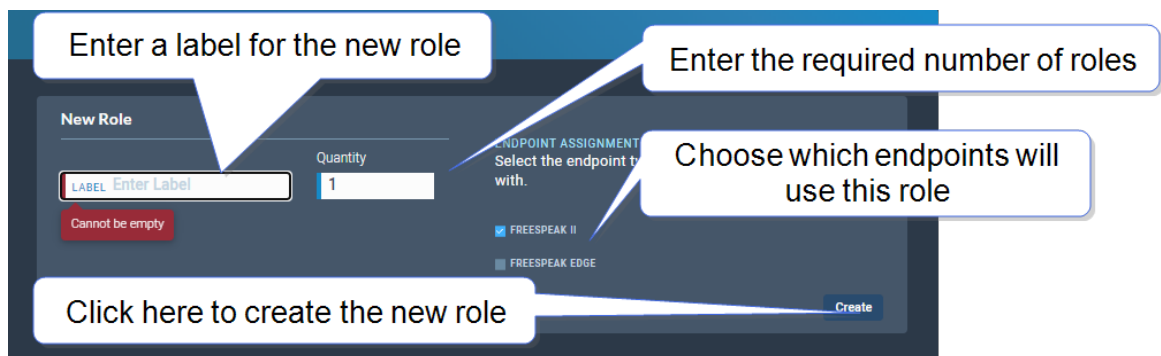

3. Enter a label for the role, the number of roles required and choose which endpoints will use this role (FS II, FS Edge or both). Only one beltpack can use the role at a given time.

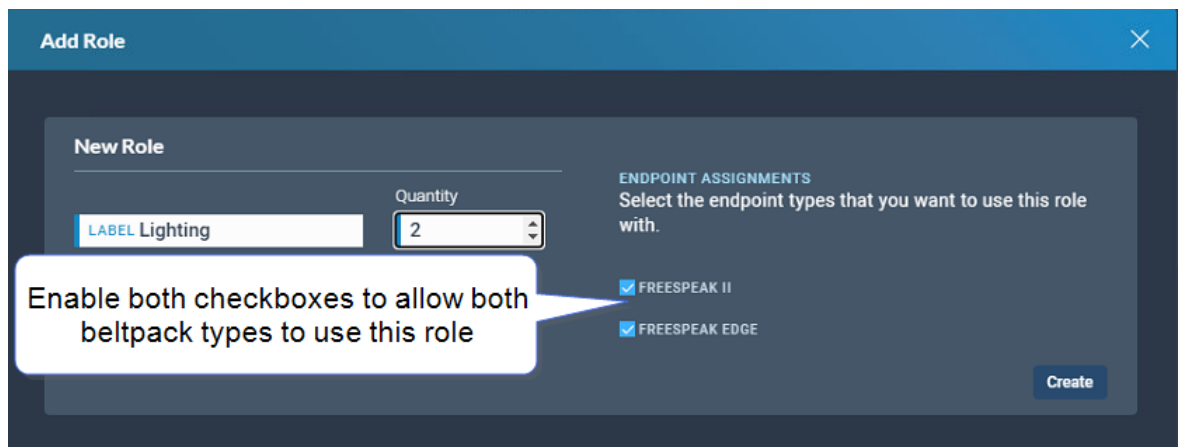

Note: When creating multiple roles, the system will add an incrementing numerical suffix to the role name. Roles names must be unique.


Note: You can also edit the label and endpoint assignments from the icons that appear beside each role in the left-hand side of the screen.

4. Click **Create**. The new role appears in the list of roles in the left-hand side of the **Roles** screen.




8.7.3 Editing Role Key Assignment

1. Navigate to **Configuration > Roles** and select required role on the left of the screen.
2. Click on the small white squares.

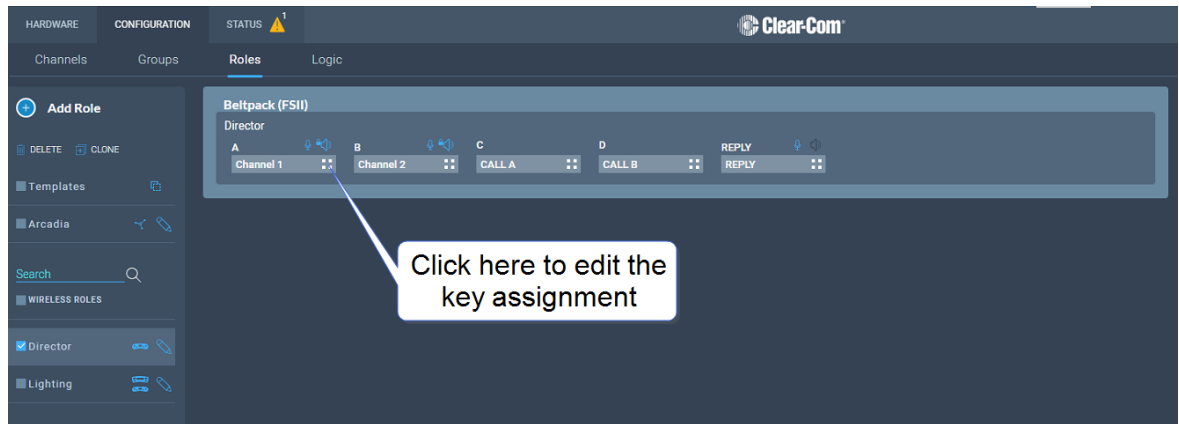

The key assignment screen appears.

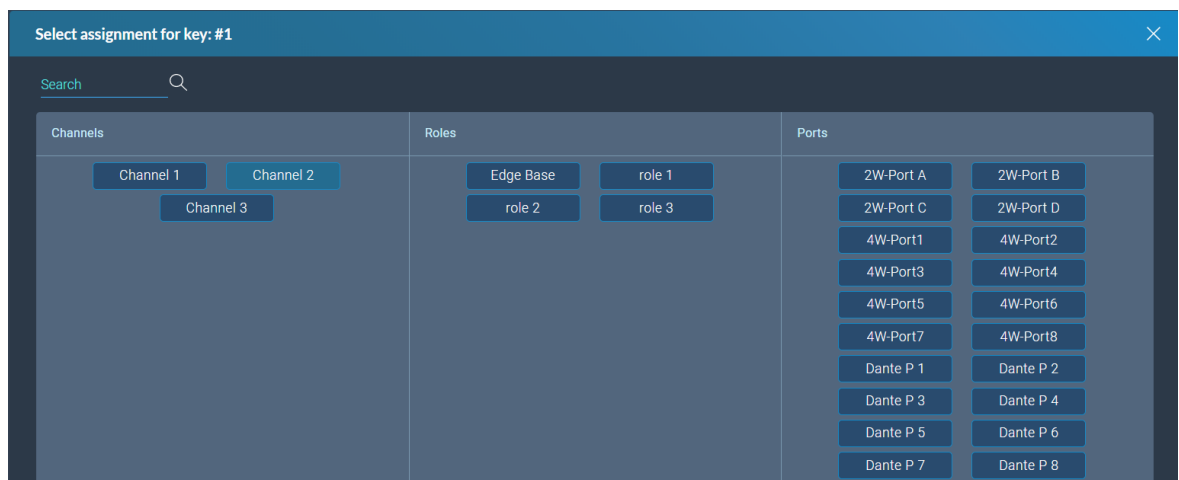

3. Click to select the required audio source.

8.7.4 Configuring Role Settings

To configure the settings for a role:

1. Navigate to **Configuration > Roles**, and select the required role from the list of roles in the left-hand side of the screen.
2. From the **Settings** panel on the right-hand side of the screen, scroll to the required setting.
3. Edit the setting as required.

8.7.5 Cloning Roles

To clone roles:

1. Navigate to **Configuration > Roles**, and select the role that you wish to clone from the list of roles in the left-hand side of the screen.
2. Click **CLONE**.




The role is cloned and added to the list of roles in the left-hand side of the screen.

8.7.6 Deleting Roles

To delete roles:

1. Navigate to **Configuration > Roles**, and select the role that you wish to delete from the list of roles in the left-hand side of the screen.
2. Click **DELETE**.

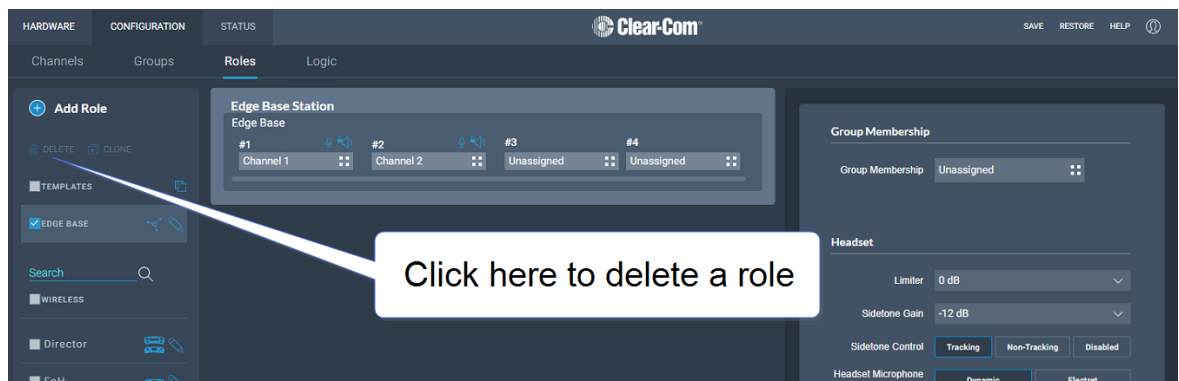

The role is deleted and removed from the list of roles in the left-hand side of the screen.

8.7.7 Setting Key Behavior

Audio keys can be set to different Talk and Listen states. These key behavior states apply to the keys on the Base Station and beltpacks. Key behavior is configured in the **Roles** tab in the CCM. See [Creating and Editing Roles on page 89](#).

Key Behavior Options	Resulting Audio Behavior
Talk-Only	Press key to talk. Key only controls talk.
Listen-Only	Press key to listen. Key only controls listen.
Talk and Listen	Press key to talk and listen.
Dual Talk and Listen (beltpacks only)	Press key to talk and listen. Listen latches on or off according to preference (quick tap to latch). The user can push and hold (PTT) to activate talk.
Force Listen	Permanent listen.
Talk and Forced Listen	Permanent listen, push key to talk.
Force Talk and Force Listen (beltpacks only)	Permanent listen and talk.


8.7.8 Fixed Roles

When a role is fixed to a beltpack, a beltpack user is forced to use that role. If a role is not fixed to a beltpack, the user can choose from any available roles.

When you register beltpacks via USB cable to the Station, an editable fixed role is created and applied to the beltpack.

Roles can be fixed/unfixed in the CCM.

Navigate to: **Hardware > Resources > Endpoints** (select the down arrow to see all connected Endpoints). Select an Endpoint (beltpack) by clicking it. Click to fix/unfix or change the role for this beltpack.

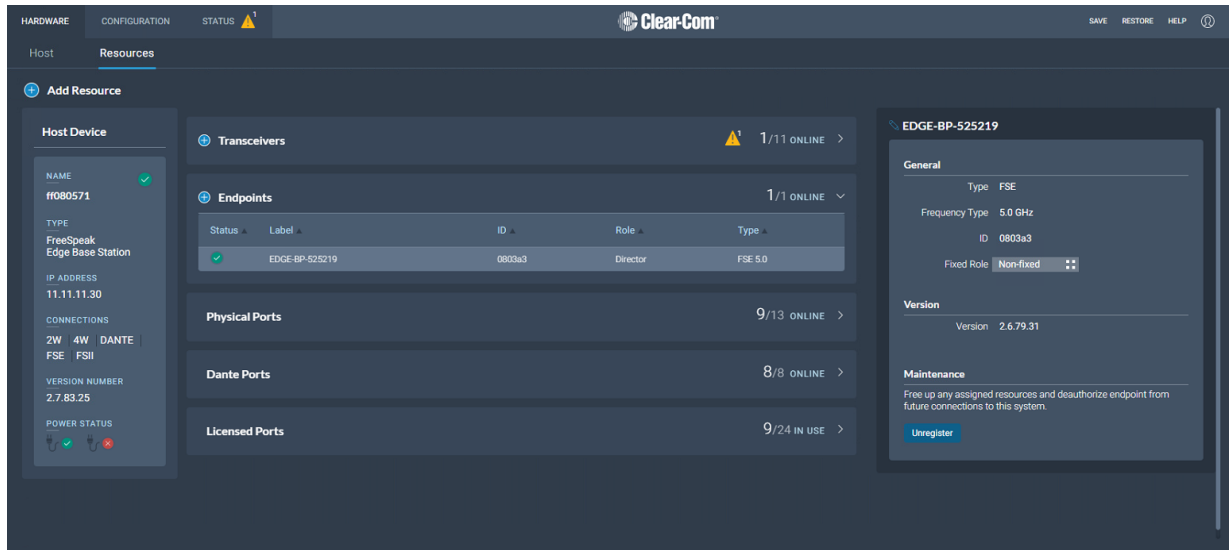

8.8 Setting up GPIOs and Logic Events

8.8.1 Overview

- 2 x GPIOs
- 4 x GPOs
- Unlimited Logic Events
- Each GPIO/GPO hosts up to 10 different events or actions. These actions can be turned off or on in the **Status > Logic** page of the CCM.
- 2 x DB 9F connectors on the rear of the Base Station (**C**). See [Rear Panel Connectors and Indicators on page 14](#).
- For DB 9F pinouts, see [Pinouts on page 136](#)

8.8.2 Examples of GPIOs

On an input from an external device, an audio route can be established between two entities.

- If an on-air light comes on, the program feed (**PGM**) can be routed to a Channel or beltpack.
- Use a footswitch to allow the station user to open an audio route to a Channel.
- On an input from a two-way radio, an audio route can be established to a channel (the radio talks to the channel).

8.8.3 Examples of GPOs

GPOs are triggered (sent to an external device) when a **Talk**, **Talk & Listen** or a **Call** comes into a named entity.

- When someone talks to stage announce, an output relay (GPO) is sent to the external stage announce speaker.
- When someone talks to a channel labeled Radio, an output is sent to a 2-way radio.
- When a call signal (**Call**) comes into a channel, and output is sent to turn on an on-air light.

8.8.4 Examples of Logic Events


- An output can be triggered on a crosspoint activation (when someone presses a talk key).
- An input can be used to trigger a call signal.

8.8.5 Configuring GPIs

This example opens a talk route from the Base Station to a Channel when an input occurs on GPI1 (for instance, from a footswitch).

Navigate to **Configuration > Logic**.

1. On the left panel, click GPI1 to select it.

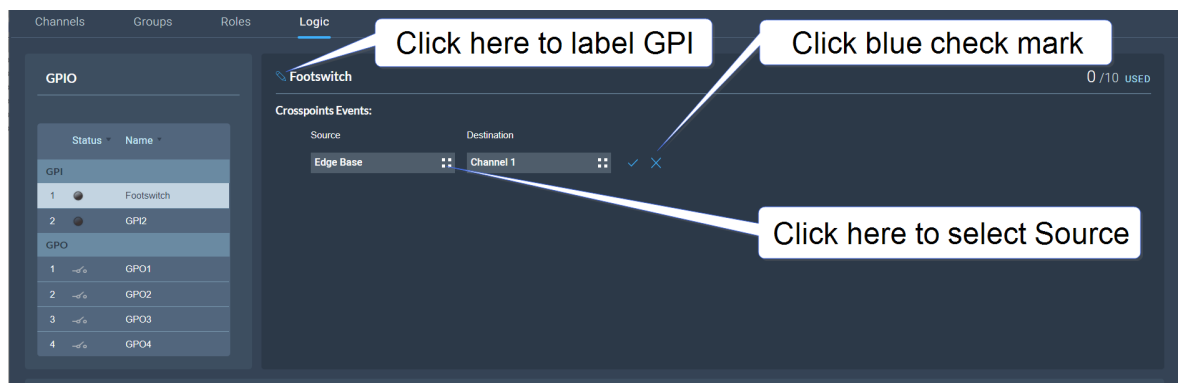

2. Click the Add button  in the center panel.

3. Click the Options button  to select a **Source**. Select **Edge Base**.

4. Click the Options button  to select a **Destination**. Select the required Channel.

5. Click the blue check mark.



6. To label the GPI, click the pencil icon.
7. To test the GPI, or turn it on and off, navigate to **Status > Logic**. See:
[Logic Page on page 32](#).

8.8.6 Configuring GPOs

In this example you send an output trigger (for example to an external stage announce speaker) on GPO1 when a belt-pack **Talk** is activated on the stage announce (**SA**) 4-wire port.

1. Navigate to **Configuration > Logic**.



2. On the left panel, click GPO1 to select it.
3. Click the Add button  in the center panel.
4. Click the Options button  to select a **Key Target**. Select stage announce (SA).
5. In this case, the **On Behavior** field defaults to **Talk Only**.
6. Click the blue check mark.
7. To label the GPO, click the pencil icon.
8. To test the GPO, navigate to **Status > Logic**. See [Logic Page on page 32](#).


8.9 Monitoring System Status

You can monitor your system using the following features of the CCM:

- Overview
- Event Log
- Logic

8.9.1 Overview

To see the **Overview** screen, navigate to **Status > Overview**. The following screen appears.

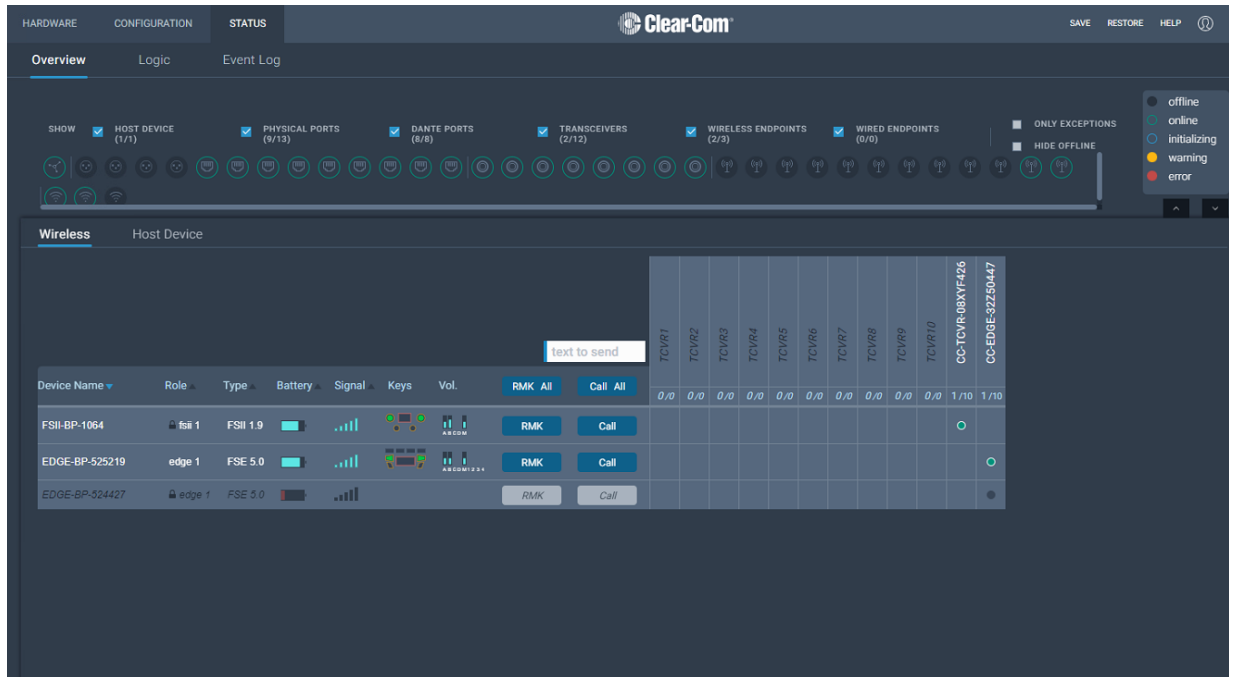


The **Overview** screen consists of two sections. There is an upper section that displays a list of system icons representing the ports, transceivers and endpoints and a lower section that gives detailed information about each connected device and about the Base Station.


Note: *There is currently no detailed status for 2W, 4W and Dante.*

8.9.2 System Icons

Each icon is color-coded to give an easily accessible view of the status of each entity.

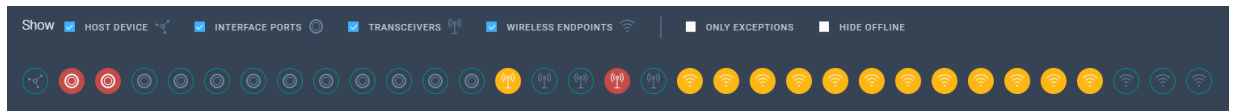

The following legend is used to indicate the status of each entity.

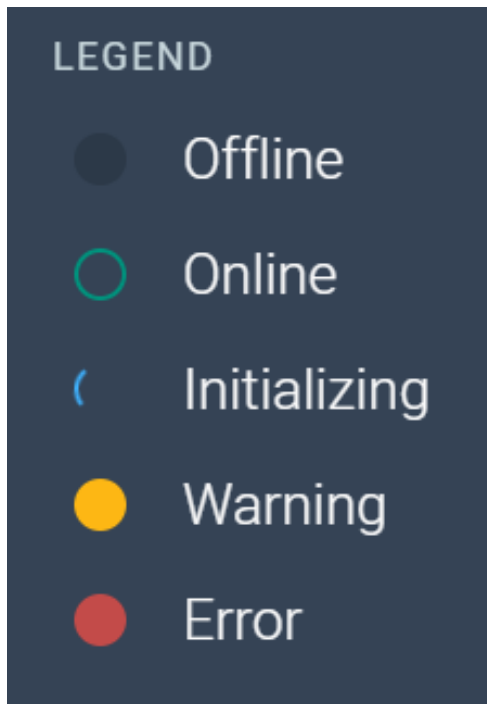

8.9.3 Monitoring Wireless Devices

Navigate to **Status > Overview > Wireless**. This section of the **Overview** screen lists all the wireless devices connected to your system, and gives the following information for each device:

- Associated role
- Type of transceiver
- Battery level
- Signal strength
- Volume setting
- Remote Microphone Kill (RMK) button to mute all microphones connected to your system.
- Call button to send a text message to all connected devices.
- Network and PTP status of transceivers
- Reboot transceiver

[illegible]

Transceiver details

The screenshot displays the Clear-Com software interface. At the top, there are tabs for **HARDWARE**, **CONFIGURATION**, and **STATUS**. Below these, there are sub-tabs for **Overview**, **Event Log**, and **Logic**. The main area shows a list of devices with columns for **Device Name**, **Role**, **Type**, **Battery**, **Signal**, **Keys**, **Vol.**, **RMK**, and **Call**. A tooltip "Select the device" is visible over the **RMK** column. To the right, there is a detailed view of a transceiver, showing **Network** details (Admin IP, Audio IP, Address, Subnet Mask, Network Mode), **Version** (Radio Version, FPGA Version), and **PTP** details (Status, Role, Master ID, Local ID, Offset from Master, Mean Path Delay, Mean Frequency).

View details.
Scroll down here
to reboot the
transceiver.

Select a transceiver to
see network, version
and PTP details.

PTP details

Monitoring Beltpack Details


Select a beltpack to see details including battery type, signal strength (RSSI) and Frame Error Rate (FER).

Signal strength

8.9.4 Monitoring the Host Device

Navigate to **Status > Overview > Host Device**. A screen appears that gives information about the Base Station and enables various procedures including:

Reboot	General
Reset to Default	Status
Collect Support Info	Uptime
Sync Clock	Sync Source
Network	Version
Management	PTP
AES67	Power to the Base Station
Dante	Thermal

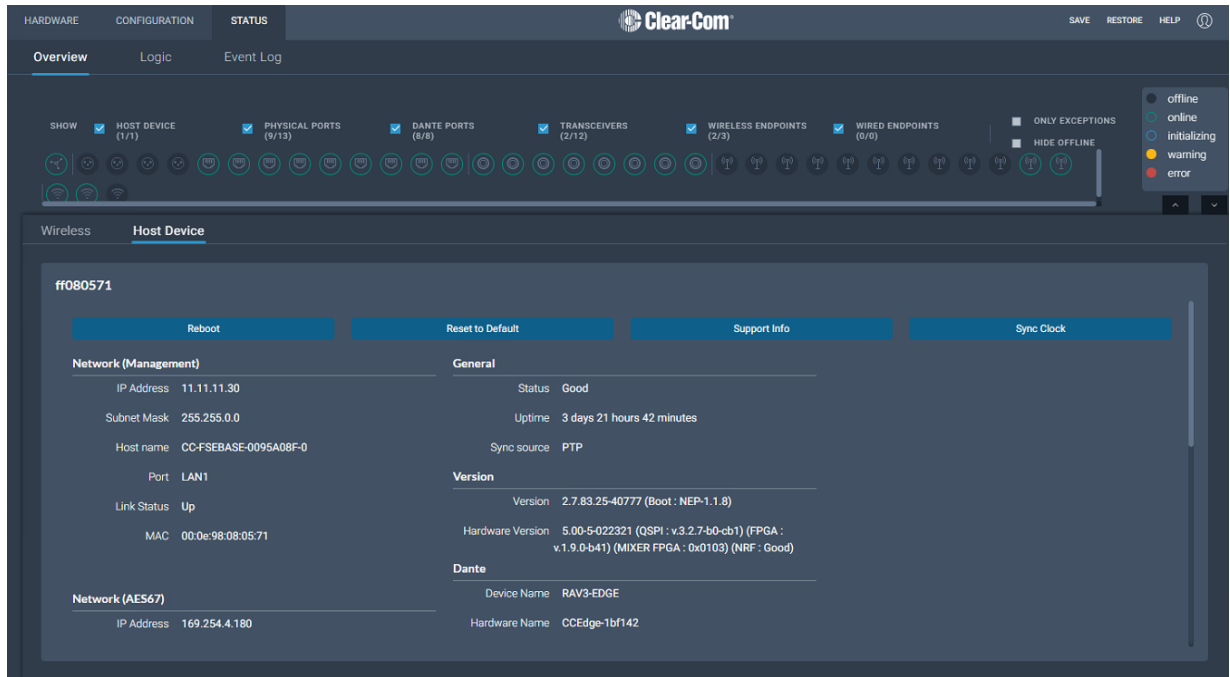


8.9.5 Monitoring the Event Log

The Event Log provides useful information about events that happen in the system.

The Event Log can be filtered on:

- Time: default is 1 month prior to the current date and time
- Exceptions (warnings and errors): default is unchecked.

Events are sorted by data. Clicking the small blue arrow changes date order:

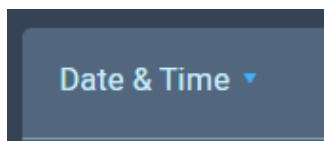

The **Level** column shows the status of data:

- Yellow triangle: warning
- Red circle with white cross: error
- No icon shown: this data is informational.


The following apply to the Event Log:

- The Event Log periodically refreshes but there is a **Refresh** button to pull the latest events
- The Event Log can be exported to a .csv file

- **Clear Event Log** clears current data. The data cannot be retrieved once it has been cleared
- Event logs are not stored permanently, only events since the last power or reboot cycle are available.

8.9.6 Monitoring the Logic Page (Status)



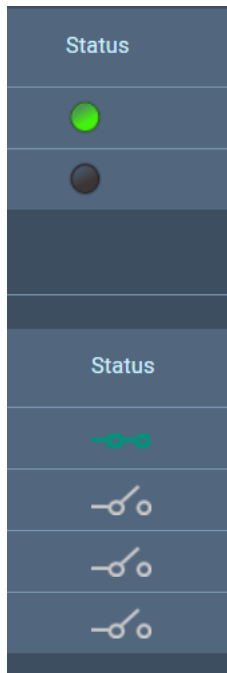


This page shows the GPIs and GPOs (relay) that you have set up in the **Configuration > Logic** page. You can see if these are currently active in the system under the **Status** column.



A green icon indicates a currently active input or relay.

Forcing ON/OFF

The buttons under the FORCE column are toggle buttons that can be used to test the working of the GPIOs or to turn them permanently off or on. These override the working of the configured GPIOs.

Logic Inputs					
	GPI Label	Route Source	Route Destination	Status	Force
1	GPI1	No events assigned	No events assigned		<input type="button" value="OFF"/> <input type="button" value="ON"/>
2	GPI2	No events assigned	No events assigned		<input type="button" value="OFF"/> <input type="button" value="ON"/>
Logic Outputs					
	GPO Label	Key Target	On Behavior	Status	Force
1	GPO1	No triggers assigned	No triggers assigned		<input type="button" value="OFF"/> <input type="button" value="ON"/>
2	GPO2	No triggers assigned	No triggers assigned		<input type="button" value="OFF"/> <input type="button" value="ON"/>
3	GPO3	No triggers assigned	No triggers assigned		<input type="button" value="OFF"/> <input type="button" value="ON"/>

In this example, GPI 1 and GPO 2 are forced ON for testing purposes. GPO 2 is permanently OFF (for example, if you want to ensure that a signal light never comes on at this time).

9 Security

This chapter describes important security features. It contains the following sections:

9.1 Warning	106
9.2 Introduction	106
9.3 Using Security Certificates	107
9.4 Forcing HTTPS	108

9.1 Warning

The CCM ensures that you do not turn off port 80 without testing your certificate. If you turn off port 80 without ensuring that you can reach the CCM using port 433 it is possible to get locked out of your CCM. If this happens, you must reset the Base Station from the front panel menus. This will remove all configuration, including network details from your Base Station.

Note: *Some knowledge of certificate authorization and HTTPS is needed when setting up a secure connection between a PC hosting the Core Configuration Manager (CCM) and a Base Station.*

Note: *Each browser type (for example, Safari, Chrome, Edge, Firefox) uses its own method for certificate management. These methods can change with time and is beyond the control of Clear-Com. Please refer to the instructions supplied with your browser if you require more information.*

9.2 Introduction

The following are some of the main security features.

9.2.1 Secure HyperText Transfer Protocol (HTTPS)

HTTPS is an adaptation of the HTTP protocol. It protects against an intermediary being able to intercept data between devices, using data encryption and Public Key Cryptography to create a secured channel.

9.2.2 Using HTTPS With Your FreeSpeak Edge Base Station

When using the CCM to establish your intercom setup, you might wish to protect your login credentials and configuration details from unauthorized interference. In this case you will establish an encrypted connection between the CCM and your Base Station using the **Force HTTPS** feature.

9.2.3 The Force HTTPS Feature

The Base Station uses port 80 (HTTP) and port 433 (HTTPS) for management. If you wish to create a secured route for data between the CCM and the Base Station you must:

- Install a security certificate
- Turn off port 80, forcing traffic to use port 433

This creates a certified and encrypted connection between the Base Station and the PC accessing the CCM.

9.3 Using Security Certificates

There are three types of security certificate available. Choose the certification option that best suits your security requirements:


- A certificate of your own choosing (full chain and private key)
- An EasyDNS authorized certificate for *.clearcomdevices.com (this option requires you to register your Base Station with a DNS server) and cannot be used unless your Base Station has internet access
- The Clear-Com self-signed certificate


More detail about certificates:



1. **A certificate of your own choosing.** This option gives you complete control over the security of your Base Station. This option requires specialized knowledge about how to obtain a fullchain certificate and private key, and how to install them on your browser. When using your own certificate you might have to provide a DNS server address and register the Base Station.
2. **The EasyDNS certificate.** This is a commercial certificate. When using the EasyDNS certificate you have to have a DNS server address for Base Station registration and a gateway for your device in order for the browser to verify the certificate with AlphaSSL and GlobalSign.
3. **The Clear-Com self-signed certificate (default).** This certificate can be used in a private network (does not require Internet access to verify the certificate). It can also be used to perform an initial test of your security setup. **Warning:** Browsers can be configured to trust the self-signed certificate, but this process will vary between browsers.

9.4 Forcing HTTPS

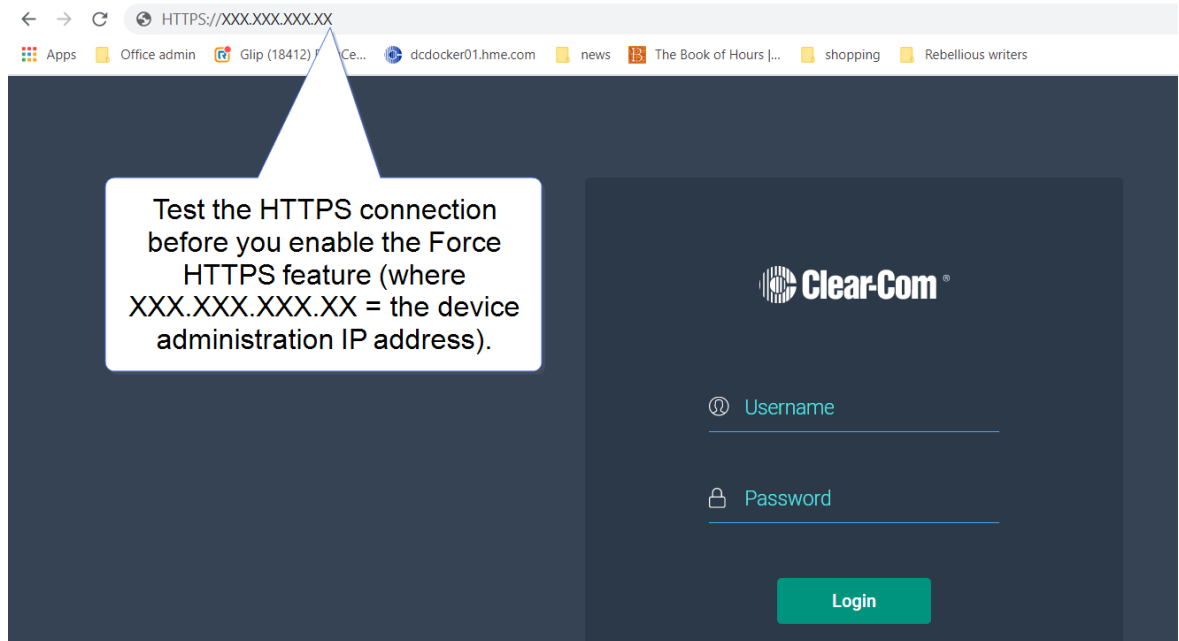1. Chose and install a security certificate on the PC or browser used to reach the CCM of the Base Station. Clear-Com offers a choice of 3 different types of certificate, offering different levels of security.
2. Test the certificate by trying to reach the CCM on the HTTPS port. Type: **HTTPS:// device IP address** in the browser URL field and press the [Enter] key.




3. To enable **Force HTTPS** in the CCM navigate to: **Hardware > Resources > Host**  **> Security** and click to enable **Force HTTPS**. This turns port 80 off, forcing traffic to use port 433.

 **ff080238** 

Network **Upgrade** **Wireless** **Security**

General

 **Info** PLEASE CONNECT USING HTTPS BEFORE FORCING HTTPS. THIS IS TO ENSURE YOU WON'T HAVE CERTIFICATE VALIDATION ISSUES.

Force HTTPS ☒ Enabled ☐ Disabled

Default Certificate

The default certificate is used for internal traffic. Any other certificate loaded onto this unit will only be utilized for CCM.

Regenerate

Certificate Status	Valid
Certificate Type	Self-signed
Certificate Authority	Clear-Com
Expiration Date	Jun 8 2023 --- 765 day(s) left.
CA Certificate	<div>Download</div>

Active Certificate

Use Default Certificate

Switch

Use EasyDNS Certificate

Switch

EasyDNS hostname

cc-fsebase-31zyf587-0.clearcomdevices.com

10

Configuring from the Front Panel

This chapter describes how to configure the FreeSpeak Edge Base Station from the front panel. It contains the following sections:

10.1 Introduction to Configuring from the Front Panel	111
10.2 Front Panel Menus	111
10.3 Passwords, Addresses and Reset to Default Settings	115

10.1 Introduction to Configuring from the Front Panel

Some common tasks you might perform from the front panel menus are:

- See/configure the Base Station IP address
- See the default CCM password
- Null your 2-wire audio ports
- Reset the Base Station to factory settings
- Reset the CCM password

To enter the Base Station menu system, press the **Menu** button on the front panel. Navigate through the hierarchical menu using the rotary controllers. To select or commit a menu item, press the rotary encoder next to it.

To exit the menu system, press the Menu button again, or leave the device to time-out of menu mode (20 seconds).

10.2 Front Panel Menus

The front panel menu options are listed below.

10.2.1 Audio Settings

Headset Limit. This allows the user to set the headset limiter for the front panel headset.

- -12 dB to +8 dB/ OFF

HS Mic Type

- Dynamic (default)
- Electret

Sidetone Gain

- -15 dB to +8 dB (-12 dB default)

Sidetone Control

- Tracking (default)
- Non-Tracking
- Disabled

10.2.2 Host Settings

Host Name. Pushing the fourth rotary will open the on screen keyboard to allow the user to enter a new name for the device (touchscreen). **[OK]** when done.

Display

- Screen Brightness. High, Medium (default), Low, Very Low
- Screen Dimming. The screen will dim to Very Low when there is no activity. Timeout time: 1,2 (default),3,5,10 or 15 minutes.
- Touchscreen sensitivity: Low, Medium (default), High.

10.2.3 2W Audio (A,B)

Configure power settings for 2-wire audio sources and perform nulling.

- Interface - power settings
 - Power detected? Yes/No
 - Power Enabled/Disabled (default = disabled)
 - Mode Clear-Com/RTS (default = Clear-Com)
- Nulling: 2W A and 2W B. Press the rotary control (Start) to perform a null. Nulling is only available if power is detected.

10.2.4 2W Audio (C,D)

See 2W Audio (A,B)

10.2.5 Discovery

- Discover FSII TCVR.
 - Lists all FSII IP transceivers visible on the network. Select the transceiver you wish to register (third rotary). Select **Register** and push the rotary (fourth rotary) to begin the connection sequence.
- Discover FSE TCVR.
 - Lists all FS Edge transceivers visible on the network. Select the transceiver you wish to register (third rotary). Select **Register** and push the rotary (fourth rotary) to begin the connection sequence.

Deregister will remove the transceiver from the system. You will only see the **Deregister** option if the transceiver has been already registered.

10.2.6 Transceiver

Lists all registered transceivers. You can view and edit **Label** and **Cable Comp (E1 only)** here. Pushing the fourth rotary will open the onscreen keyboard (touchscreen). [OK] when done.

- FSII IP. Version, Label.
- FS Edge. Version, Label.
- FSII E1. Version , Label, Cable Comp.

10.2.7 Networking

Configure and view:

- LAN Port Assignment
- DHCP Enabled/Disabled
- IP Address (read only when DHCP is Enabled)
- Subnet Mask (read only when DHCP is Enabled)
- MAC Address (read only)

Push the fourth rotary to open the on screen touchscreen keyboard to change IP and Subnet. [OK] when done. The keyboard is only available when DHCP is disabled.

Note: *When changing from DHCP **Enabled** to DHCP **Disabled**, the address previously assigned by the DHCP server will be set as the static address. This can cause IP conflicts so you must change the address to one not provisioned by the DHCP server.*

10.2.8 AES67 (for IP transceivers)

The section of the menu is read only and only shown if the AES67 connection has been configured with a LAN port from the CCM. It shows:

- LAN Port Assignment
- DHCP Enabled/Disabled
- IP Address
- Subnet Mask
- MAC Address

Note: *When changing from DHCP **Enabled** to DHCP **Disabled**, the address previously assigned by the DHCP server will be set as the static address. This is can cause IP conflicts, so you must change the address to one not provisioned by the DHCP server.*

10.2.9 Administration

- Beltpacks
 - Over the Air: Press rotary four to **Start OTA**. Put the Base Station in pairing mode for OTA registration of beltpacks (600 seconds).
 - BP Role List Sorting:
 - Role Number
 - Alphabetical
 - Battery type: use this setting if the beltpacks are not using the supplied Li-ion batteries.
 - Alkaline (default)
 - NiMh (for use in high pressure environments)
- Software
 - Current version
 - Update software from a file on a USB (insert into USB C on front of Base Station)
- License (you will not see this menu item on a FreeSpeak Edge Base)
 - Connections - current connected ports on this Base Station
 - Licensed Ports
- Reset
 - Reboot
 - Reset to Default. Reset here will reset role, channel and network details. You will need to **Add** your transceivers back into the system after reset.
 - Reset CCM Password
- Support Info
- Settings
 - Save
 - Restore
- CCM Access

- Username
- Default password
- Hardware (view only)
 - Electronic main board serial number

10.3 Passwords, Addresses and Reset to Default Settings

You can find the Base Station IP address, manage the CCM password and reset to default settings.


10.3.1 Find the Base Station IP Address

1. Press the **Menu** button on the front of the Base Station.
2. Navigate to **Networking > Management > IP Address** using the rotary controllers.
3. You will see the device IP address.




10.3.2 Find the default password for the CCM

1. Press the **Menu** button on the front of the Base Station.
2. Navigate to **Administration > CCM Access > Default Password** using the rotary controllers.
3. You will see the default password in the right hand menu screen.

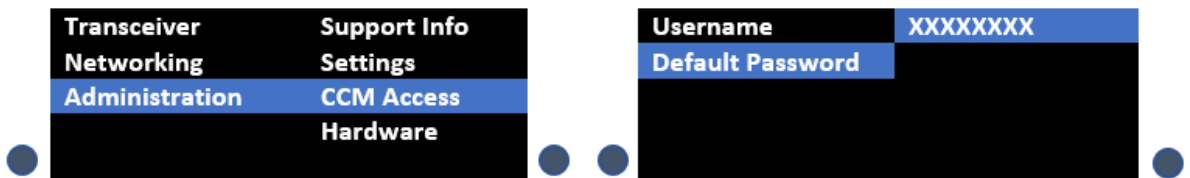

10.3.3 Reset the device to default settings

1. Press the **Menu** button on the front of the Base Station.
2. Navigate to **Administration > Reset > Reset To Default > Reset Base**.
3. The Base Station will reset to factory settings.

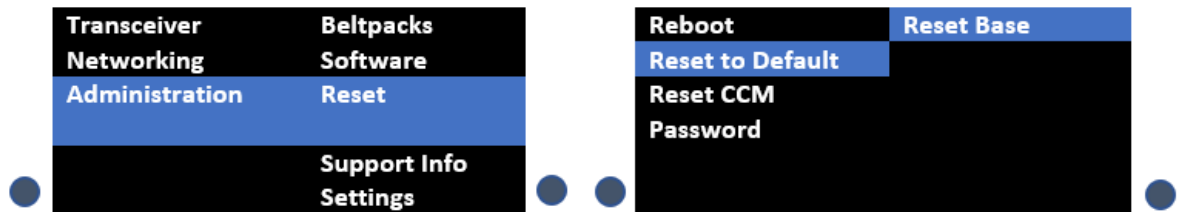


Note: When resetting the Base Station to default settings using the front panel menu system, all the system configuration details, including network settings are reset. When resetting to default from the CCM, the network settings are NOT reset.

Note: When you reset the Base Station to default settings, you must **Add** the transceivers to the system again. See [Adding IP Transceivers \(FS Edge, FS II 1.9\) on page 75](#).

10.3.4 Reset the CCM password

1. Press the **Menu** button on the front of the Base Station.
2. Using the right hand rotary controller select **Administration > Reset > Reset CCM Pass**.
3. Press the right hand rotary controller.
4. The password will reset to its default setting.

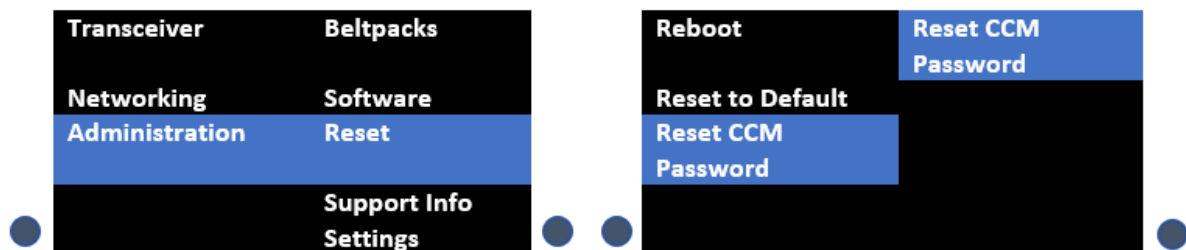

11 Upgrading Firmware

This chapter describes how to upgrade the firmware on your Station. It contains the following sections:

11.1 Introduction	118
11.2 Upgrading using the CCM	118
11.3 Upgrading using a USB stick	118

11.1 Introduction

There are two ways to upgrade the firmware on the Base Station:

- Using the CCM web interface. When upgrading from the CCM, you can upgrade all connected resources (for example, transceivers and beltpacks).
- Using a USB stick (USB A on the front of the Base Station). When upgrading in this way, only the Base Station can be upgraded.

Device to upgrade	File extension
Base Station, FS II IP TCVR, FS Edge IP TCVR	.ccf
FS II beltpack, FS II E1 TCVR	.fww
FS Edge beltpack	.ccu

Note:

The FreeSpeak Edge Base Station validates firmware versions to internal hardware. In some instances, the FreeSpeak Edge Base Station and its components cannot be downgraded. In these instances use a newer firmware version.

11.2 Upgrading using the CCM

1. In the CCM, navigate to **Hardware > Hosts (click anywhere on the Hosts panel) > Upgrade**.
2. Press **Select File** and select the file containing the updated firmware.
3. When the file is uploaded, the **Upgrade** button will be enabled.
4. Press the **Upgrade** button.
5. The upgrade process will start and the Base Station will reboot before being available again.
6. The new version of the firmware will be displayed in the **Hosts** panel.

11.3 Upgrading using a USB stick

1. Copy the firmware file onto a USB stick. The file must be at the top level of the USB drive, not within any folders.
2. Insert the USB into the USB port on the front of the Base Station.
3. Press the **Menu** button.
4. Using the rotary controllers, navigate to **Administration > Software > Update**.

5. The display will show the available firmware files stored on the USB. Select the one you require.
6. Press the 4th rotary encoder. The unit will upgrade and then reboot.
7. To check the current firmware version, in the menu system navigate to **Administration > Software > Current**. The current software version is displayed in the 4th menu screen.

12

Spare parts

Part	Part Number
External power supply, 12VDC 150W	PSU-EXT-0001
Split cable, RJ45 to PGM and SA	CAB-RJ45-PGM-SA
Ethernet fiber modules*: <ul style="list-style-type: none"> • 1 Gbps SM SXFIBER SFP • 1 Gbps MM LXFIBER SFP 	<ul style="list-style-type: none"> • SFP-SMFO-1G-LX • SFP-MMFO-1G-SX
E1 fiber modules* <ul style="list-style-type: none"> • Proprietary, based on E1: SM • Proprietary, based on E1: MM 	<ul style="list-style-type: none"> • HLI-SMFO • HLI-MMFO
Fan plate assembly	T40020-1
Rack ear (x1)	272G162
PSU Mounting Bracket	272G048
Encoder cap (x1)	272G286
FreeSpeak Edge Base Station User Guide	PUB-00113

*There is a detailed list of all Clear-Com SFPs (including range, wavelength and speed) on the [FreeSpeak II Knowledge Center](#).

13

Front Panel Menu Reference Tables

This chapter lists the front panel menu options. It contains the following sections:

13.1 Audio Settings	122
13.2 Host Settings	122
13.3 2 W Audio (A/B) (C/D)	123
13.4 Discovery	123
13.5 Transceiver	124
13.6 Networking	125
13.7 Administration	126

Note: Default values are shown in **bold**.

13.1 Audio Settings

Level 1	Level 2	Level 3	Level 4
Audio	Headset	Headset Limit	8 to -12 dB/Off Default = 0 dB
		Headset detect	Enabled /Disabled
		HS Mic Type	Electret/ Dynamic
		Sidetone Gain	8 to -15 dB Default = -12
		Sidetone Control	Tracking /Non-Tracking/Disabled

13.2 Host Settings

Level 1	Level 2	Level 3	Level 4
Host Settings	Host name	Edit	Press controller 4 to open a touchscreen keyboard.
	Display	Screen Brightness	High/ Medium /Low/Very Low
		Screen Dimming	1 to 15 minutes Default = 2 minutes
		Touchscreen sensitivity	Low, Medium , High

13.3 2 W Audio (A/B) (C/D)

Level 1	Level 2	Level 3	Level 4
2W Audio (A / B)	Interface	Power detected	Yes/No
		Power	Enabled/ Disabled
		Mode	Clear-Com /RTS
	2W A	Nulling	The nulling function is only available if power is detected.
	2W B	Nulling	as above
Audio (B / C)	Same as Audio (A / B)		

13.4 Discovery

Level 1	Level 2	Level 3	Level 4
Discovery	Discover FSII IP TCVR	Discovered FSII IP TCVRs	Register/Unregister
	Discover FSE TCVR	Discovered FSE TCVRs	Register/Unregister

13.5 Transceiver

Level 1	Level 2	Level 3	Level 4
Transceiver	TCVR 1 ... XX View configured transceivers. Max: <ul style="list-style-type: none"> E1; 10 IP TCVRs; 6 	Version	
		Label	
		Cable Comp (E1 only)	0 - 69 m , 70 - 139 m, 140 - 209 m, 210 - 279 m, 280 - 349 m, ... (increments of 70 m) up to 1540 - 1609 m

13.6 Networking

Level 1	Level 2	Level 3	Level 4
Networking	Management	LAN Status	Up/Down
		LAN Port	LAN Ports 1 - 4
		DHCP	Enabled/Disabled
		IP Address	
		Subnet mask	
		MAC	
	AES67 (only visible if AES67 has been configured to its own LAN)	LAN Status	Up/Down
	Dante (only visible if Dante has been configured in the CCM)		
		LAN Port	By default management is configured to LAN 1. This can be changed in the CCM. AES67 is configured to LAN 2.
		DHCP	Enabled/Disabled
		IP Address	
		Subnet mask	
		MAC	MAC address

13.7 Administration

Level 1	Level 2	Level 3	Level 4
Administration	Beltpacks	Over The Air	Start OTA
		BP Role List Sorting	Sort by Role Number /Alphabetical Alkaline /NiMh (for use when not using the supplied Li-ion type batteries)
		Battery Type	View current version
	Software	Current	Use this to update the Base Station using a USB stick.
		Update	Press rotary 4 to reboot now
	Reset	Reboot	Reset Base. When you reset the Base here, as well as system setup details (channels and roles), network details (IP addresses) are also reset. This is not the case when resetting the Base in the CCM. After resetting you must Add transceivers again.
		Reset to Default	Press rotary 4 to reset CCM password to the default setting.
		Reset CCM Password	Insert USB
	Support Info	Generate	Insert USB
	Settings	Save	
		Restore	

Level 1	Level 2	Level 3	Level 4
	CCM Access	Username	
		Default password	
		Hw Info	
		Hw Version	
	Hardware	BOM number	
		PCB number	
		Serial number	
		Product number	

14 Specifications

This section contains a list of technical specifications for the Station. It contains the following subsections:

14.1 FreeSpeak Edge Base Station	129
14.2 Capacity	132
14.3 Frequency Response - Station to Beltpack	132
14.4 Front Panel Headset Microphone	133
14.5 Network Specifications	134

14.1 FreeSpeak Edge Base Station

Specification	Value
Front panel headset	(1) 4-pin XLR-M <ul style="list-style-type: none"> • auto headset detect
USB connector	USB type A
Front panel buttons	<ul style="list-style-type: none"> • MIC: Microphone ON/OFF button • Menu button
Front panel rotary encoders	(5) Digital rotary encoders Operating level: 0dBu to + 18dBu, nominal, or -18dBu to +8dBu
Front panel touch screens	(2) 480 x 128 color TFT LED Touch Screen displays
Status LEDs	(2) Power supply status LEDs, (1) Base Station status LED, (1) Volume level three color control LED array
The Base Station has two power supplies which can be used together to provide power redundancy.	
Power	<ol style="list-style-type: none"> 1. AC Mains input: 100-240V AC, 50-60Hz, 160W Max, IEC60320 C14 inlet. 2. DC Low Voltage Input: 12V DC +/- 5%, 12A External (1) AC/DC Power Supply with sleeve locking connector (PSU-EXT-001 supplied): Input: 100-240V AC, 50-60Hz, 2.2A Max, Output: 12V DC +/- 5%, 12.5A, IEC60320 C14 inlet

Specification	Value
GPIO port	<p>(2) DB9F</p> <ul style="list-style-type: none"> Relay contact type: SPDT Relay quantity: 4 Relay contact voltage rating: 30 VDC Relay contact current rating: 1 A Input type: Opto-Isolated Input quantity: 2 Input voltage range: 4 - 30 volts DC or AC Input current: $\geq 1.2\text{mA}$ required
2-wire I/O	<p>(4) XLR-3F</p> <ul style="list-style-type: none"> 2-wire I/O: Selectable RTS or Clear-Com mode, software controlled null, null depth $>60\text{dB}$ at 1kHz 2-wire Power On/Off: A/B, C/D paired- software controlled 2-wire Output Voltage: 25 – 28 VDC, 560 mA per pair (A/B or C/D) 2-wire Impedance: $>10\text{k}\Omega$ 2-wire Operating Levels: -18dBu nominal (Clear-Com Mode), -12dBu nominal (RTS Mode), Headroom 18dB 2-wire Frequency Response: 200 to 12kHz. $\pm 3\text{dB}$ 2-wire Total Harmonic Distortion (THD): $< 0.1\%$ THD at 1 kHz
4-wire I/O	<p>(8) RJ45</p> <ul style="list-style-type: none"> 4-wire I/O: Output Impedance $>10\text{k}\Omega$, Input Impedance $200\Omega + 10\%$, transformer isolated balanced input and output. 4-wire Operating Levels: 0dBu Nominal, 18dBu headroom Port 8 used for stage announce and program feed

Specification	Value
Stage announce and program feed	<p>(1) Cable assembly CAB-RJ45-PGM-SA provided.</p> <p>Connects to RJ45 (port 8 on the Station)</p> <ul style="list-style-type: none"> • XLR-3F labeled PGM input • XLR-3M labeled SA output <p>Program Input level control via rotary encoder.</p>
DECT Sync IN/OUT	(2) RJ45 sync input and output
E1 Splitter/transceiver ports	<p>(2) RJ45</p> <p>(2) Fiber, to be used with SFP module</p> <p>Note: only 2 splitter ports active at any one time and these must both be EITHER RJ45 OR Fiber.</p>
LAN connectors	<p>(2) RJ45</p> <p>(2) Fiber, to be used with SFP module</p> <p>All 4 LAN ports are fully user configurable, to be split between management, AES67 and Dante traffic.</p>
Dimensions	1 RU: h.44 x w.483 x d. 355 mm (1.75 x 19 x 14 inches)
Weight	Approx 3.3 kg (7.25 lb)

14.2 Capacity

Specification	Value
Number of transceivers supported by Base Station	16 in total <ul style="list-style-type: none"> • 6 IP transceivers (FreeSpeak II or FreeSpeak Edge) • E1 transceivers, 2 connected directly to the Base Station, 10 via a splitter
Number of FreeSpeak beltpacks per Base Station	Up to 16 beltpacks in total, made up of either FreeSpeak II or FreeSpeak Edge beltpacks
Audio Channels	Max 100
Groups	Max 100
GPIOs	2 x GPI, 4 x GPO

14.3 Frequency Response - Station to Beltpack

Specification	Value
Base Station to beltpack frequency response	<ul style="list-style-type: none"> • FreeSpeak II beltpacks: 200 Hz - 7.5 kHz • FreeSpeak Edge beltpacks: 200 Hz - 12 kHz

14.4 Front Panel Headset Microphone

Specification	Value
Headset microphone input	<ul style="list-style-type: none"> • Input type: Dynamic /Electret - Selectable • Frequency response: headset mic - Partyline: 200Hz – 12 kHz + 3dBu • Frequency response: headset mic - Line Out: 200Hz – 20 kHz + 3dBu • Mic limiter threshold: -50dBu \pm3dB • Mic limiter range: \geq 20dB • Max input level: -25dBu • Input level: -60dBu nominal; -25dBu MAX • Headset mic voltage 5V (Electret selectable)
Headset microphone output	<ul style="list-style-type: none"> • Load Impedance: $> 32\Omega$ • Output Impedance: 33Ω • Max Output Level before Distortion: >13 dBu • Total Harmonic Distortion (THD): $< 0.1\%$ THD at 1 kHz • Headset Mic - Partyline: -78 dBu (Clear-Com mode) • Headset Mic - Line Out: -60 dBu • Frequency Response: Partyline - Headset Out: 200Hz – 10 kHz + 3dBu

14.5 Network Specifications

Specification	Value
AoIP Interface Protocols	<ul style="list-style-type: none"> • RTSP/SAP • AES67 • Dante
Audio Sampling	24-bit Linear 48KHz
IP Addressing	<ul style="list-style-type: none"> • Static • DHCP
Network Compatibility	Layer 2 and Layer 3 only
Quality of Service	DiffServ RFC2474
IGMP	On (AoIP)
Multicast	On (AoIP)
Network Timing	PTPv2 (AoIP)/PTPv1 (Dante)
Perduplex Connection	<ul style="list-style-type: none"> • 1 x FS II IPT bandwidth usage: ~7 Mbps • 1 x FS Edge IPT: ~9.6 Mbps
Network Protocols	<ul style="list-style-type: none"> • Ethernet IPv4 Unicast Audio and Control • mDNS-Multicast Device Discovery
Network Ports	<ul style="list-style-type: none"> • Unicast: • Port 80 TCP - Web Interface, System Management, Expansion • Port 443 for HTTPS • Port 6001 UDP - AES67 Data • Port 15000 - 15256 UDP - AES67 Audio
	Multicast: Port 5353 UDP - mDNS, Names, Discovery, Linking, Expansion, Dante (through various ports)

Specification	Value	
Network Jitter Tolerance	< 1µs required for RF Syncing of Transceivers	
Recommended Ethernet Switches	<ul style="list-style-type: none">• Managed Ethernet Switch - Layer 3• 1000 Base - T ports for endpoints• 1000 Base IP Trunks between switches• QoS Configuration• Energy Efficient Ethernet bypass option• IGMP Snooping bypass option	
QoS Tags for AoIP		
Clock	IEEE 1588-2008 Announce, Synch, Follow_Up, Delay_Req, Delay_Resp, Pdelay_Req, Pdelay_Resp and Pdelay_Resp_Follow_Up packets	EF (46) (Expedited Forwarding)
Media	RTP and RTCP media stream data	AF41 (34) (Assured Forwarding)
Best Effort	IEEE 1588-2008 signaling and management messages. Discovery and connection management messages.	DF (0) (Default Forwarding)
QoS Tags for Dante		
High	Time Critical PTP Events	CS7 (56)
Medium	Audio, PTP	EF (46) (Expedited Forwarding)
Low	Reserved	CS1 (8)
None	Other Traffic	Best Effort (0)

15 Pinouts

This chapter describes the pinouts of the connectors on the FreeSpeak Edge Base Station. It contains the following sections:

15.1 GPIO pinouts	137
15.2 2-Wire Pinouts	138
15.3 4-Wire Pinouts	139
15.4 DECT Sync	139

15.1 GPIO pinouts


GPIO 1 (Relay 1 &2)



1. Relay 1 Common
2. Relay 1 Normally Closed
3. Relay 1 Normally open
6. Relay 2 Common
7. Relay 2 Normally Closed
8. Relay 2 Normally Open
4. Input A1
5. Input B1
9. 12V

Shield 0V

GPIO 2 (Relay 3 & 4)

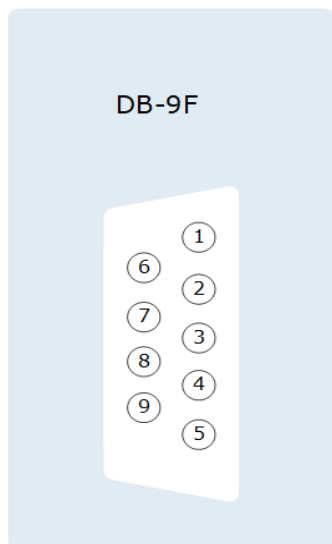

1. Relay 3 Common
2. Relay 3 Normally Closed
3. Relay 3 Normally open
6. Relay 4 Common
7. Relay 4 Normally Closed
8. Relay 4 Normally Open
4. Input A2
5. Input B2
9. 12V

Shield 0V

Suggested wiring for a footswitch


From	To	
GPIO-DB9 pin 4 (input A1)	GPIO-DB9 pin 9 (+12V)	link (jumper) wire
GPIO-DB9 pin 5 (input B1)	footswitch	
GPIO-DB9 Shell (0V)	footswitch	

15.2 2-Wire Pinouts

15.2.1 Clear-Com 2-Wire XLR Pinout

1. Ground
2. DC power (30V)
3. Duplex audio


XLR3F

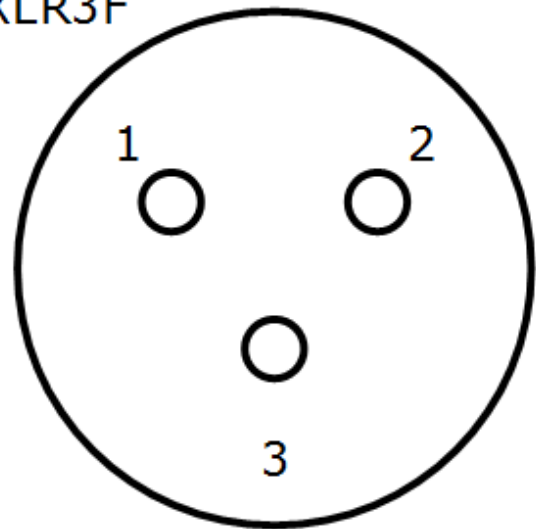

15.2.2 RTS 2-Wire XLR pinout

1. Ground
2. DC power (30V)
Duplex audio 1
3. Duplex audio 2

XLR3F

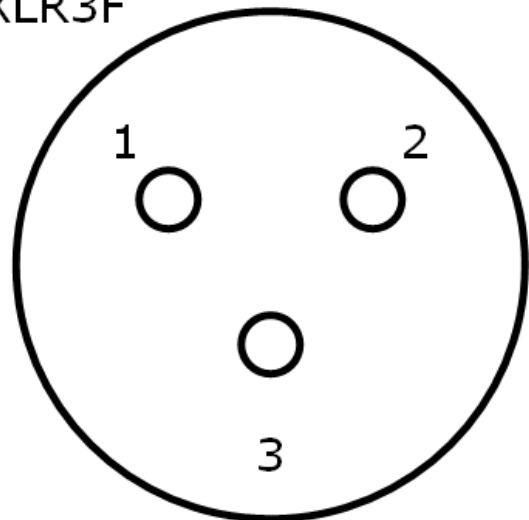

15.3 4-Wire Pinouts

Pin	4-wire	4-wire-X (default)
1	Data in +	Data out +
2	Data in -	Data out -
3	Audio in +	Audio out +
4	Audio out +	Audio in +
5	Audio out -	Audio in -
6	Audio in -	Audio out -
7	Data out +	Data in +
8	Data out -	Data in -

15.4 DECT Sync

Pin	Sync In	Sync Out
Pin 1	DECTSYNC IN +	DECTSYNC OUT +
Pin 2	DECTSYNC IN -	DECTSYNC OUT -
Pin 3	8 KHZ IN +	8 KHZ OUT +
Pin 6	8 KHZ IN -	8 KHZ OUT -

Caution: Shielded Cable Requirement

Shielded Cable is required for ALL FreeSpeak GPIO Port connectivity. CAT 5e Shielded Cable must be used to assure compliance with domestic and international emissions standards. Customers, Installers and or qualified Personnel failing to use shielded cables may cause radio interference in which case the user may be required to take adequate measures.

16 Regulatory Compliance (Regulatory Model: 1410)

Applicant Name: Clear-Com LLC

Applicant Address: 1301 Marina Village Pkwy, Suite 105, Alameda CA 94501, United States

Manufacturer Name: Clear-Com LLC

Manufacturer Address: 1301 Marina Village Pkwy, Suite 105, Alameda CA 94501, United States

Country of Origin: USA

Brand: Clear-Com

Caution: All products are compliant with regulatory requirements detailed in this document when the user follows all installation instructions and operating conditions per Clear-Com specifications

Caution: Use of accessories and peripherals other than those recommended by Clear-Com may void the product's compliance as well as the user's authority to operate the equipment.

16.1 FCC Notice

This device complies with Part 15 of the FCC rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) This device must accept any interference received, including interference that may cause undesired operation.

NOTE: This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to Part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communication. Operation of this equipment in a residential area is likely to cause harmful interference, in which case the user will be required to correct the interference at his own expense.

Changes or modifications not expressly approved by Clear-Com, LLC, an HM Electronics, Inc. company could void the user's authority to operate this equipment.

16.2 FCC/IC/EC RF Exposure Warning

- This product complies with FCC/IC/EC radiation exposure limits set forth for an uncontrolled environment.
- Produits Clear-Com sont conformes aux limites IC d'exposition aux rayonnements définies pour un environnement non contrôlé.
- This product may not be co-located or operated in conjunction with any other transceiver or transmitter.
- Ce produit ne peut pas être co-localisé ou utilisé en conjonction avec un autre émetteur-récepteur ou émetteur.
- To comply with FCC/IC/EC RF exposure requirements, the Antenna/Transceiver unit must be installed and operated at least 20 cm (8 inches) from any person.
- Produits Clear-Com doivent être installés et utilisés avec distance minimum de 20cm entre le radiateur et votre corps.

16.3 Industry Canada Compliance Statement

This Class[A] digital device complies with Canadian ICES-003.

Avis de conformité à la réglementation d'Industrie Canada

Cet appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence. L'exploitation est soumise aux deux conditions suivantes:

(1) cet appareil ne doit pas provoquer d'interférence, et

(2) cet appareil doit accepter toute interférence radioélectrique subie, même si l'interférence est susceptible d'en compromettre le fonctionnement.

Cet émetteur exempt de licence est équipé d'une antenne intégrée. Cet émetteur exempt de licence n'est pas autorisé à fonctionner avec une autre antenne.

Cet appareil numérique de la class[*] est conforme à la norme NMB-003 du Canada.

16.4 Korean Notice

A급 기기 (업무용 방송통신기자재)

이 기기는 업무용(A급)으로 전자파적합기기로서 판매자 또는 사용자는 이 점을 주의하시기 바라며, 가정외의 지역에서 사용하는 것을 목적으로 합니다.

16.5 European Union (CE mark)

The CE marking indicates compliance with the following directives and standards, whenever applicable to the product in question.

Directives:

- Radio Equipment Directive 2014/53/EU
- Electromagnetic Compatibility Directive 2014/30/EU
- Low Voltage Directive 2014/35/EU
- RoHS Directive 2011/65/EU, 2015/863/EU

Standards:

- EN55032
- EN55035
- IEC/EN62368-1
- EN300328
- EN301489
- EN50581



16.6 United Kingdom (UKCA Mark)

The UKCA (UK Conformity Assessed) marking is a new UK product marking that will be used for goods being placed on the market in Great Britain (England, Wales and Scotland). The UKCA marking alone cannot be used for goods placed on the Northern Ireland market, which require the CE marking or UK(NI) marking.



Warning:

This is a Class A product. In a domestic environment this product may cause radio interference in which case the user may be required to take adequate measures.

16.7 Electrical and Electronic Equipment (WEEE) Waste

The European Union (EU) WEEE Directive (2012/19/EU) places an obligation on producers (manufacturers, distributors and/or retailers) to take-back electronic products at the end of their useful life. The WEEE Directive covers most Clear-Com products being sold into the EU as of August 13, 2005. Manufacturers, distributors and retailers are obliged to finance the costs of recovery from municipal collection points, reuse, and recycling of specified percentages per the WEEE requirements.

Instructions for Disposal of WEEE by Users in the European Union

The symbol shown below is on the product or on its packaging which indicates that this product was put on the market after August 13, 2005 and must not be disposed of with other waste. Instead, it is the user's responsibility to dispose of the user's waste equipment by handing it over to a designated collection point for the recycling of WEEE. The separate collection and recycling of waste equipment at the time of disposal will help to conserve natural resources and ensure that it is recycled in a manner that protects human health and the environment. For more information about where you can drop off your waste equipment for recycling, please contact your local authority, your household waste disposal service or the seller from whom you purchased the product.

